




## User's Manual

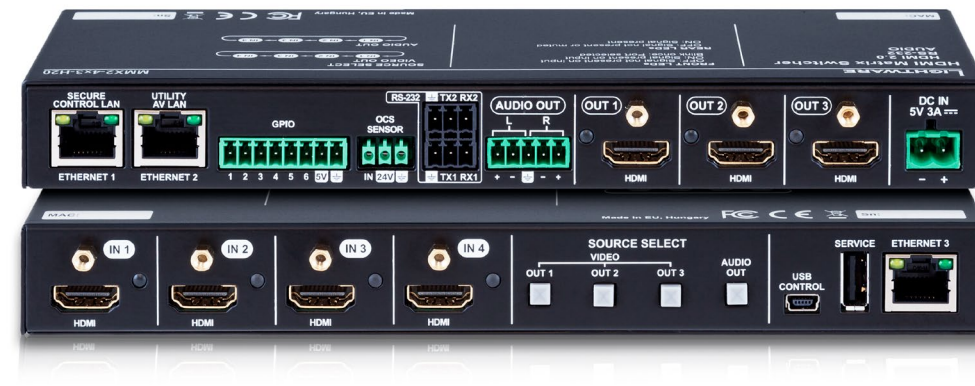

**MMX2-4x3-H20**  
**MMX2-4x1-H20**

Multimedia Matrix Switcher

## Important Safety Instructions


### Class II apparatus construction.

The equipment should be operated only from the power source indicated on the product.

To disconnect the equipment safely from power, remove the power cord from the rear of the equipment or from the power source. The MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable.

There are no user-serviceable parts inside of the unit. Removal of the cover will expose dangerous voltages. To avoid personal injury, do not remove the cover. Do not operate the unit without the cover installed.

The appliance must be safely connected to multimedia systems. Follow instructions described in this manual.

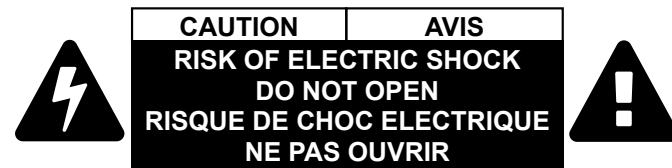

### Ventilation


For the correct ventilation and to avoid overheating, ensure enough free space around the appliance. Do not cover the appliance, leave the ventilation holes free and never block or bypass the ventilators (if there are any).

### WARNING

To prevent injury, the apparatus is recommended to be securely attach to the floor/wall, or mounted in accordance with the installation instructions. The apparatus shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the apparatus. No naked flame sources, such as lit candles, should be placed on the apparatus.

## Waste Electrical & Electronic Equipment WEEE

This marking shown on the product or its literature indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product or their local government office for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

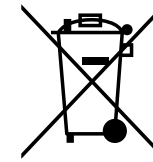

### CAUTION

The device contains a BR1632A button battery, which supplies power to the clock when the device is not powered on. Danger of explosion if battery is replaced incorrectly. Replace only with the same or equivalent type.

### WARNING

Do not ingest the battery, Chemical Burn Hazard. This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours, and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

## Common Safety Symbols

Symbol	Description
	Direct current
	Alternating current
	Double insulation
	Caution, possibility of electric shock
	Caution

## Symbol Legend

The following symbols and markings are used in the document:

**WARNING!** Safety-related information that is highly recommended to read and keep in every case!

**ATTENTION!** Useful information for performing a successful procedure; it is recommended to read.


**DIFFERENCE:** Feature or function that is available with a specific firmware/hardware version or product variant.


**INFO:** A notice, which may contain additional information. Procedure can be successful without reading it.


**DEFINITION:** The short description of a feature or a function.


**TIPS AND TRICKS:** Ideas that you may have not known yet, but can be useful.

## Navigation Buttons

 Go back to the previous page. If you clicked on a link previously, you can go back to the source page by pressing the button.

 Navigate to the Table of Contents.

 Step back one page.

 Step forward to the next page.

## Document Information

All presented functions refer to the indicated products. The descriptions have been made while testing these functions in accordance with the indicated Hardware/Firmware/Software environment:

Item	Version
Lightware Device Controller (LDC) software	2.10.0b1
Lightware Device Updater V2 (LDU2) software	2.29.0b3
Firmware package	2.11.0b3
Hardware	1.0

Document revision: **v1.13**

Release date: 24-07-2024


Editor: Nikolett Keindl

## About Printing

Lightware Visual Engineering supports green technologies and eco-friendly mentality. Thus, this document is made for primarily digital usage. If you need to print out a few pages for any reason, follow the recommended printing settings:

- Page size: A4
- Output size: Fit to page or Match page size
- Orientation: Landscape

**TIPS AND TRICKS:** Thanks to the size of the original page, a border around the content (gray on the second picture below) makes it possible to organize the pages better. After punching holes in the printed pages, they can be easily placed into a ring folder.

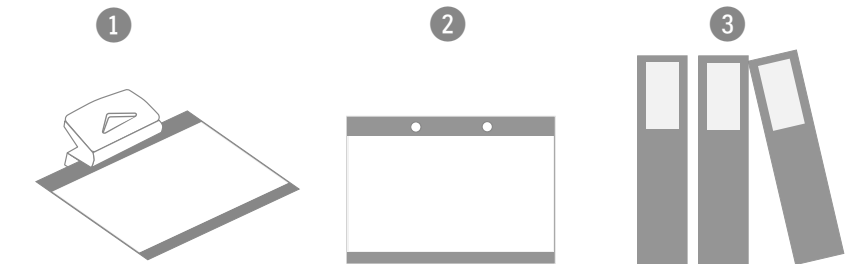

## Hashtag (#) Keywords in the Document

This user's manual contains keywords with hashtags (#) to help you find the relevant information as quick as possible.

The format of the keywords is the following:

#<keyword>

The usage of the keywords: use the **Search** function (Ctrl+F / Cmd+F) of your PDF reader application, type the # (hashtag) character and the wished keyword.

The *#new* special keyword indicates a new feature/function that has just appeared in the latest firmware or software version.

### Example

*#dhcp*

This keyword is placed at the DHCP setting command in the LW3 Programmer's reference section.

# Table of Contents

<b>1. INTRODUCTION</b> .....	<b>7</b>	4.6.3. Downloading/Uploading a Configuration .....	23	<b>5.11. CONTROL MENU</b> .....	<b>47</b>
<b>1.1. DESCRIPTION</b> .....	<b>8</b>	4.6.4. Status Board .....	23	5.11.1. Ethernet.....	47
<b>1.2. BOX CONTENTS</b> .....	<b>8</b>	4.6.5. Touch Panel Support.....	23	5.11.2. GPIO .....	48
<b>1.3. FEATURES OF THE DEVICE</b> .....	<b>9</b>	<b>4.7. BASIC NETWORK SECURITY</b> .....	<b>24</b>	5.11.3. OCS - Occupancy Sensor .....	48
<b>1.4. MODEL COMPARISON</b> .....	<b>9</b>	4.7.1. Disable Ethernet Ports .....	24	5.11.4. RS-232.....	49
<b>1.5. TYPICAL APPLICATION</b> .....	<b>10</b>	4.7.2. HTTP/HTTPS.....	24	<b>5.12. SETTINGS MENU</b> .....	<b>49</b>
<b>2. PRODUCT OVERVIEW</b> .....	<b>11</b>	4.7.3. Encryption (HTTPS, WSS).....	25	5.12.1. Status.....	49
<b>2.1. FRONT VIEW</b> .....	<b>12</b>	<b>4.8. 802.1x AUTHENTICATION</b> .....	<b>26</b>	5.12.2. Network.....	50
<b>2.2. REAR VIEW</b> .....	<b>12</b>	<b>4.9. WEBSOCKET SERVICE (WS, WSS)</b> .....	<b>27</b>	5.12.3. Service .....	52
<b>2.3. BUTTON FUNCTIONALITY</b> .....	<b>13</b>	<b>4.10. BULK DEVICE MANAGEMENT</b> .....	<b>27</b>	5.12.4. System .....	54
2.3.1. Video Source Selection .....	13	4.10.1. Network Settings.....	27	<b>5.13. ADVANCED VIEW WINDOW</b> .....	<b>55</b>
2.3.2. Enable DHCP IP Address .....	13	4.10.2. Device Configuration.....	27	<b>6. LIGHTWARE REST API REFERENCE</b> .....	<b>56</b>
2.3.3. Reset to Factory Default Settings.....	13	<b>4.11. SERIAL INTERFACE</b> .....	<b>28</b>	<b>6.1. OVERVIEW</b> .....	<b>57</b>
2.3.4. Control Lock.....	13	4.11.1. Serial Port Diagram.....	28	<b>6.2. INSTRUCTIONS FOR THE TERMINAL APPLICATION USAGE</b> .....	<b>57</b>
<b>2.4. STATUS LEDs</b> .....	<b>13</b>	<b>4.12. GPIO INTERFACE</b> .....	<b>29</b>	6.2.1. Web Browser Plugins .....	57
2.4.1. Video LEDs.....	13	<b>4.13. OCS INTERFACE</b> .....	<b>29</b>	6.2.2. Terminal Application .....	57
2.4.2. Ethernet Status LEDs .....	13	<b>4.14. FURTHER BUILT-IN FEATURES</b> .....	<b>30</b>	<b>6.3. PROTOCOL RULES</b> .....	<b>59</b>
<b>3. INSTALLATION</b> .....	<b>14</b>	4.14.1. Device Cloning – Configuration Backup and Restore.....	30	6.3.1. Command Structure Example .....	59
<b>3.1. MOUNTING OPTIONS</b> .....	<b>15</b>	<b>5. SOFTWARE CONTROL - LIGHTWARE DEVICE CONTROLLER</b> .....	<b>31</b>	6.3.2. General Rules.....	59
3.1.1. 1U High Rack Shelf.....	15	<b>5.1. SOFTWARE CONTROL MODES</b> .....	<b>32</b>	6.3.3. Legend for the Control Commands.....	59
3.1.2. Mounting with UD Kit-double.....	15	<b>5.2. USING THE BUILT-IN WEB</b> .....	<b>33</b>	6.3.4. Lightware REST API vs. LW3 Protocol .....	59
<b>3.2. ELECTRICAL CONNECTIONS</b> .....	<b>16</b>	<b>5.3. INSTALL AND UPDATE</b> .....	<b>34</b>	6.3.5. Method Types .....	60
3.2.1. HDMI Input and Output Ports .....	16	<b>5.4. RUNNING THE LDC</b> .....	<b>34</b>	6.3.6. Supported Commands.....	60
3.2.2. USB Connectors .....	16	<b>5.5. ESTABLISHING THE CONNECTION</b> .....	<b>35</b>	6.3.7. Not Supported Commands.....	60
3.2.3. RS-232 Connector .....	16	<b>5.6. BULK DEVICE MANAGEMENT</b> .....	<b>36</b>	6.3.8. Status Codes, Error Messages .....	60
3.2.4. Analog Stereo Audio .....	16	5.6.1. Network Settings.....	36	6.3.9. Polling .....	60
3.2.5. Secure Control LAN, Utility AV LAN, Configurable Ethernet Port ..	16	5.6.2. Device Configuration.....	37	<b>6.4. REST API SECURITY</b> .....	<b>61</b>
3.2.6. OCS Connector .....	17	<b>5.7. CROSSPOINTS</b> .....	<b>38</b>	6.4.1. Authentication .....	61
3.2.7. GPIO - General Purpose Input/Output Ports.....	17	5.7.1. Port Tiles.....	39	6.4.2. Encryption (HTTPS).....	61
3.2.8. DC Input Connector.....	17	<b>5.8. PORT PROPERTIES WINDOW</b> .....	<b>40</b>	<b>6.5. SYSTEM COMMANDS</b> .....	<b>62</b>
<b>3.3. CONNECTING STEPS</b> .....	<b>18</b>	5.8.1. HDMI Video Input .....	40	6.5.1. Setting the Device Label .....	62
<b>4. DEVICE CONCEPT</b> .....	<b>19</b>	5.8.2. HDMI Video Output .....	41	6.5.2. Resetting the Device.....	62
<b>4.1. UNIVERSAL SWITCHER CONCEPT</b> .....	<b>20</b>	5.8.3. Embedded Audio Input.....	42	6.5.3. Restoring the Factory Default Settings .....	62
<b>4.2. VIDEO INTERFACE</b> .....	<b>20</b>	5.8.4. Analog Audio Output.....	43	6.5.4. Querying the Firmware Package Version.....	62
4.2.1. MMX2-4x1-H20 and MMX2-4x3-H20.....	20	5.8.5. Frame Detector .....	43	6.5.5. Control Lock.....	62
<b>4.3. THE AUTOSELECT FEATURE</b> .....	<b>20</b>	<b>5.9. CEC TOOL</b> .....	<b>44</b>	6.5.6. Setting the Current Time.....	63
<b>4.4. AUDIO INTERFACE</b> .....	<b>21</b>	<b>5.10. EDID MANAGEMENT</b> .....	<b>45</b>	6.5.7. Identifying the Device.....	63
<b>4.5. ETHERNET INTERFACE</b> .....	<b>21</b>	5.10.1. EDID Operations .....	45	6.5.8. Toggling the Dark Mode Setting.....	63
<b>4.6. LIGHTWARE ADVANCED ROOM AUTOMATION (LARA)</b> .....	<b>22</b>	5.10.2. EDID Summary Window.....	46	6.5.9. Setting the Delay of the Dark Mode.....	63
4.6.1. Opening the LARA interface .....	22	5.10.3. Editing an EDID .....	46	<b>6.6. VIDEO PORT SETTINGS - GENERAL</b> .....	<b>64</b>
4.6.2. Running LARA.....	22	5.10.4. Creating an EDID - Easy EDID Creator.....	47		

6.6.1. Switching Video Input .....	64	6.9.8. Resetting the Emulated EDIDs.....	75	<b>7.3. WEBSOCKET (WS) OR SECURED WEBSOCKET (WSS) USAGE.....</b>	<b>92</b>
6.6.2. Switching an Input to All Outputs.....	64	<b>6.10. ETHERNET PORT CONFIGURATION .....</b>	<b>76</b>	<b>7.4. PROTOCOL RULES.....</b>	<b>93</b>
6.6.3. Locking the Video Port.....	64	6.10.1. Setting the DHCP State.....	76	7.4.1. LW3 Tree Structure and Command Structure (examples).....	93
6.6.4. Muting the Video Port .....	64	6.10.2. Changing the IP Address (Static).....	76	7.4.2. General Rules.....	93
6.6.5. Setting the Autoselect Policy.....	65	6.10.3. Changing the Subnet Mask (Static) .....	76	7.4.3. Legend for the Control Commands.....	93
6.6.6. Changing the Autoselect-Included Input Ports.....	65	6.10.4. Changing the Gateway Address (Static).....	77	7.4.4. Command Types .....	94
6.6.7. Changing the Input Port Priority .....	65	6.10.5. Applying Network Settings .....	77	7.4.5. Prefix Summary .....	94
6.6.8. Querying the Connected Source.....	65	6.10.6. Setting the Hostname .....	77	7.4.6. Error Messages .....	94
6.6.9. Querying the Connected Destinations .....	65	<b>6.11. NETWORK SECURITY .....</b>	<b>78</b>	7.4.7. Escaping .....	94
6.6.10. Querying the Input Switching Capability.....	66	6.11.1. Enabling/Disabling Ethernet Port.....	78	7.4.8. Signature .....	95
6.6.11. Querying the Video Signal Presence.....	66	6.11.2. Querying Network Service Port Number.....	78	7.4.9. Subscription.....	95
6.6.12. HDCP Setting (Input Port).....	66	6.11.3. Enabling/Disabling Network Service Port.....	78	7.4.10. Notifications about the Changes of the Properties .....	95
6.6.13. HdcpMode .....	67	6.11.4. Querying the Username for Authentication .....	78	<b>7.5. SYSTEM COMMANDS.....</b>	<b>96</b>
6.6.14. Querying Embedded Audio Presence .....	67	6.11.5. Setting Password for Authentication.....	79	7.5.1. Setting the Device Label .....	96
6.6.15. Muting Embedded Audio .....	67	6.11.6. Enabling Authentication.....	79	7.5.2. Resetting the Device.....	96
6.6.16. Setting Output Signal Type .....	67	<b>6.12. SERIAL PORT CONFIGURATION .....</b>	<b>80</b>	7.5.3. Restoring the Factory Default Settings .....	96
6.6.17. Turning on Output 5V .....	68	6.12.1. BAUD Rate Setting.....	80	7.5.4. Querying the Firmware Package Version.....	96
<b>6.7. CEC COMMAND SENDING .....</b>	<b>69</b>	6.12.2. Stop Bits Setting.....	80	7.5.5. Control Lock.....	96
6.7.1. Simple CEC Code Sending .....	69	6.12.3. Querying Data Bits.....	80	7.5.6. Setting the Current Time .....	96
6.7.2. Remote Control Code Sending .....	69	6.12.4. Parity Setting .....	80	7.5.7. Identifying the Device.....	97
<b>6.8. AUDIO PORT SETTINGS.....</b>	<b>70</b>	6.12.5. Querying the Serial over IP Port Number .....	81	7.5.8. Toggling the Dark Mode Setting .....	97
6.8.1. Switching Audio Input .....	70	6.12.6. Enabling the Serial over IP Port.....	81	7.5.9. Setting the Delay of the Dark Mode Setting.....	97
6.8.2. Querying the Connected Source.....	70	<b>6.13. SERIAL PORT MESSAGING .....</b>	<b>81</b>	<b>7.6. VIDEO PORT SETTINGS - GENERAL.....</b>	<b>97</b>
6.8.3. Querying the Connected Destinations .....	70	6.13.1. Sending a Message via RS-232.....	81	7.6.1. Switching Video Input .....	97
6.8.4. Setting Autoselect Operation Mode.....	70	<b>6.14. GPIO PORT CONFIGURATION .....</b>	<b>82</b>	7.6.2. Switching an Input to All Outputs.....	97
6.8.5. Setting the Followed Video Port to Autoselect.....	71	6.14.1. Setting the Direction of a GPIO Pin .....	82	7.6.3. Locking the Video Port.....	97
6.8.6. Locking the Audio Port.....	71	6.14.2. Setting the Output Level of a GPIO Pin .....	82	7.6.4. Muting the Video Port .....	98
6.8.7. Muting the Audio Port 1 .....	71	6.14.3. Setting the Output Level for a Specified Time.....	82	7.6.5. Setting the Autoselect Policy.....	98
6.8.8. Muting the Audio Port 2.....	72	6.14.4. Toggling the Level of a GPIO Pin.....	82	7.6.6. Changing the Autoselect Included Input Ports.....	98
6.8.9. Querying the Audio Signal Presence.....	72	<b>6.15. OCS PORT CONFIGURATION.....</b>	<b>83</b>	7.6.7. Changing the Input Port Priority .....	98
6.8.10. Analog Audio Output Volume (dB) Setting .....	72	6.15.1. Querying the Input Level of an OCS Pin .....	83	7.6.8. Querying the Connected Source.....	98
6.8.11. Analog Audio Output Volume Percent Setting .....	72	6.15.2. Setting the Sensor Type.....	83	7.6.9. Querying the Input Switching Capability .....	99
6.8.12. Setting the Balance .....	73	6.15.3. Querying the Reported OCS State.....	83	7.6.10. Querying the Connected Destinations .....	99
6.8.13. Analog Audio Output Level Setting by Steps (dB).....	73	<b>6.16. UPDATING THE DEVICE VIA REST API.....</b>	<b>84</b>	7.6.11. Querying the Video Signal Presence .....	99
6.8.14. Analog Audio Output Level Setting by Steps in Percent .....	73	6.16.1. Querying the Update REST API Version .....	84	7.6.12. HDCP Setting (Input Port).....	99
6.8.15. Analog Audio Output Balance Setting by Steps .....	73	6.16.2. The Updating Process.....	84	7.6.13. HdcpMode .....	99
<b>6.9. EDID MANAGEMENT .....</b>	<b>74</b>	6.16.3. Uploading the Package.....	85	7.6.14. OutputSignalType .....	100
6.9.1. Querying the Emulated EDIDs.....	74	6.16.4. Configuration Parameters – Keep the Current Settings .....	85	7.6.15. EmbeddedAudioPresent.....	100
6.9.2. Querying the Validity of a Dynamic EDID .....	74	6.16.5. Executing the Update .....	86	7.6.16. EmbeddedAudioMute .....	100
6.9.3. Query the Preferred Resolution of a User EDID .....	74	6.16.6. Querying the State of the Updating Process .....	86	7.6.17. Output5VMode .....	100
6.9.4. Emulating an EDID to an Input Port.....	74	<b>6.17. LIGHTWARE REST API QUICK SUMMARY.....</b>	<b>87</b>	7.6.18. HDCP Capability (Output Port).....	100
6.9.5. Emulating an EDID to All Input Ports.....	75	<b>7. LW3 PROGRAMMERS' REFERENCE .....</b>	<b>91</b>	7.6.19. HDCP Setting (Output Port).....	101
6.9.6. Copying an EDID to User Memory .....	75	<b>7.1. OVERVIEW.....</b>	<b>92</b>	<b>7.7. CEC COMMAND SENDING .....</b>	<b>102</b>
6.9.7. Deleting an EDID from User Memory .....	75	<b>7.2. INSTRUCTIONS FOR THE TERMINAL APPLICATION USAGE.....</b>	<b>92</b>	7.7.1. Simple CEC Code Sending .....	102

7.7.2. Remote Control Code Sending .....	102	7.12.2. Stop Bits Setting .....	112	10.1.1. Understanding the EDID .....	130
<b>7.8. AUDIO PORT SETTINGS</b> .....	<b>104</b>	7.12.3. Querying Data Bits .....	112	10.1.2. Advanced EDID Management .....	130
7.8.1. Switching Audio Input .....	104	7.12.4. Parity Setting .....	112	<b>10.2. HDCP MANAGEMENT</b> .....	<b>131</b>
7.8.2. Querying the Connected Source .....	104	<b>7.13. SENDING A MESSAGE VIA RS-232</b> .....	<b>112</b>	10.2.1. Protected and Unprotected Content .....	131
7.8.3. Querying the Connected Destinations .....	104	<b>7.14. GPIO PORT CONFIGURATION</b> .....	<b>113</b>	10.2.2. Disable Unnecessary Encryption .....	131
7.8.4. Setting Autoselect Operation Mode .....	104	7.14.1. Querying the Direction of a GPIO Pin .....	113	10.2.3. HDCP v2.2 .....	132
7.8.5. Setting the Followed Video Port to Autoselect .....	104	7.14.2. Setting the Direction of a GPIO Pin .....	113	<b>10.3. PIXEL ACCURATE RECLOCKING</b> .....	<b>133</b>
7.8.6. Locking the Audio Port .....	105	7.14.3. Querying the Output Level of a GPIO Pin .....	113	<b>11. APPENDIX</b> .....	<b>134</b>
7.8.7. Muting the Audio Port 1 .....	105	7.14.4. Setting the Output Level of a GPIO Pin .....	113	<b>11.1. SPECIFICATIONS</b> .....	<b>135</b>
7.8.8. Muting the Audio Port 2 .....	105	7.14.5. Setting the Output Level for a Specified Time .....	113	<b>11.2. PORT NUMBERING</b> .....	<b>137</b>
7.8.9. Querying the Audio Signal Presence .....	105	7.14.6. Toggling the Level of a GPIO Pin .....	113	<b>11.3. APPLIED PORTS (NETWORK SETTINGS)</b> .....	<b>137</b>
7.8.10. Analog Audio Output Volume (dB) Setting .....	106	<b>7.15. OCS PORT CONFIGURATION</b> .....	<b>114</b>	<b>11.4. FACTORY EDID LIST</b> .....	<b>138</b>
7.8.11. Analog Audio Output Volume Percent Setting .....	106	7.15.1. Querying the Input Level of an OCS Pin .....	114	<b>11.5. CABLE WIRING GUIDE</b> .....	<b>140</b>
7.8.12. Setting the Balance .....	106	7.15.2. Setting the Sensor Type .....	114	11.5.1. Serial Ports .....	140
7.8.13. Analog Audio Output Level Setting by Steps (dB) .....	106	7.15.3. Querying the Reported OCS State .....	114	11.5.2. Audio Ports .....	140
7.8.14. Analog Audio Output Level Setting by Steps in Percent .....	106	<b>7.16. LW3 COMMANDS - QUICK SUMMARY</b> .....	<b>115</b>	11.5.3. OCS Sensor .....	140
7.8.15. Analog Audio Output Balance Setting by Steps .....	106	<b>8. FIRMWARE UPDATE</b> .....	<b>118</b>	<b>11.6. MECHANICAL DRAWINGS</b> .....	<b>141</b>
<b>7.9. EDID MANAGEMENT</b> .....	<b>107</b>	<b>8.1. INTRODUCTION</b> .....	<b>119</b>	<b>11.7. CONTENT OF THE BACKUP FILE</b> .....	<b>142</b>
7.9.1. Querying the Emulated EDIDs .....	107	<b>8.2. PREPARATION</b> .....	<b>119</b>	<b>11.8. FACTORY DEFAULT SETTINGS</b> .....	<b>142</b>
7.9.2. Querying the Validity of a Dynamic EDID .....	107	8.2.1. About the Firmware Package (LFP2 File) .....	119	<b>11.9. FIRMWARE RELEASE NOTES</b> .....	<b>143</b>
7.9.3. Querying the Preferred Resolution of a User EDID .....	107	8.2.2. LDU2 Installation .....	119	<b>11.10. HASHTAG KEYWORD LIST</b> .....	<b>146</b>
7.9.4. Emulating an EDID to an Input Port .....	107	<b>8.3. RUNNING THE SOFTWARE</b> .....	<b>120</b>	<b>11.11. FURTHER INFORMATION</b> .....	<b>147</b>
7.9.5. Emulating an EDID to All Input Ports .....	107	<b>8.4. UPDATING VIA GUI</b> .....	<b>121</b>		
7.9.6. Copying an EDID to User Memory .....	108	<b>8.5. COMMAND LINE INTERFACE (CLI)</b> .....	<b>123</b>		
7.9.7. Deleting an EDID from User Memory .....	108	8.5.1. How to Run .....	123		
7.9.8. Resetting the Emulated EDIDs .....	108	8.5.2. How to Use .....	123		
<b>7.10. ETHERNET PORT CONFIGURATION</b> .....	<b>109</b>	<b>8.6. CLI COMMANDS</b> .....	<b>123</b>		
7.10.1. Setting the DHCP State .....	109	8.6.1. Help .....	123		
7.10.2. Changing the IP Address (Static) .....	109	8.6.2. LDU2 Version .....	124		
7.10.3. Changing the Subnet Mask (Static) .....	109	8.6.3. Check For New LDU2 Version .....	124		
7.10.4. Changing the Gateway Address (Static) .....	109	8.6.4. Device Info .....	124		
7.10.5. Applying Network Settings .....	109	8.6.5. Update .....	125		
7.10.6. Setting the Hostname .....	110	8.6.6. Package Options .....	125		
<b>7.11. NETWORK SECURITY</b> .....	<b>110</b>	8.6.7. Complex Example .....	126		
7.11.1. Enabling/Disabling Ethernet Port .....	110	8.6.8. Exit Codes .....	126		
7.11.2. Querying the Service Port Number .....	110	<b>8.7. UPDATING VIA REST API</b> .....	<b>126</b>		
7.11.3. Enabling/Disabling Service Port .....	111	<b>8.8. IF THE UPDATE IS NOT SUCCESSFUL</b> .....	<b>126</b>		
7.11.4. Querying the Username for Authentication .....	111	<b>9. TROUBLESHOOTING</b> .....	<b>127</b>		
7.11.5. Setting a Password for Authentication .....	111	<b>9.1. USE CASES</b> .....	<b>128</b>		
7.11.6. Enabling Authentication .....	111	<b>9.2. HOW TO SPEED UP THE TROUBLESHOOTING PROCESS?</b> .....	<b>128</b>		
7.11.7. Restarting Network Services .....	111	<b>10. TECHNOLOGIES</b> .....	<b>129</b>		
<b>7.12. SERIAL PORT CONFIGURATION</b> .....	<b>112</b>	<b>10.1. EDID MANAGEMENT</b> .....	<b>130</b>		
7.12.1. BAUD Rate Setting .....	112				

# 1

## Introduction

Thank you for choosing Lightware's MMX2-series devices. In the first chapter we would like to introduce the device, highlighting the most important features in the sections listed below:


- ▶ [DESCRIPTION](#)
- ▶ [BOX CONTENTS](#)
- ▶ [FEATURES OF THE DEVICE](#)
- ▶ [MODEL COMPARISON](#)
- ▶ [TYPICAL APPLICATION](#)

### 1.1. Description

MMX2 series devices is a uniquely mini size matrix switcher. It has four HDMI inputs and HDMI output(s). Audio can be de-embedded from the HDMI signal to a balanced 5-pole Phoenix® (Euroblock) port. The volume and gain properties of the audio signal can be modified at the analog audio output port. The unit is HDMI 2.0 compatible by supporting 4K@60Hz signals at 4:4:4 subsampling and supporting HDCP v2.2.


The devices contain General Purpose Input/Output (GPIO) ports with 6+2 pins for connecting third-party devices and a built-in Occupancy Sensor (OCS) which also gains the usage of automatic functions. Further control options are served by the RS-232, IR (in and out) and Ethernet ports.

#### Model Denomination

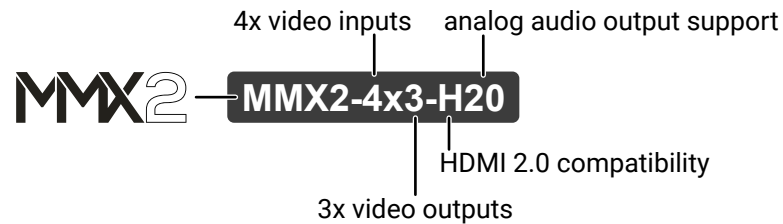

#### About the Serial Number

Lightware devices contain a label indicating the unique serial number of the product. The structure is the following:

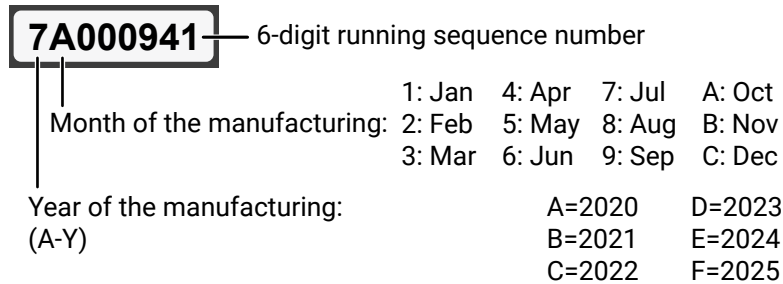

### 1.2. Box Contents

		MMX2-4x3-H20	MMX2-4x1-H20	
Supplied accessories		Switcher unit	✓	✓
		5V DC power adaptor with interchangeable plugs	✓	✓
		Phoenix combicon® 3-pole flat connector	2x	1x
		Phoenix combicon® 3-pole male connector	✓	✓
		Phoenix combicon® 5-pole connector	✓	✓
		Phoenix combicon® 8-pole connector	✓	✓
		M3x6 flat head screw for mounting (2x)	✓	✓
		Safety & warranty info, Quick Start Guide	✓	✓
Optional accessories		Button panels: RAP-B511 and TBP6	✓	✓
		UD kit double	✓	✓



### 1.3. Features of the Device

#### Common Features



#### 3D and 4K Support

High bandwidth allows extension of resolutions up to 4K and even 3D sources and displays are supported.



#### Pixel Accurate Reclocking

Each output has a clean, jitter free signal, eliminating signal instability and distortion caused by long cables or connector reflections.



#### Frame Detector and Signal Analysis

The exact video and audio signal format can be determined such as timing, frequencies, scan mode, HDCP encryption, color range, color space and audio sample rate.



#### Autoselect Function for Video Inputs

The Autoselect feature can sense the port status on the video input and select them automatically. Priority number can be set for each input port, and the feature allows to set various modes for the automatic input selection (First detect, Last detect).



#### De-embedder Function

The analog audio can be de-embedded from HDMI inputs and it can be routed to the analog audio output.




#### HDCP-compliant

The switcher fulfills the HDCP standard. HDCP capability on the digital video inputs can be disabled when non-protected content is used.



#### Dark Mode\*

All illuminating elements of the front/rear panel can be switched on and off. This feature is useful in live-stage shows or other environments where flashing LEDs would be distracting.

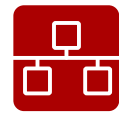

#### Ethernet Control

Multiple simultaneous TCP/IP connections are available with a simple ASCII-based protocol for controlling or configuring the product, or to perform a firmware update.



#### Basic IT-security\*

These entry-level network security improvements help prevent unauthorized access to the Lightware device; HTTPS/WSS support, basic network authentication.



#### Bi-directional RS-232\*

AV systems can also contain serial port controllers and controlled devices. Serial transmission supports any unit that works with standard RS-232.



#### GPIO Control Port

Six GPIO pins operating at TTL digital signal levels that can be controlled with LW3 commands. 5V is supplied over the 7th pin constantly, up to 500 mA.



#### Occupancy Sensor Connector

Occupancy sensor connection (with 24V power supply).



#### Lightware Rest API\*

The switcher can be controlled through standard HTTP(S) requests to ensure the control functions from REST clients or terminal program.



#### Consumer Electronics Control\*\*

The device supports transmitting standard CEC commands in order to remote control the connected sink device.

\* These functions are available from FW package v1.2.0.


\*\* This function is available from FW package v1.4.0b4.

### 1.4. Model Comparison

	Input	Outputs		Ethernet Interface			Serial Interface	GPIO Interface	OCS Interface
	HDMI	Analog audio	HDMI	Secure Control Ethernet	Utility Ethernet	Configurable Ethernet	RS-232	General Purpose In/out (GPIO)	Occupancy Sensor (OCS)
MMX2-4x3-H20	4x	✓	3x	✓	✓	✓	2x	✓	✓
MMX2-4x1-H20	4x	✓	1x	✓	-	-	1x	✓	✓

### 1.5. Typical Application

MMX2-4x3-HC20

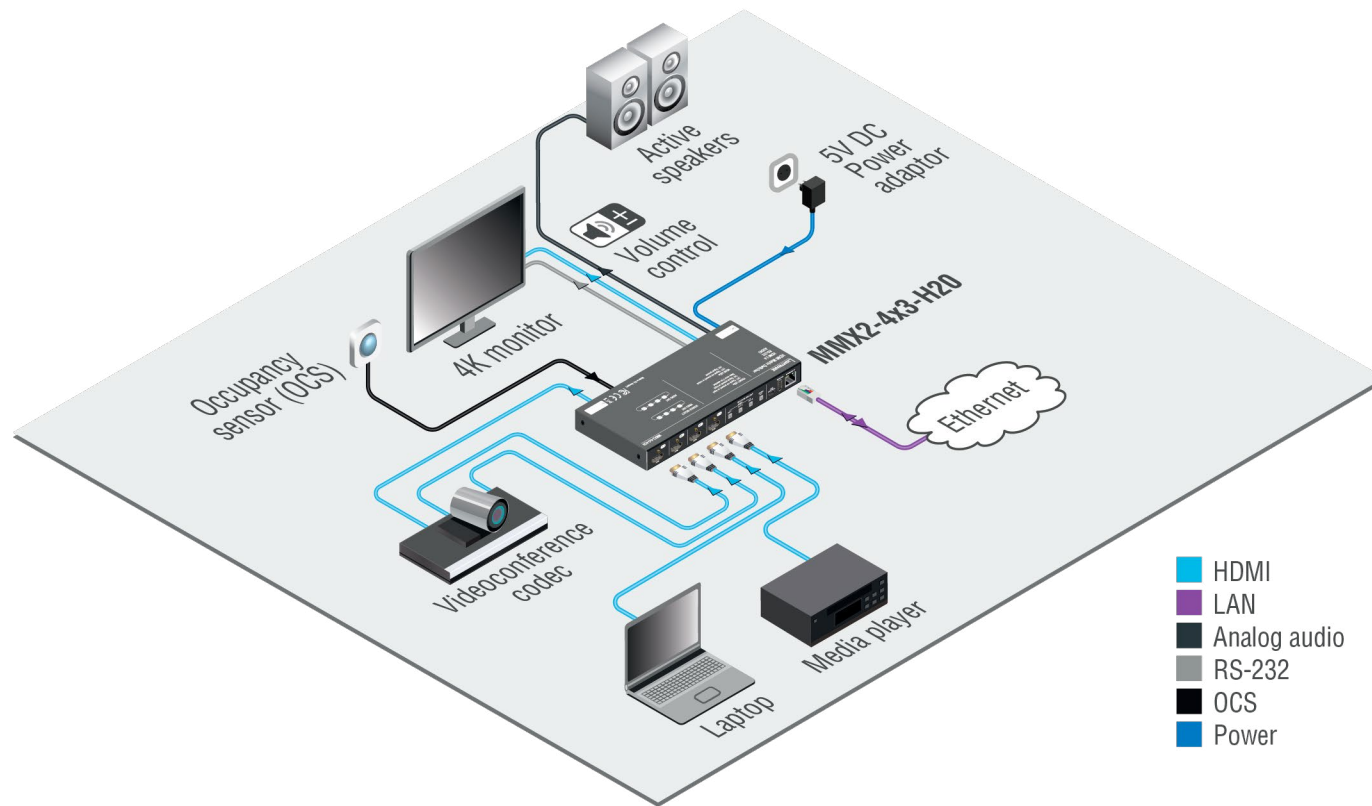

# 2

## Product Overview

The following sections are about the physical structure of the device, input/ output ports and connectors:

- ▶ [FRONT VIEW](#)
- ▶ [REAR VIEW](#)
- ▶ [BUTTON FUNCTIONALITY](#)
- ▶ [STATUS LEDs](#)

## 2.1. Front View

MMX2-4x3-H20




MMX2-4x1-H20




- 1 **Configurable Ethernet Port** RJ45 connector for configurable 100Base-T Ethernet communication.
- 2 **USB-A Port** Reserved for future development.
- 3 **USB mini-B Port** The LW3 control function will be added by a future firmware update.
- 4 **Input Select Buttons** For more details, see the [Button Functionality](#) section. When LEDs blink green three times after pressing the button, they show that the front panel lock is enabled.
- 5 **Video Input Status LEDs** See the details in the [Video LEDs](#) section.
- 6 **HDMI Input Ports** HDMI input ports for sources. The applied cable shall not be longer than 5m. Use cables certified for HDMI 2.0 (3x6Gbps) applications.

## 2.2. Rear View

MMX2-4x3-H20

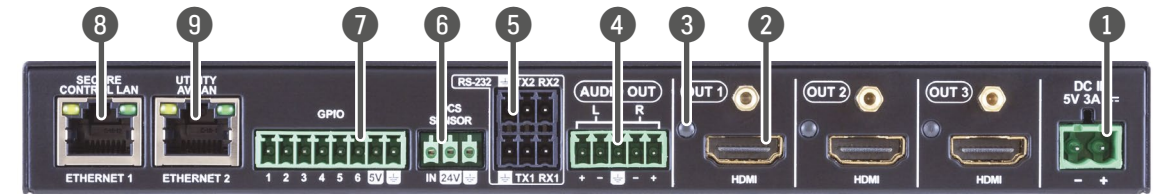

MMX2-4x1-H20

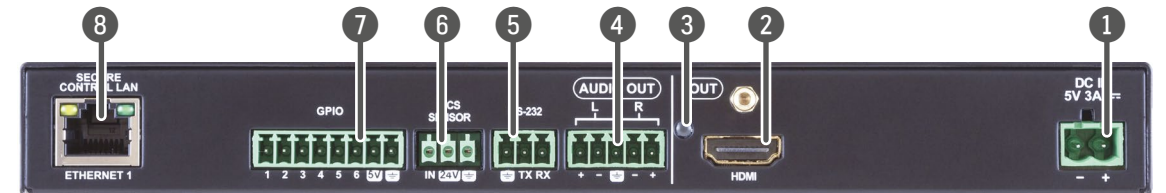

- 1 **DC Input** 5V DC input for local power supply. Connect the adaptor to the 2-pole Phoenix® connector.
- 2 **HDMI Output Ports** HDMI output ports for connecting sink devices.
- 3 **Video Output Status LEDs** See the details in the [Video LEDs](#) section.
- 4 **Analog audio port** 5-pole Phoenix® connector for balanced analog audio output signal. The signal is de-embedded from the selected video signal.
- 5 **RS-232 port** 3-pole Phoenix® connector for bi-directional RS-232 communication.
- 6 **OCS sensor connector** 3-pole Phoenix® connector (male) for connecting an occupancy sensor. The port provides 24V output voltage (50mA), see the details in the [section](#). **WARNING! Not compatible with the GPIO connector!**
- 7 **GPIO** 8-pole Phoenix® connector for configurable general purpose. Max. input/output voltage is 5V, see the details in the [GPIO - General Purpose Input/Output Ports](#) section. **WARNING! Not compatible with the OCS connector!**
- 8 **Secure Control LAN** RJ45 connector for configurable 100Base-T Ethernet communication.
- 9 **Utility AV LAN** RJ45 connector provides room utility Ethernet connection for e.g BYOD laptops.

**WARNING! Always use the supplied power supply. Warranty void if damage occurs due to use of a different power source.**


## 2.3. Button Functionality

**INFO:** If the control lock is enabled and a button is pressed, front panel LEDs blink 3 times quickly.

### 2.3.1. Video Source Selection



#### MMX2-4x1-H20

Use the **IN1-IN4** buttons to select the video source to the HDMI output.

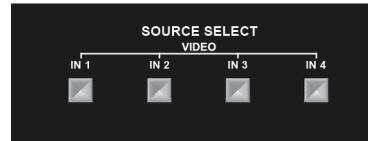

#### MMX2-4x3-H20

Use **OUT1-OUT3** buttons to select the video source. Each button selects the desired input to that output. The sequence is the following (both for the video and audio switching):

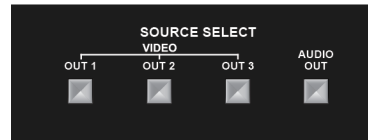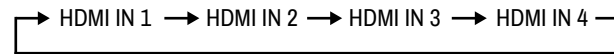

Use **AUDIO OUT** button to set the audio source of the analog audio output.

### 2.3.2. Enable DHCP IP Address


The device has a dynamic IP address as a factory default setting. If this setting does not fit the circumstances during install or usage, DHCP can be enabled from the front panel:

**Step 1.** Make sure the device is powered on and operational.

**Step 2.** Press and keep pressing the **AUDIO OUT** button for 5 seconds (**IN4** button at MMX2-4x1-H20 model).

**Step 3.** After 5 seconds front panel LEDs start blinking; release the button and press it 3 times again quickly (within 3 seconds).

**Step 4.** The LEDs get dark, DHCP gets enabled. `#dhcp`

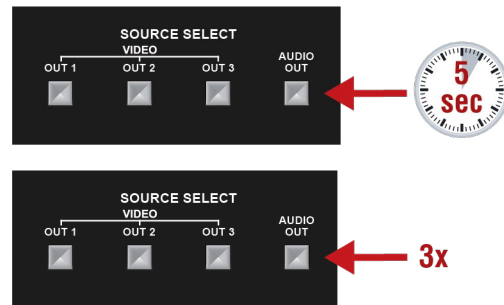

### 2.3.3. Reset to Factory Default Settings

To restore factory default values, do the following steps:

**Step 1.** Make sure the device is powered on and operational.


**Step 2.** Press and keep pressing the **AUDIO OUT** button for 10 seconds (**IN4** button at MMX2-4x1-H20 model).

**Step 3.** After 5 seconds the front panel LEDs start blinking but keep on pressing the button.

**Step 4.** After 10 seconds the LEDs start blinking faster; release the button and press it 3 times again quickly (within 3 seconds).

**Step 5.** The LEDs get dark, the device restores the factory default settings and reboots.

Factory default settings are listed in the [Factory Default Settings](#) section.

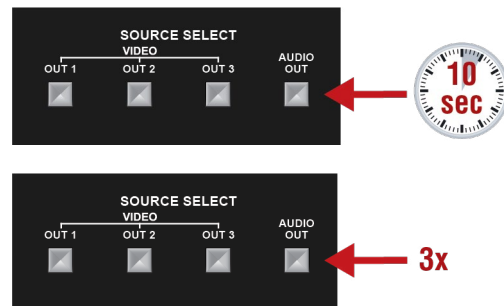


### 2.3.4. Control Lock

Press the first and fourth buttons **together** (within 100 ms) to disable/enable front panel buttons:

- **IN1** and **IN4** buttons in MMX2-4x1-H20 model
- **VIDEO OUT1** and **AUDIO OUT** buttons in MMX2-4x3-H20 model

Front panel LEDs blink 4 times when locking/unlocking. If the control lock is enabled and a button is pressed, front panel LEDs blink 3 times quickly.

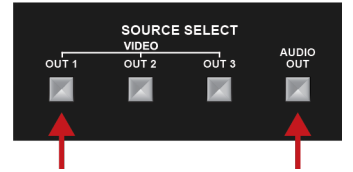

## 2.4. Status LEDs

**INFO:** When Dark mode is enabled, no LEDs are lit, even though the device is fully functional. For more details about the dark mode, see the [Status](#) section. `#status`

### 2.4.1. Video LEDs

Input Status LEDs			
<input type="radio"/>		off	There is no valid video signal on this port.
<input checked="" type="radio"/>	green	blinks once	The port is selected by a button press.
<input checked="" type="radio"/>	green	on	There is a valid video signal on this port.
Output Status LEDs			
<input type="radio"/>		off	The signal is not present or muted.
<input checked="" type="radio"/>	green	on	The video signal is present.

### 2.4.2. Ethernet Status LEDs

Left LED (amber)	Function
Off	Not linked
On (Solid)	No activity
Blinking	Activity
Right LED (green)	Function
Off	0 Mbit/s
On (Solid)	100 Mbit/s

# 3

## Installation

**This chapter is about the installation of the device and connecting to other appliances, presenting also the mounting options and further assembly steps.**

- ▶ [MOUNTING OPTIONS](#)
- ▶ [ELECTRICAL CONNECTIONS](#)
- ▶ [CONNECTING STEPS](#)

### 3.1. Mounting Options

To mount the switcher, Lightware supplies optional accessories for different usage. There are two kinds of mounting kits with a similar fixing method. The switcher has two mounting holes with inner thread on the bottom side; see the bottom view in the [Mechanical Drawings](#) section. To order mounting accessories, please contact [sales@lightware.com](mailto:sales@lightware.com). Fasten the device with the screws enclosed to the accessory.


**WARNING!** Always use the supplied screws. Using different (e.g. longer) ones may cause damage to the device.

#### 3.1.1. 1U High Rack Shelf

Allows rack mounting for half-rack, quarter-rack and pocket sized units.




1U high rack shelf provides mounting holes for fastening two half-rack or four quarter-rack sized units. Pocket-sized devices can also be fastened to the shelf

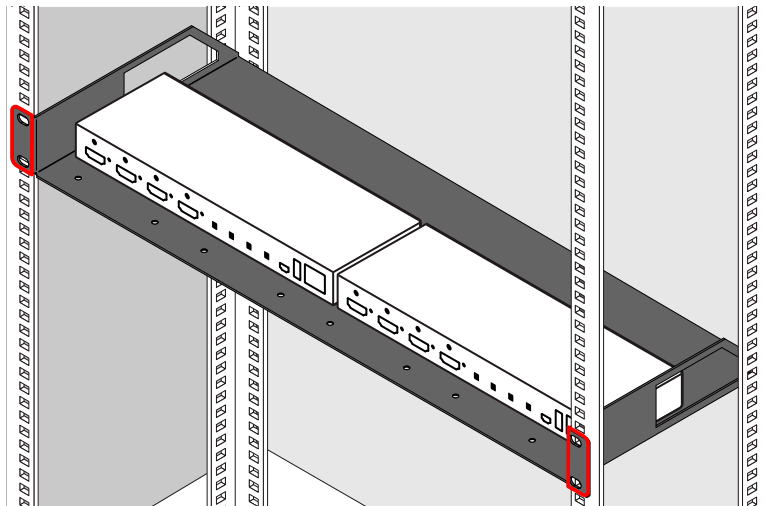

#### 3.1.2. Mounting with UD Kit-double

The example below demonstrates the application of the UD Kit double accessory:

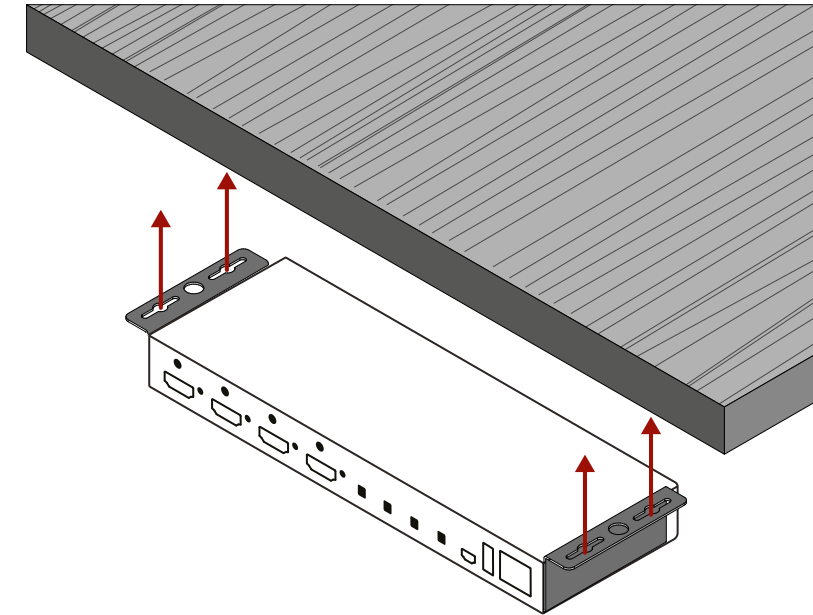

**WARNING!** Using different (e.g. longer) screws may cause damage to the device.

**INFO:** The device is half-rack sized.

### 3.2. Electrical Connections

#### 3.2.1. HDMI Input and Output Ports

The MMX2 series switchers are assembled with standard 19-pole HDMI connectors with screw lock for inputs and outputs. Always use high quality HDMI cable for connecting sources and displays.



#### 3.2.2. USB Connectors



##### USB Type-A

Reserved for future developments.

##### USB Mini B-Type


The connector is used for service functions.

#### 3.2.3. RS-232 Connector

The switcher contains a 3-pole Phoenix connector, which is used for RS-232 serial connection.



Pin nr.	Signal
1	Ground
2	TX data
3	RX data

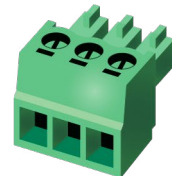

RS-232 connector pin assignments

##### RS-232 Output Voltage Levels

- Logic low level: 3V .. 15V
- Logic high level: -15V .. -3V

##### Compatible Plug Type

Phoenix® Combicon series (3.5mm pitch, 3-pole), type: MC 1.5/3-ST-3.5.


You can find more information about RS-232 in the [Serial Interface](#) section.

#### 3.2.4. Analog Stereo Audio

5-pole Phoenix connector is used for balanced analog audio output. Unbalanced audio device can be connected as well. See more details about the balanced and unbalanced output port wiring in the [Cable Wiring Guide](#) section.



Pin nr.	Signal
1	Left+
2	Left-
3	Ground
4	Right-
5	Right+

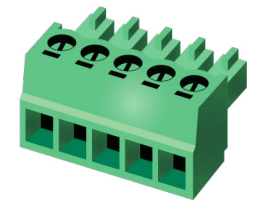

Analog audio connector and plug pin assignments

##### Compatible Plug Type

Phoenix® Combicon series (3.5mm pitch, 5-pole), type: MC 1.5/5-ST-3.5.


#### 3.2.5. Secure Control LAN, Utility AV LAN, Configurable Ethernet Port

The switcher contains an RJ-45 connector for 100Mbit Ethernet/LAN connection for local control functions.


The Ethernet ports can be connected to a LAN hub, switch or router by a CATx cable. Even though both cable types (straight or cross) are supported and handled by the device, the pin assignment below is recommended.

##### Wiring of LAN Cables

Lightware recommends the termination of LAN cables on the basis of TIA/EIA T 568 A or TIA/EIA T 568 B standards.

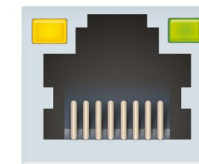

Pin	TIA/EIA T568A	TIA/EIA T568B
1	white/green	white/orange
2	green	orange
3	white/orange	white/green
4	blue	blue
5	white/blue	white/blue
6	orange	green
7	white/brown	white/brown
8	brown	brown

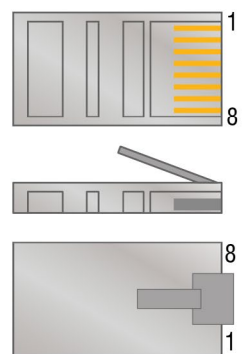



### 3.2.6. OCS Connector


The switcher is supplied with a 3.81mm 3-pole 90° Reversed Gender Plug Phoenix® connector, which is used for connecting an occupancy sensor.

The first pin is a 24V logic input. The default state is high. Different type of sensors exist: some send high level, some send low level to this input when the room is occupied. Active-high or active-low logic can be configured for this port in LDC to support them.

The second pin has a constant 24V output voltage, and the third one is the ground.



Pin nr.	Signal
1	24V logic input
2	24V
3	Ground

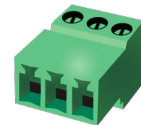

#### OCS connector pin assignments

Voltage ranges for 1st pin are the following:

	Input voltage [V]
Logic low level	0 - 0.8
Logic high level	2V- 24V

OCS Output Voltage Level: 24V (50mA).

Pull-up resistor is integrated on the input. Works automatically with open-drain type sensors. Requires an external 1kR pull-down resistor between input and ground pins when used with active-high type sensors.

In case of applying Leviton OCS (<https://www.leviton.com/en/products/osc10-m0w>), supplying a 1 kOhm external resistor between the 1st and the 3rd pins is necessary – see the example in the [OCS Sensor](#) section.

#### Compatible Plug Type

WR-TBL series (3.81mm 3-pole 90° Reversed Gender Plug Phoenix), type: WR-TBL Series 3483 - 3.81 mm.

**WARNING! The occupancy sensor connector and the GPIO port are not compatible with each other due to the voltage level difference, please do not connect them directly.**

### 3.2.7. GPIO - General Purpose Input/Output Ports


The switcher is supplied with an 8-pole Phoenix connector with six GPIO pins, which operates at TTL digital signal levels, and can be set to high or low level (Push-Pull). The direction of the pins can be input or output (adjustable). Voltage ranges for GPIO inputs are the following:

	Input voltage [V]	Output voltage [V]	Max. output current [mA]
Logical low level	0 - 0.8	0 - 0.5V	30
Logical high level	2 - 5	4.5 - 5V	18

The maximum total current for the six GPIO pins is 180 mA.



Pin nr.	Signal
1	Configurable
2	
3	
4	
5	
6	
7	5V
8	Ground

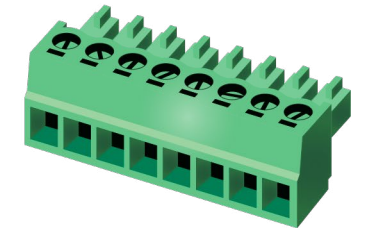

#### GPIO connector and plug pin assignments

INFO: The recommended cable for the connectors is the AWG24 (0.2 mm<sup>2</sup> diameter) or the generally used 'alarm cable' with 4x0.22 mm<sup>2</sup> wires.

#### Compatible plug type

Phoenix® Combicon series (3.5mm pitch 8-pole), type: MC 1.5/8-ST-3.5.


**WARNING! The occupancy sensor connector and the GPIO port are not compatible with each other due to the voltage level difference, please do not connect them directly.**

### 3.2.8. DC Input Connector

The switcher is built with 2-pole Phoenix connector for 5V DC 3A power connection.




Pin nr.	Signal
1	-
2	+

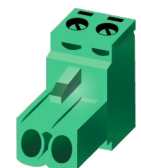

#### 2-pole Phoenix connector and plug pin assignments

### 3.3. Connecting Steps

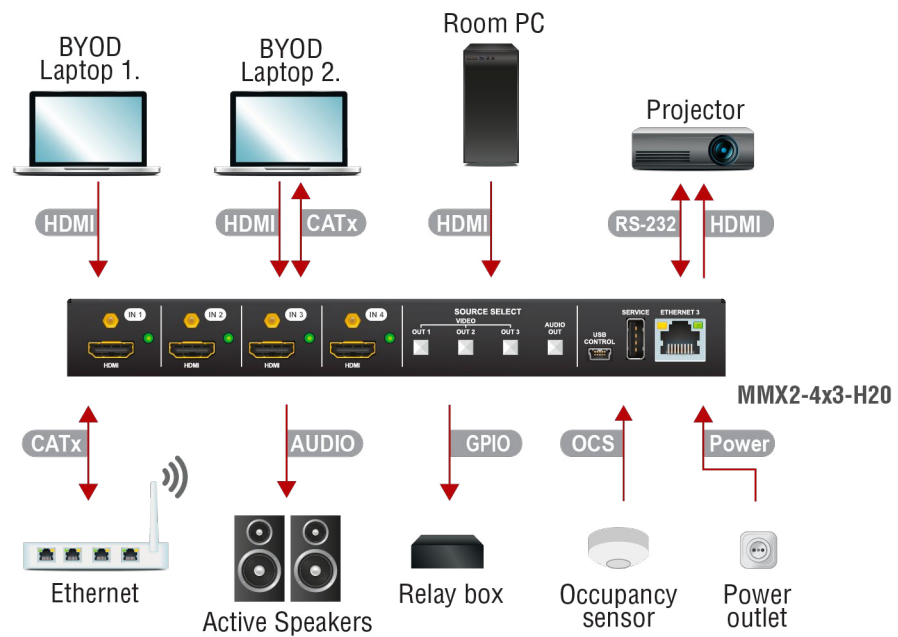

**HDMI** Connect an HDMI source (e.g. BYOD laptop or room PC) to the HDMI input port.

**CATx** Connect the Ethernet port to a Local Network Switch to provide Ethernet connection for device configuration and/or for a source device (only on MMX2-4x3-H20).

**CATx** CATx Connect the switcher to an Ethernet Ethernet port to access the local network.

**HDMI** Connect an HDMI sink (e.g projector) to the HDMI output port.

**RS-232** Optionally for RS-232 extension: connect a controller/controlled device (e.g. projector to the RS-232 port.

**Audio** Optionally connect an audio device (e.g. active speakers) to the analog audio output port by an audio cable.

**GPIO** Optionally connect a device (e.g. a relay box) to the GPIO port.

**OCS** Optionally connect an occupancy sensor to the OCS port.

**Power** Connect the external power supply to the AC power socket and the switcher unit. Powering the device is recommended as the final step.

# 4

## Device Concept

The following chapter describes the features of the device with a few real-life examples.



- ▶ UNIVERSAL SWITCHER CONCEPT
- ▶ VIDEO INTERFACE
- ▶ THE AUTOSELECT FEATURE
- ▶ AUDIO INTERFACE
- ▶ ETHERNET INTERFACE
- ▶ LIGHTWARE ADVANCED ROOM AUTOMATION (LARA)
- ▶ BASIC NETWORK SECURITY
- ▶ 802.1X AUTHENTICATION
- ▶ WEBSOCKET SERVICE (WS, WSS)
- ▶ BULK DEVICE MANAGEMENT
- ▶ SERIAL INTERFACE
- ▶ GPIO INTERFACE
- ▶ OCS INTERFACE
- ▶ FURTHER BUILT-IN FEATURES

### 4.1. Universal Switcher Concept


MMX2 series device is a multi-functional audio/video HDMI 2.0 matrix switcher with four inputs and one or three outputs designed into a compact size frame. The device is built with various interfaces, e.g. Ethernet, RS-232, GPIO, OCS and with audio de-embedder function.

### 4.2. Video Interface

Summary of Video Ports

	Video Inputs	Video Outputs
	 HDMI 2.0 (18 Gbps)	 HDMI 2.0 (18 Gbps)
MMX2-4x1-H20	4x	1x
MMX2-4x3-H20	4x	3x

#### 4.2.1. MMX2-4x1-H20 and MMX2-4x3-H20

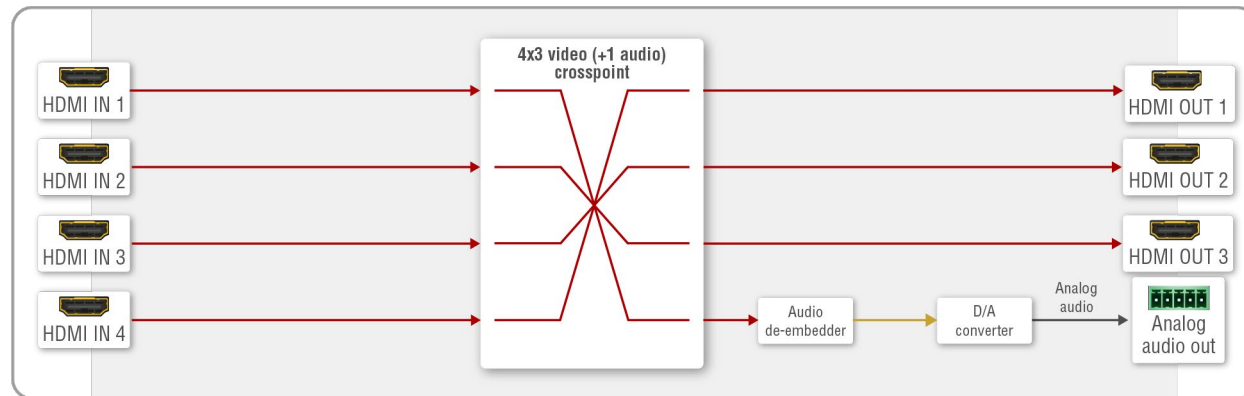


**DIFFERENCE:** MMX2-4x1-H20 model contains only one HDMI output port.

### 4.3. The Autoselect Feature


Aside from manually selecting crosspoints, you can choose the Autoselect option both in case of audio and video ports. Three types of Autoselect is available:

- **First detect mode:** selected input port is kept connected to the output while it has an active signal.
- **Priority detect mode:** it is always the highest priority active input is selected to transmit.
- **Last detect mode:** it is always the last attached input is selected to transmit.

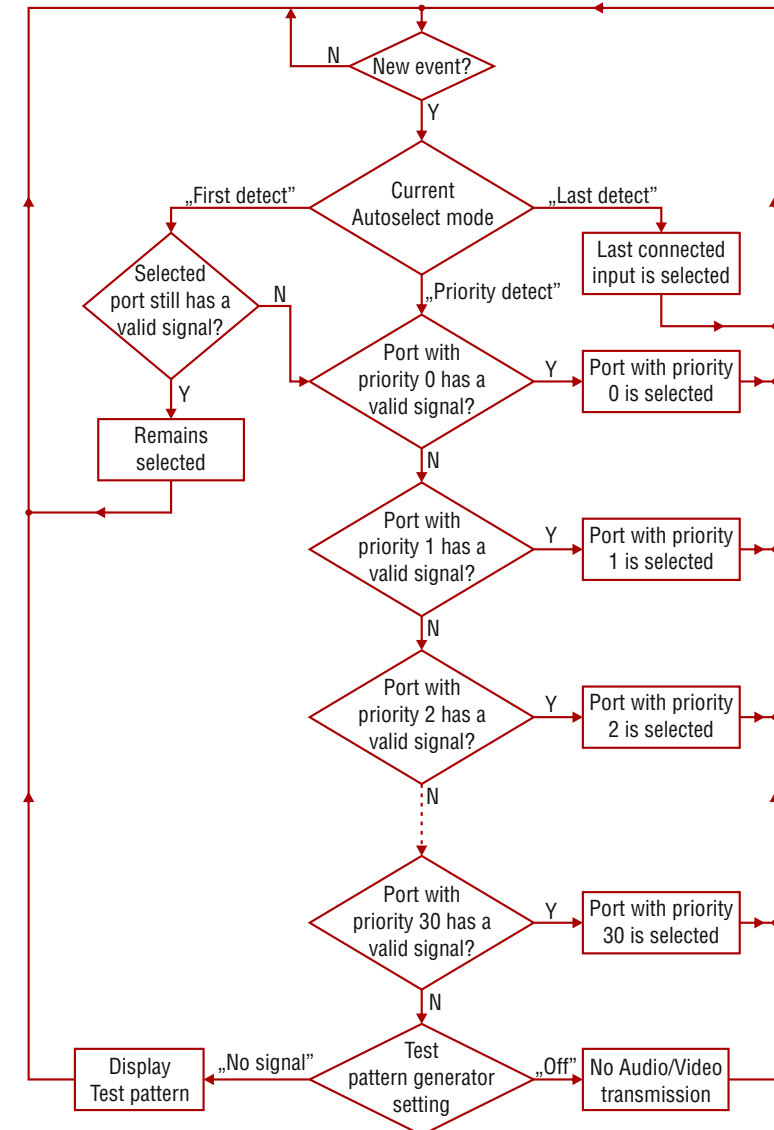

Flowchart of Autoselection modes

### Automatic Input Selection - Example

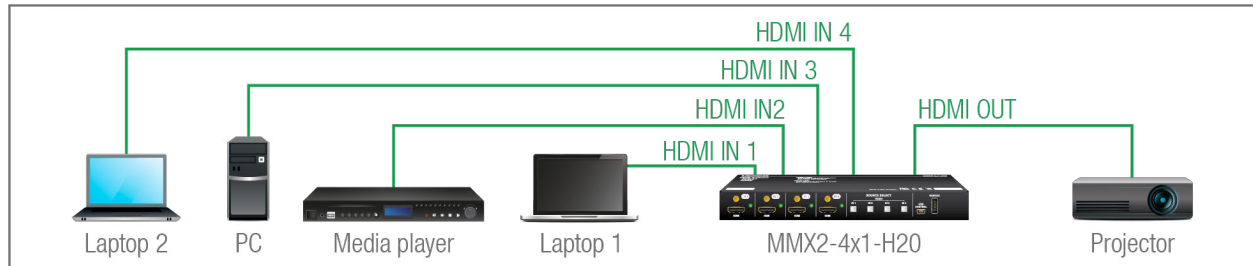

#### The Concept

If there is no other source connecting to the switcher, only **Laptop 2** (HDMI input 4) it will be automatically switched to the HDMI output. If the **Laptop 2** and the **PC** are also connected to the switcher, the **PC** (HDMI input 3) will be switched to the HDMI output. If the **Media player** is connected to HDMI input 2, the **Media player** will be switched to the HDMI output. Finally, if the **Laptop 1** is connected (HDMI input 1), it will be switched to HDMI output as it has the highest priority – independently of the presence of the other video signals.

#### Settings

- **HDMI output:** Set the Autoselect to **Enabled**. The Autoselect mode is Priority detect. The priorities are the following (the lowest number means the highest priority):

Source device	Input port	Priority
Laptop 1	I1 (HDMI IN 1)	0
Media player	I2 (HDMI IN 2)	1
PC	I3 (HDMI IN 3)	2
Laptop 2	I4 (HDMI IN 4)	3

Priorities can be set in Lightware Device Controller software, see the related settings in the [Autoselect](#) section.

## 4.4. Audio Interface

The device can receive embedded audio signal on the HDMI inputs. The switcher has a built-in audio de-embedder which means the device is able to de-embed audio from its video ports to its analog audio output port.

## 4.5. Ethernet Interface

### Summary of Ethernet ports

	Secure Control Ethernet	Utility Ethernet	Configurable Ethernet
MMX2-4x1-H20	✓	-	-
MMX2-4x3-H20	✓	✓	✓

The device can be controlled via Ethernet (standard RJ45 connector). This interface supports:

- Configuration of the device with Lightware Device Controller. For more information about the LDC, see the [Software Control - Lightware Device Controller](#) section.
- Control of the Lightware devices with LW3 command protocols. See more details about the Lightware protocol in the [LW3 Programmers' Reference](#) section.
- Establishing the connection to Lightware Device Updater v2 software and performing Firmware Update.
- Creation of a local network, passthrough the Ethernet traffic.
- The switcher provides WS/WSS services on its 80 (for WS) and 443 (for WSS) ports to control the device with LW3 protocol commands. For more details, see the [WebSocket Service \(WS, WSS\)](#) section.
- REST API interface is also designed for controlling the switcher. See more details in the [Lightware REST API Reference](#) section.

## 4.6. Lightware Advanced Room Automation (LARA)

Lightware Advanced Room Automation (LARA) is a future-proof room automation platform that enables controlling both Lightware and 3rd-party devices in a meeting room area and also accessing remote services over the network. LARA has an easy-to-use graphical interface that allows the integrators to set up and deploy their system and also helps the technicians and IT personnel to check the system status and diagnose possible errors. LARA comes with built-in touchscreen control support, where a fully customizable graphical interface can be provided to literally any modern touchscreen device.



LARA eliminates the need for an external controller unit or PC, as it is embedded into the MMX2 series family. Because of the modular design, the integrators can build their system based on existing modules (drivers, touch screens, services and more) or create their own. Thanks to the approach of open source modules, the integrators can easily modify or extend the existing modules, or use them as a base for their new solutions.

With LARA, integrators can set up the behavior of the meeting room by creating rules and setting various parameters, there is an option to write codes. JavaScript is the most widespread language today, which has a steep learning curve and huge online community. By using the popular NodeJS engine, the integrators can rely on the public NPM repository (<http://www.npmjs.org>) and use the free packages available there.

We are working hard to release new functionalities regularly and make LARA more and more user-friendly.

**DIFFERENCE:** LARA is available in MMX2 devices from firmware version v1.5.0b5.

### 4.6.1. Opening the LARA interface

**ATTENTION!** When connecting to a device, you will need the 443 port for HTTPS connection, and optionally the 6107 port for raw TCP connection and the 80 port for HTTP connection.

**Step 1.** Enable LARA in your device. Navigate to the Settings/Network tab. First set a password for the 'admin' user, then enable LARA via the checkbox.

**INFO:** As LARA is capable of running NodeJS scripts accessing your network, it is imperative to prevent open access that could be used by a malicious attacker.

**Step 2.** Open LARA in either of the following ways:

- Via the **Open LARA** button under the System tab in the LDC, or
- By typing `https://<ip_address>/lara` into the address field of your browser. Even though any modern browser should work, we recommend using the latest Chrome or Safari versions. If you don't know the IP address of your device, please use Lightware Device Controller to discover it on your local network.

LARA does not run by default, however, once it starts, it will remain running even after resetting the device or closing the browser, until it is stopped by the user. It can be disabled in the LDC software. Please be aware that calling factory reset will erase LARA configurations.

While a graphical interface is available for most of the general functions, LARA offers the option to use it with JavaScript codes for every step and modification for both basic and more advanced task creation. Wizard and JavaScript code usage can easily be combined for maximum efficiency.

#### Help

LARA offers a built-in help interface, which is available by clicking on the **Help** button near the top right corner. You can find the descriptions, definitions, steps and examples that aid in understanding LARA and learning how to use it.

### 4.6.2. Running LARA

LARA uses modules and their instances as basic building blocks of a configuration.

#### Modules

Modules are software pieces that give a base to the processes in the LARA interface. There are five module categories available as follows:

- **Driver:** a module connected to a certain device in the network
- **Logic:** a module for organizing the other modules into a system
- **Userpanel:** provides a user interface for the end user (e.g. tabletop control)
- **Service:** a module connected to a certain service in the network (e.g. calendar services)
- **Script:** any custom module for a specific purpose

LARA modules have access to the devices' every port, connection interface and the entire parameter library of the LW3 tree.

There are several pre-made modules that can be found in LARA for quick and easy system setup. These modules can be found in the **Browse Modules** menu by clicking on the **Create New** button and choosing one of the options from the **Base modules** drop-down list.

- **Taurus/MMX2 driver** module - for controlling the device
- **Taurus/MMX2 CEC driver** module - for sending CEC messages via the HDMI ports
- **Generic LW3 driver** module - for controlling another Lightware device that supports LW3 protocol
- **Generic TCP/IP driver** module - for controlling any device that is available via TCP/IP connection
- **Cisco Webex script** module - integration with Cisco Webex supporting BYOD (Bring Your Own Device) functions
- **OCS sensor serial message script** module - for sending a serial message to a device (e.g. Display) if the Occupancy Sensor detects a signal
- **Generic REST Client driver** module: universal module for controlling third-party devices over HTTP(S) REST API (PUT, POST, GET, DELETE)
- **Signal present serial message script** module - for sending a serial message to a device (e.g. Display) if a video signal is detected on a port

#### Instances

Modules can be run as instances. Different parameters may be added to different instances for the same module to include every possible process in the desired system.

Instances can communicate with each other using **Events** and **Methods**.

**ATTENTION!** It is currently only possible to run all instances together, or run none of them.

#### Events

Every instance can emit Events when something happens. An event is always momentary, it will be emitted immediately when something triggers it. An event can be used by other logic or user panel instances, or even by the same instance itself.

## Methods

Methods are software pieces in any instance, which can be invoked (called) to initiate an activity in the associated room equipment.

## Rules

Rules allow setting up processes according to changes in the state of the device. A status change might dispatch an **Event**, which can trigger a rule. The rule will then be able to execute an **Action** according to the triggering Event. When defining a new rule, a triggering Event must be selected. In case of Logic and Userpanel modules any instance can be chosen as the source of the Event. In other cases only the given module's own Events may be selected.

Once an Event has been dispatched that triggered a rule, an Action will be launched. An Action may have an unlimited number of steps defined.

### 4.6.3. Downloading/Uploading a Configuration


The modules, or even the entire configuration can be downloaded to the computer as a .zip file, or a previously saved configuration can be uploaded to a device.

**ATTENTION!** If the links to methods/properties are compatible with other models within the UCX/MMX2 product family, the configuration will work without a problem. However, sometimes a simple fine tune in the LW3 path of the properties/methods is necessary.


In case of downloading (and later uploading) a configuration of the module, these files are contained within the .zip file.

### 4.6.4. Status Board

The Status board offers real-time information about the connected devices through all running instances as Status Indicators. Such information might include connection status, signal presence, or even parameter status tracking. The indicators may show either static or self-refreshing information based on the current states of the device.

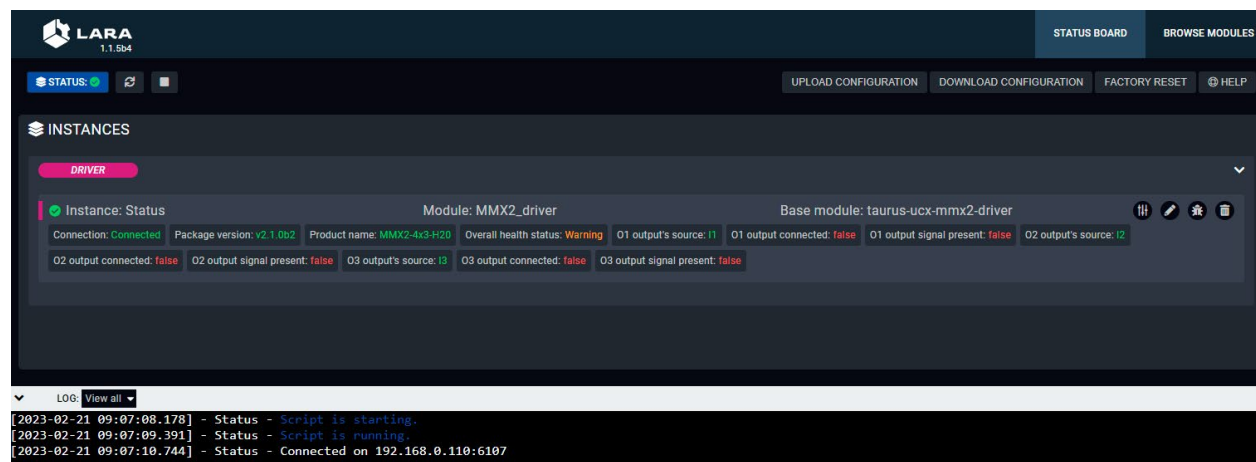

### 4.6.5. Touch Panel Support

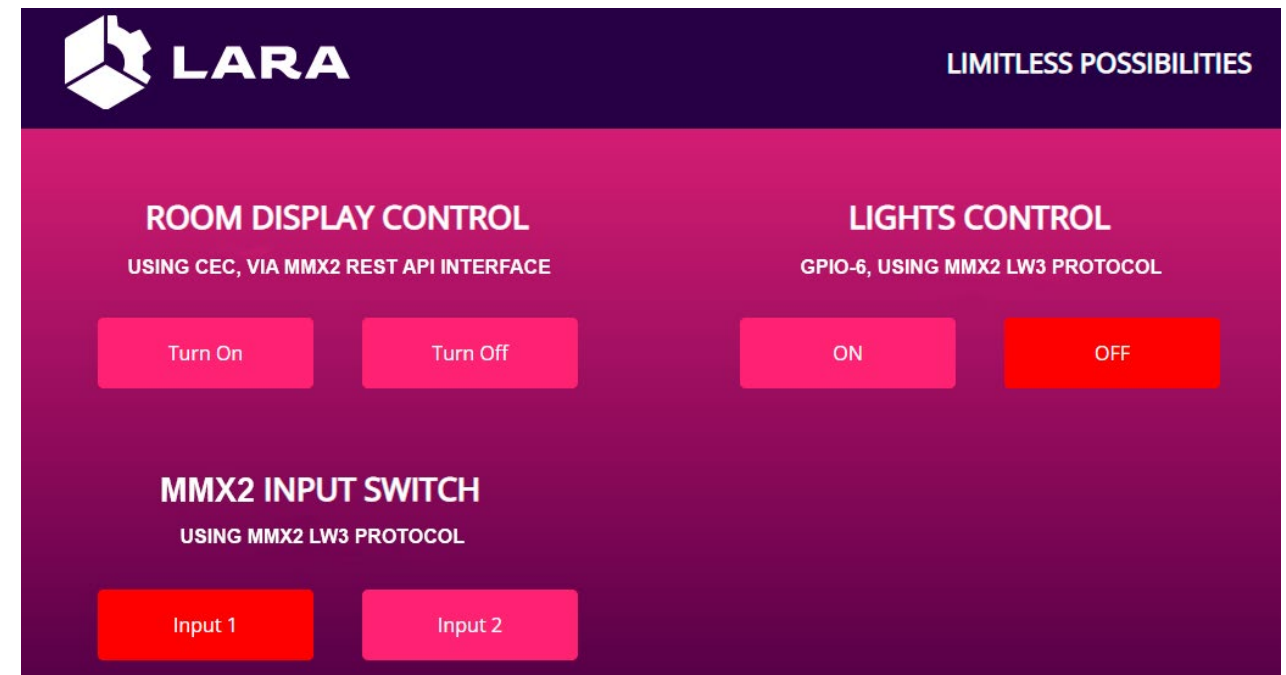

LARA offers support for any touch panel device that has a browser installed on it. With the use of Userpanel modules, you can easily upload project specific HTML/CSS/JS files to your devices, and edit or change them in LARA in real time. There is a Content option under a Userpanel module for the purpose of uploading and editing these files. It is also possible to create folders and subfolders for easy organization. Uploading can be done by dragging and dropping the files into the content section.

For proper operation, in the HTML code a unique ID shall be assigned to every HTML element where LARA interaction is required.

For more information, sample configurations and training materials, please visit [lightware.com/lara](https://lightware.com/lara).

## 4.7. Basic Network Security

These basic network security improvements help to prevent unauthorized access to the MMX2 series switchers:

- [Disable Ethernet Ports](#)
- Disable Network Services
- [Basic Authentication](#)
- [Encryption \(HTTPS, WSS\)](#)

The following table summarizes the ports, protocols, features and the security options.

Port number	Protocol	Function	Affected software	Port disable option	Encryption	Authentication	Other features
80	TCP	HTTP port (LW3 over WS, REST API, LARA user panels)	LDC, LDU2	✓	✗	✓	FW update, Welcome Screen image upload, Log files, User Scripts Serial messaging
443	TCP	HTTPS port (LW3 over WSS, REST API, LARA management GUI)	LDC, LDU2	✓	✓	✓	
6107	TCP	LW3 protocol	LDC	✓	✗	✓	
8001, 8002	TCP	Serial over IP (RS-232)	-	✓	✗	✗	
224.0.0.251:5353	UDP	mDNS / Bonjour (Device Discovery)	LDC, LDU2	✗	✗	✗	
230.76.87.82:37421	UDP	Remote IP	LDC, LDU2	✗	✗	✗	

**INFO:** The ports are necessary to be passed via a network switch/firewall for proper operation between the device and the softwares.

**ATTENTION!** Be careful when combining the security functions; improper settings may cause malfunction.

### 4.7.1. Disable Ethernet Ports

Internal Ethernet connections can be limited by enabling/disabling the Ethernet ports depending on the actual system configuration.

### 4.7.2. HTTP/HTTPS

MMX2 series switcher provides HTTP/HTTPS server services on its 80 (for HTTP) and 443 (for HTTPS) ports. The following services can be used via HTTP/HTTPS:

- LW3 over WebSocket (WS, WSS) for LW3 protocol or using LDC for device control
- REST API for device control
- Serial message sending with REST API
- Firmware update
- WelcomeScreen image upload
- UserScripts upload
- LARA interface
- Logfiles download from the device

**DIFFERENCE:** UserScripts are only available with up to firmware version v1.4.4. From firmware version v1.5.0, LARA replaces functions previously managed by UserScripts.


**ATTENTION!** LARA management GUI is only available through HTTPS and it is password-protected.

#### Basic Authentication

To limit user access for HTTP/HTTPS server services, basic authentication can be turned on for 80 and 443 ports separately.

**ATTENTION!** Authentication feature in MMX2 series is not equal to the Cleartext login feature in the Advanced Control Pack v3 of the TPS family extenders.

The picture below illustrates the successful authentication process:

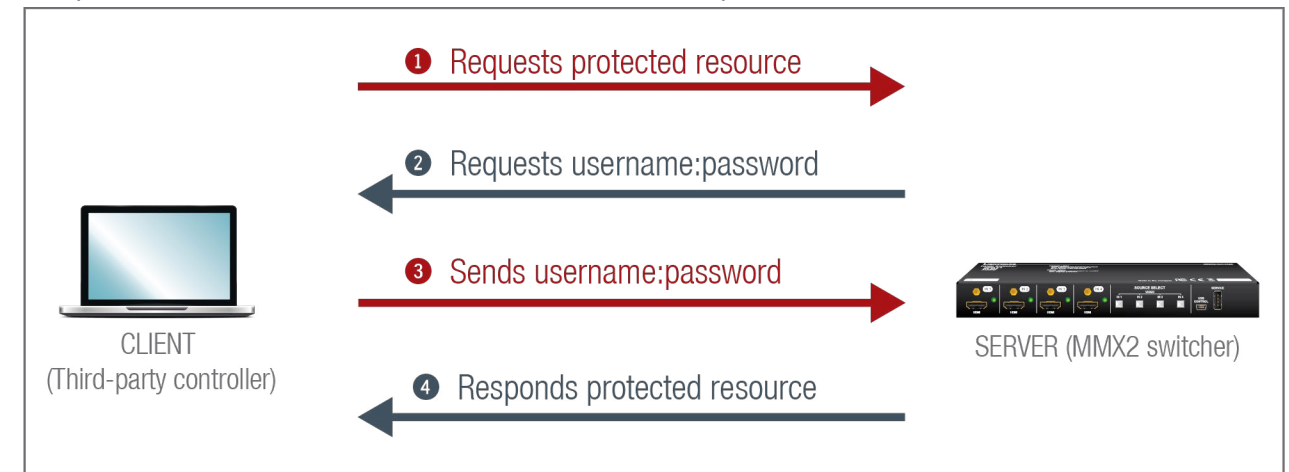



**User**

- The switcher can manage one user (with fixed username: admin) with full access.

**Password**

- No password is set by default, the authentication can be enabled after setting a password. The old password is not necessary for modifying.
- The following characters are allowed: Letters (A-Z) and (a-z) and numbers (0-9). Max length: 100 characters.
- The device does not store the password string, so it can not be queried.
- The password can be reset by calling factory defaults ([Reset to Factory Default Settings](#)).

Follow the instructions to set the authentication:

- Step 1.** Set the password with Lightware Device Controller software ([Network](#)) or LW3 protocol command ([Setting a Password for Authentication](#)).
- Step 2.** Enable the authentication on the chosen port (HTTP: 80 or HTTPS: 443) with Lightware Device Controller software ([Network](#)) or LW3 protocol command ([Enabling Authentication](#)).
- Step 3.** Restart network services.


**ATTENTION!** The password will not be encrypted by this authentication mode, it remains accessible when the communication happens on HTTP.

**4.7.3. Encryption (HTTPS, WSS)**


HTTP protocol uses clear text format for data transport. This method allows a third-party to listen in and eavesdrop on the transferred information.

**HTTP request-response**

To ensure the secure data transmission, the HTTP port (80) can be disabled, and the all the information can be transferred via HTTPS (443 port). HTTPS protocol encrypts the clear text, so it becomes incomprehensible for a third-party and keeps the data secure.

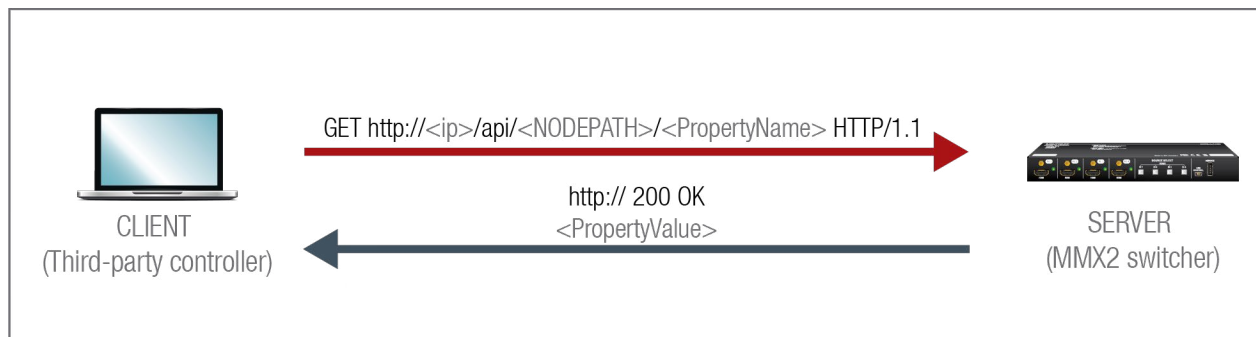

**HTTPS request-response**

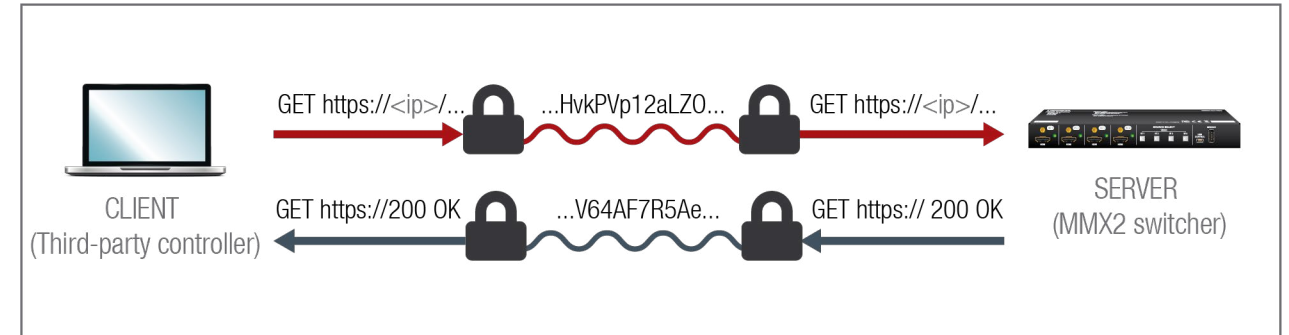


The same services are available on HTTPS as HTTP (for the detailed service list, see the [HTTP/HTTPS](#) section).

- The MMX2 switcher generates a self-signed certificate, so the user does not have to deal with the configuration.
- New certificate is generated after hostname changing or restoring the factory default settings.
- Please ensure proper time and date setting in MMX2, because it affects the self-signed certificate (SSL) generation when using WSS or HTTPS. Improper time and date setting may lead to certificate rejection.

**ATTENTION!** HTTPS does not guarantee that the communication is secure. Make sure that the client communicates with the server directly, without any third-party element in the communication route (Man-in-the-middle attack).

**Basic Security System Example**

To keep the system protected, the unsecured ports should be disabled and data traffic should be managed by secured channels.

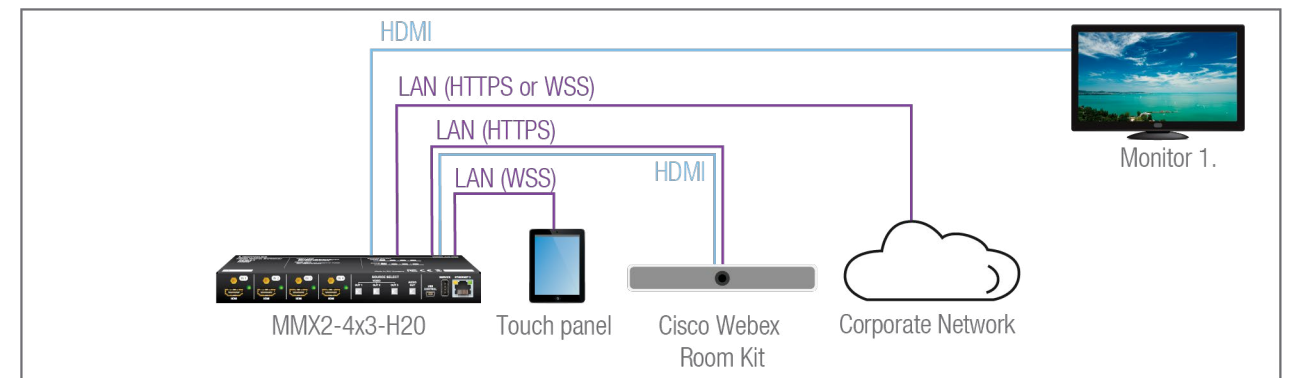

**Step 1. Disable the HTTP port (80) and use HTTPS (443) instead.**

The setting is available in the following ways:

- Lightware REST API HTTP posts (see the details in the [Enabling/Disabling Network Service Port](#) section).
- LW3 protocol commands (see the details in the [Enabling/Disabling Service Port](#) section).

**Step 2. Set the password and enable the authentication.**

The username is always fix (admin) and the password has to be set before the authentication is enabled. The setting is available in the following ways:

- Lightware Device Controller software (see the details in the [Network](#) section)
- Lightware REST API HTTP posts (see the details in the [Setting Password for Authentication](#) and the [Enabling Authentication](#) sections).
- LW3 protocol commands (see the details in the [Setting a Password for Authentication](#) and the [Enabling Authentication](#) sections).

**Step 3. Disable 6107 port, use Lightware REST API HTTPS (443 port) or WSS for LW3 protocol to control the device.**

The setting is available in the following ways:

- Lightware REST API HTTP posts (see the details in the [Enabling/Disabling Network Service Port](#) section).
- LW3 protocol commands (see the details in the [Enabling/Disabling Service Port](#) section).


**Step 4. Disable the remaining unsecured Serial over IP ports (8001 and 8002).**

The setting is available in the following ways:

- Lightware REST API HTTP posts (see the details in the [Enabling/Disabling Network Service Port](#) section).
- LW3 protocol commands (see the details in the [Enabling/Disabling Service Port](#) section).

## 4.8. 802.1x Authentication

802.1x is a server-based port authentication protocol that restricts unauthorized clients from accessing a LAN through a public port. Three parties make up the most basic setup of 802.1x: a supplicant (client device), an authenticator (Ethernet switch) and an authentication server. Before the device is permitted access to the network, port communication is restricted to Extensible Authentication Protocol over LAN (EAPOL) traffic.

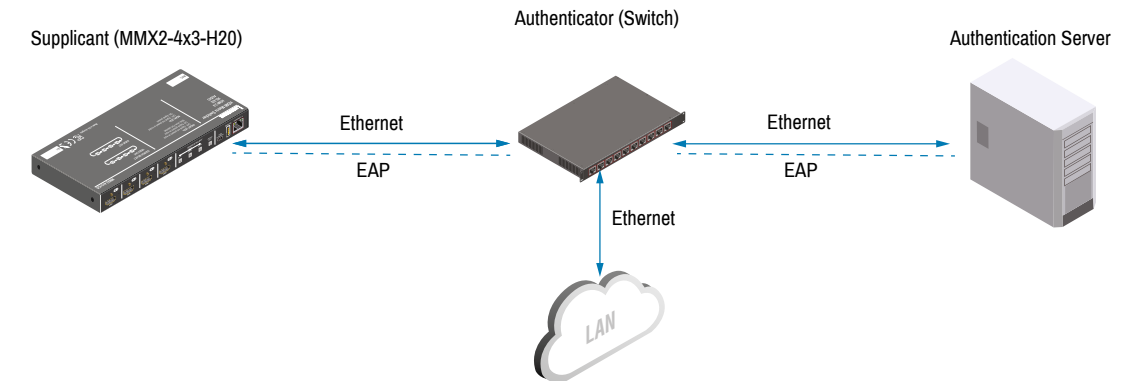

After the device passes the authentication process, the authentication server notifies the switch, allowing the client to access the LAN.

There are two available methods for 802.1x authentication in the MMX2 devices:

- **EAP-MD5:** This commonly used method authenticates by verifying MD5 (Message Digest 5) hash of a user password.
- **EAP-TLS:** This method utilizes Public Key Infrastructure to authenticate with an authentication server. To communicate with the server, a certification authority (CA) certificate and a client-side certificate that is signed by a known certification authority are needed.

**DIFFERENCE:** From firmware version v2.11.0, EAP-MD5 authentication is unavailable.

The MMX2 itself can act as a supplicant, but also as a route through which a BYOD device can reach the authenticator as a supplicant.


**INFO:** When updating the firmware of the MMX2 device, sensitive information (passwords, keys etc.) on the authentication will not be downloaded into the backup file, but it will be retained in the device during the update.

## 4.9. WebSocket Service (WS, WSS)

The switcher provides WS/WSS services on its 80 (for WS) and 443 (for WSS) ports to control the device with LW3 protocol commands.

The switcher can manage 18 connected clients in total simultaneously for WS (80), WSS (443), and LW3 (6107) ports.

The WebSocket connection is built up by HTTP handshake. After the connection is established, communication switches to a bi-directional WebSocket protocol for LW3 communication.

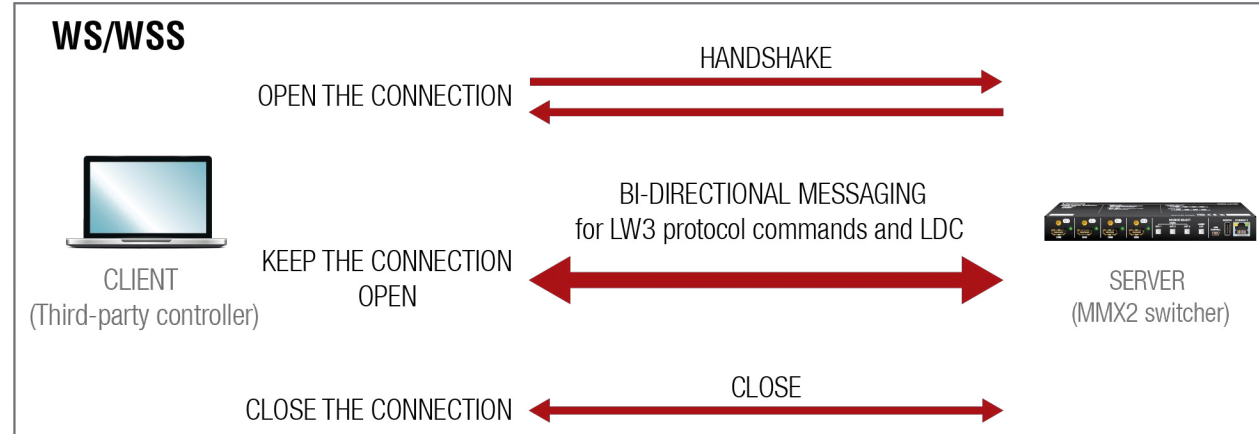

The main difference between HTTP and WS communication process is that HTTP closes the connection between the client and the server after one request-response pair, while WebSocket keeps the connection open. This feature allows real-time communication such as **controlling the device with LW3 protocol commands**. The WS functions are also available via WebSocket Secure (WSS).


## 4.10. Bulk Device Management

It is possible to configure several devices at once with the Bulk Device Management tool. This feature can be accessed by clicking on the Tools button in the bottom left corner of the Device Discovery window of the LDC and choosing the Bulk Management option.

See the [Bulk Device Management](#) section for more details.


### 4.10.1. Network Settings

This function makes it possible to change and adjust the network settings of several devices at once (unique settings for each device), without having to set them at each device one by one. A .csv file can be created containing the list and desired settings of the devices and it can be uploaded into the LDC to be applied to the devices quickly.

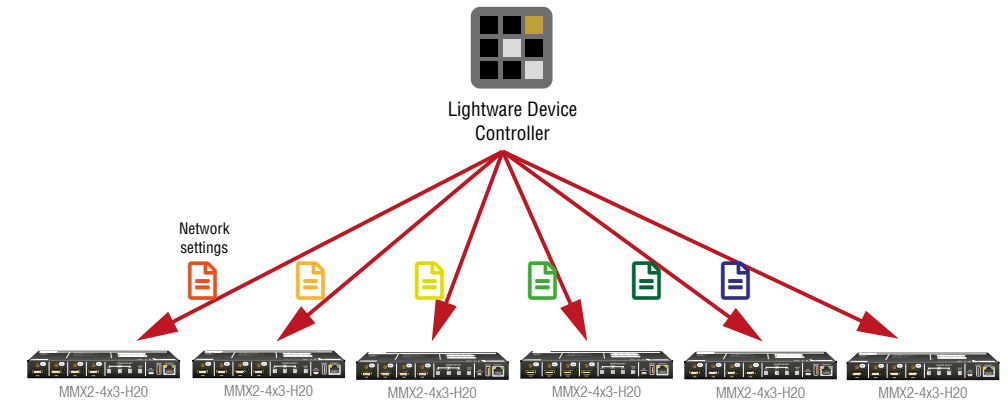

### 4.10.2. Device Configuration


Here you can choose the devices that need to be configured, and upload a previously saved configuration to all of them at once. This is a helpful tool for quick and easy reconfiguration of the devices after a firmware update. This function allows uploading configurations to devices with the same firmware version, without changing their network settings.

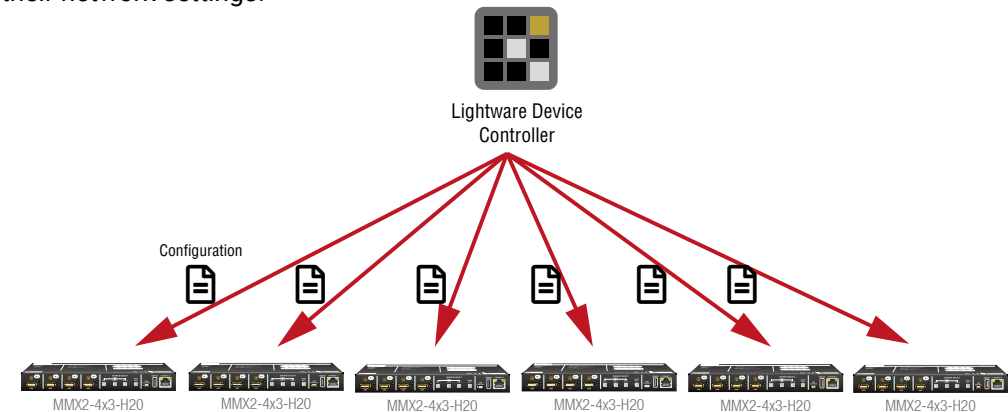

## 4.11. Serial Interface

Serial data communication can be established via the local RS-232 port (Phoenix connector).

### 4.11.1. Serial Port Diagram

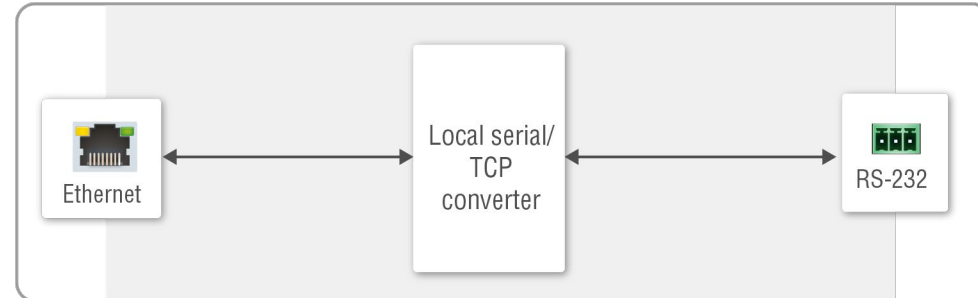

The MMX2 switcher works as an RS-232 bi-directional converter. The TCP signal is converted to RS-232 data and vice versa. TCP/IP port numbers are defined for serial ports (8001, 8002) for this purpose. If a command is coming from the Ethernet interface that is addressed to the port no. 8001, it will be transmitted to the Tx pin of the local RS-232 port (P1). That works in the opposite direction too, and the method is the same on the serial interface of the Ethernet port as well, but the serial message will be transmitted to all opened TCP sockets (if the TCP connection closed meanwhile, the message will not be transmitted). It can handle a maximum of 20 connections at the same time.

Disabling **Serial over IP** function disconnects the Serial/TCP converter from the Ethernet layer and the serial data won't be transmitted to the Ethernet network. This setting is available in the Lightware Device Controller software (in the Setting menu, [Network](#) tab) or with LW3 protocol command ([Enabling/Disabling Network Service Port](#)).

The switcher can manage a maximum of 20 connected clients at the same time for each serial port.

### Message Sending Function

Message sending function allows RS-232 command sending to a third-party (or a Lightware) device from the switcher. Any format is acceptable (text, binary, hexadecimal, etc.), maximum message size is 100Kb. Escaping is unnecessary.


Serial message sending is possible by using HTTP Post with Lightware REST API.

➔ header: POST-http://<ip>/api/V1/MEDIA/SERIAL/<serial\_port>/send-HTTP/1.1

➔ body: <message>

<serial\_port> is P1 or P2.

The MP1 (CPU) is available over REST API interface. The MP1 (CPU) sends the message via the serial port to a third-party (or a Lightware) device. This is a one-way communication, the response will not be interpreted by the CPU. Consider using Serial over IP function instead if listening to a serial device is important.

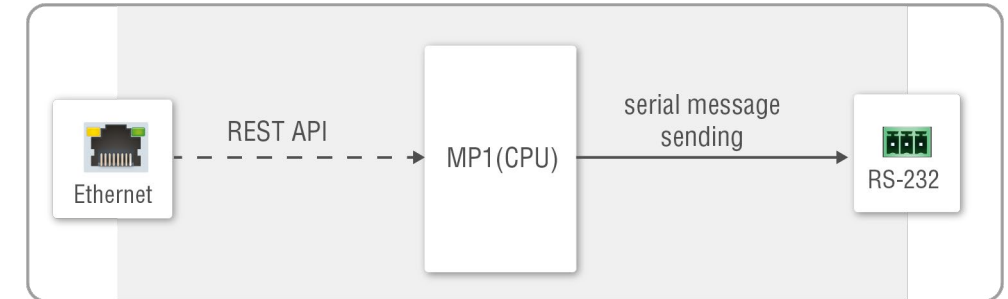


For more details about the Lightware REST API, see the [Lightware REST API Reference](#) chapter.

**INFO:** The switcher can receive a serial message in a special way. When a message is sent from the switcher, the response from the connected device is accepted within 100 ms. The communication is closed after that time interval.

### Serial Options - Example

#### External Controller Concept

The projector is turned on and off by the external System Controller. The **System controller** has an internal REST API client, which is connected to the MMX2 switcher. It sends a HTTP POST to the **MMX2-4x3-H20**. The **Switcher** sends a serial message over the P1 port to the **Projector**.

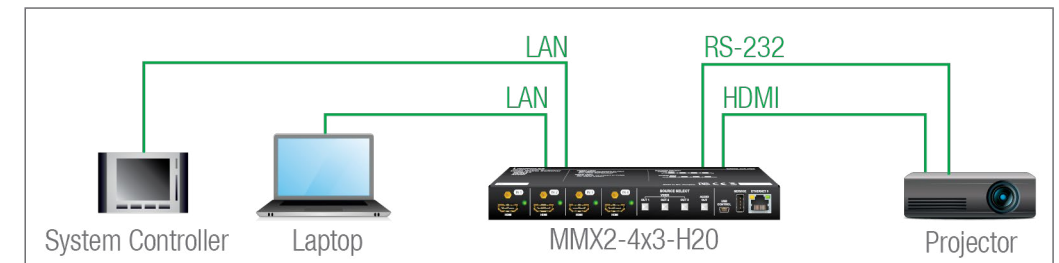

**Security:** When interpreting of the response from the projector is necessary, serial over IP port (8001 or 8002) can be enabled, in this case, the 8001 or 8002 ports are available from other devices too, and it makes the system unsecured.

### MMX2 as a Controller

Userscript feature supports the automatism in MMX2 devices. The Userscript can be uploaded and run in the [Settings Menu, System](#) tab in the Lightware Device Controller Software. The script packages are created by Lightware, please contact your sales representative for help.

**Security:** Userscript does not need Serial over IP when it sends serial messages from the switcher to the controlled device (e.g. projector) via serial port, only the secure ports remain enabled.


**DIFFERENCE:** UserScripts are only available with up to firmware version v1.4.4. From firmware version v1.5.0, LARA replaces functions previously managed by UserScripts.

## 4.12. GPIO Interface

The General Purpose Input/Output (GPIO) port is a multifunctional input/output interface to control the switcher or third-party devices and peripherals. You can establish the connection between the controller/controllable device and the switcher by the 8-pole Phoenix connector. The direction of the six pins is configurable independently from each other.

### GPIO Options - Example

The ceiling lamp is turned off by Relay 1 and the projection screen is rolled down by Relay 2. Both relays are controlled by the GPIO port.

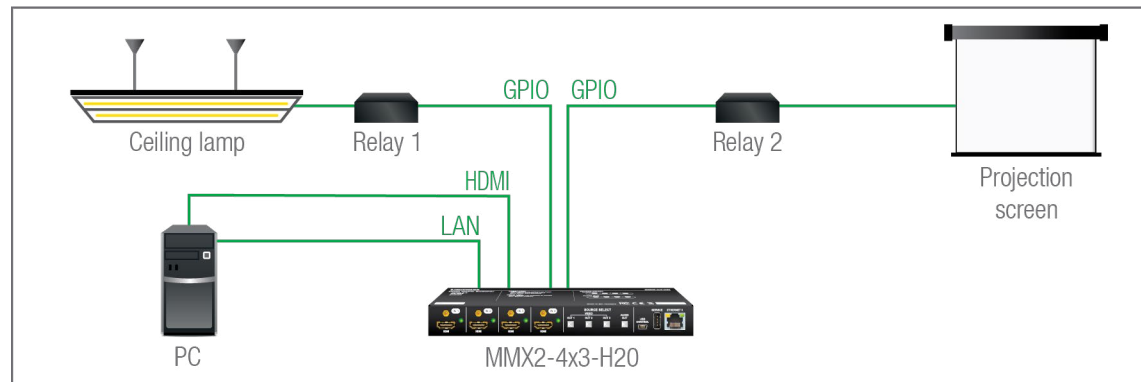

When the PC starts to play the video presentation, the signal is received over the HDMI input, so the GPIO pins send a signal to Relay 1 to open, which results in the lights being turned off. Furthermore, the GPIO pins also send a signal to Relay 2 to close and the projection screen is rolled down. When the presentation ends, signal ceases on the HDMI input, so the GPIO pins send a signal to Relay 1 to close, which results in the lights being turned off and send a signal to Relay 2 to open, so the projection screen returns to its enclosure.

Userscript feature supports the automatism in MMX2 devices. The Userscript can be uploaded and run in the [Settings Menu, System](#) tab in the Lightware Device Controller Software. The script packages are created by Lightware, please contact your sales representative for help.

**Security:** Userscript does not need to use the unsecured ports for GPIO management.


**ATTENTION!** Please always check the electrical parameters of the devices that you want to control. The maximum current of one GPIO pin is 30 mA, the maximum total current for the six pins is 180 mA.

**DIFFERENCE:** UserScripts are only available with up to firmware version v1.4.4. From firmware version v1.5.0, LARA replaces functions previously managed by UserScripts.

## 4.13. OCS Interface

### OCS Application Example

When the occupancy sensor detects people in the meeting room, the switcher turns on the ceiling lamp.

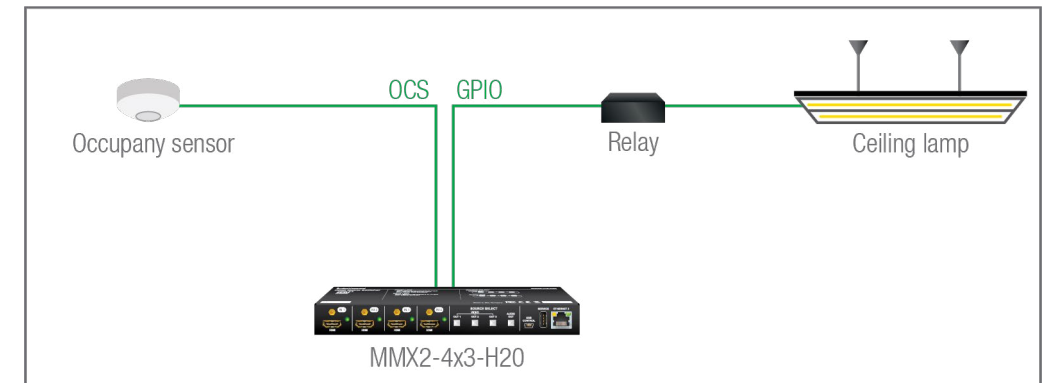

Userscript feature supports the automatism in MMX2 devices. The Userscript can be uploaded and run in the [Settings Menu, System](#) tab in the Lightware Device Controller Software. The script packages are created by Lightware, please contact your sales representative for help.

**Security:** Userscript does not need to use the unsecured ports for OCS management.

**DIFFERENCE:** UserScripts are only available with up to firmware version v1.4.4. From firmware version v1.5.0, LARA replaces functions previously managed by UserScripts.

In case of applying Leviton OCS (<https://www.leviton.com/en/products/osc10-m0w>), inserting a 1 kOhm external resistor between the 1st and the 3rd pins is necessary; for more information see the [OCS Sensor](#) section.

## 4.14. Further Built-in Features

### 4.14.1. Device Cloning – Configuration Backup and Restore

The device (configuration) cloning of MMX2 series switcher is a simple method that eliminates the need to repeatedly configure certain devices to have identical (non-factory) settings. If the devices are installed in the same type of system multiple times, then it is enough to set up only one device to fit the user's needs and then copy those settings to the others, thus saving time and resources.

Cloning is possible between devices using the same firmware version. All LW3 settings, WelcomeScreen Image and UserScript will be saved.

**DIFFERENCE:** UserScripts are only available with up to firmware version v1.4.4. From firmware version v1.5.0, LARA replaces functions previously managed by UserScripts.

Please note that the clone file can be downloaded and uploaded via HTTP or HTTPS, so 80 or 433 port has to be enabled.



See more information about the settings in the [Clone configuration](#) section.

# 5

## Software Control - Lightware Device Controller

Taurus device allows setting all the parameters via a user-friendly interface. Open a web browser (Google Chrome or Mozilla Firefox is highly recommended) and connect to the device to access the parameters and settings. The other option is to use the Lightware Device Controller (LDC) software and connect to the device without a web browser. The features are described in the coming sections.

- ▶ [SOFTWARE CONTROL MODES](#)
- ▶ [USING THE BUILT-IN WEB](#)
- ▶ [INSTALL AND UPDATE](#)
- ▶ [RUNNING THE LDC](#)
- ▶ [ESTABLISHING THE CONNECTION](#)
- ▶ [BULK DEVICE MANAGEMENT](#)
- ▶ [CROSSPOINTS](#)
- ▶ [PORT PROPERTIES WINDOW](#)
- ▶ [CEC TOOL](#)
- ▶ [EDID MANAGEMENT](#)
- ▶ [CONTROL MENU](#)
- ▶ [SETTINGS MENU](#)
- ▶ [ADVANCED VIEW WINDOW](#)

### 5.1. Software Control Modes

The device can be controlled in the following ways:



- Using the **built-in web page**,
- Using the **Lightware Device Controller (LDC)** software,
- Sending **REST API commands** (see the [Lightware REST API Reference](#) chapter), or
- Sending **LW3 commands** (see the [LW3 Programmers' Reference](#) chapter).

**DIFFERENCE:** The built-in webpage is available from firmware package v1.4.0b4.

#### Built-in web page vs. LDC

The LDC and the built-in web page shows the same content, but there are some minor differences:

Function	Built-in Web	LDC
Platform	A Web browser running under Windows, macOS or Android	Windows, mac OS
Installation	Web browser needed only	Required
Device discovery	-	✓
Logout	✓	-

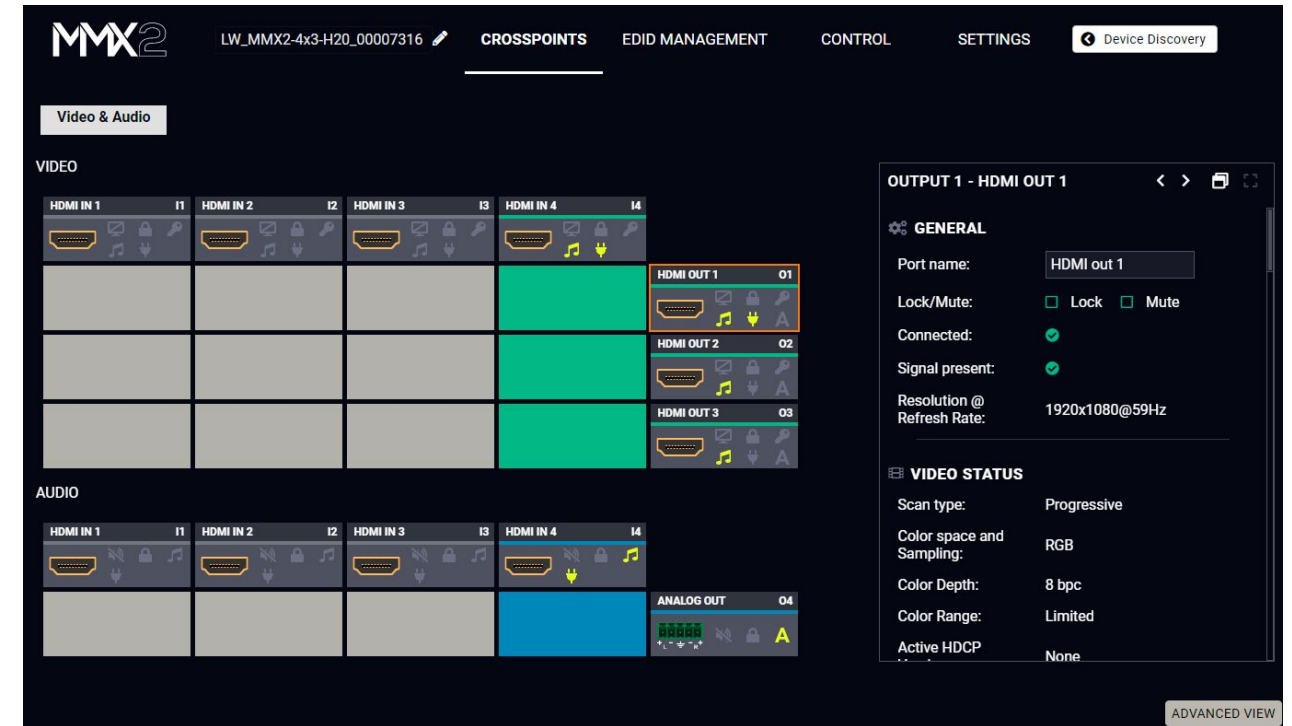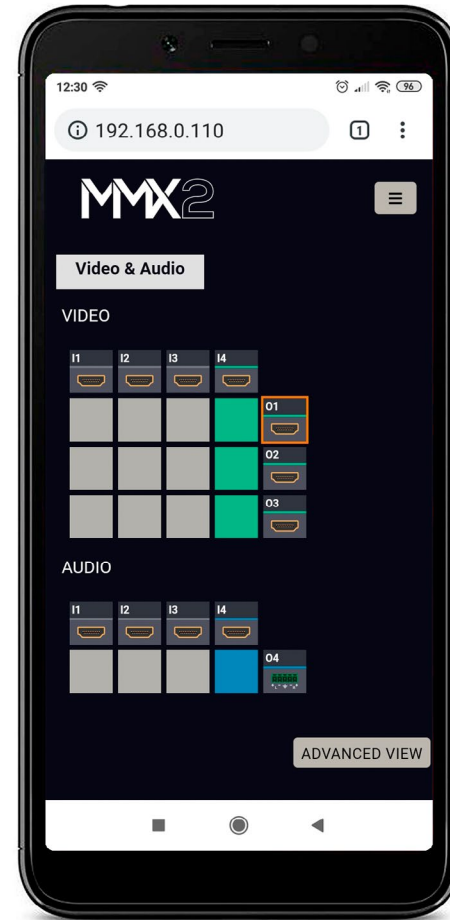

*The Main window – displayed in LDC*



## 5.2. Using the Built-in Web

MMX2 devices can easily be controlled and configured without downloading and installing LDC, by utilizing the built-in web.

Connecting to the device is possible by typing its IP address into the URL of the browser.


The layout of the built-in web is generally the same as the LDC, with a few differences:

- There is no **Device Discovery** button.
- From FW version v2.9.0, there is a **Logout** button. *#new*

**INFO:** The **Logout** button will only appear if the device has a password and the user is logged in.

**DIFFERENCE:** From FW version v2.9.0, the maximum length of a single session is **120 minutes**. If this time is up, you will be logged out, and the device will only be available upon logging in again.

**DIFFERENCE:** From FW version v2.9.0, in case of **15 minutes** of inactivity the session will expire. The system will remind you in a pop-up window if the current session is about to expire two minutes before the time limit. If the reminder receives no answer, the session will restart and you will be forced to log out.

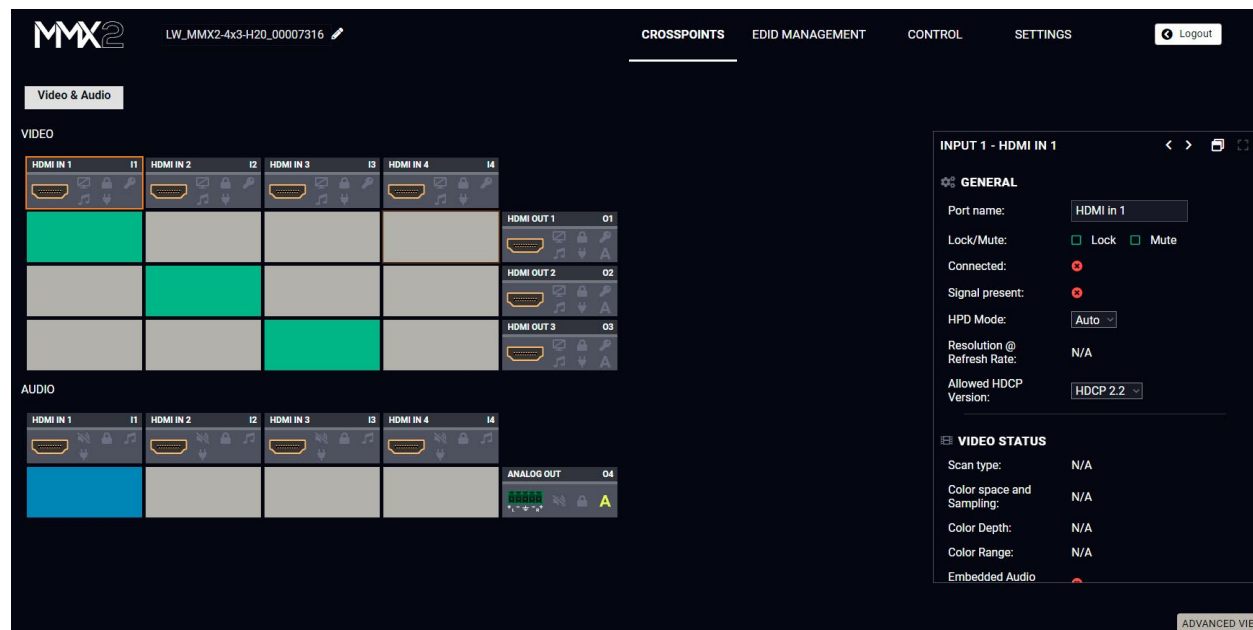

*The Login button appears in the upper right corner upon login*

### 5.3. Install and Update

INFO: After the installation, the Windows and the Mac application has the same look and functionality. This type of the installer is equal to the Normal install in case of Windows and results in an updatable version with the same attributes.

#### Installation for Windows OS

Run the installer. If the User Account Control drops a pop-up message, click **Yes**.

During the installation you will be prompted to select the type of the installation: **normal** and the **snapshot** install:

Normal install	Snapshot install
Available for Windows and macOS	Available for Windows
The installer can update only this instance	Cannot be updated
Only one updatable instance can exist for all users	More than one different version can be installed for all users

**Comparison of installation types**

**ATTENTION!** Using the Normal install as the default choice is highly recommended.

#### Installation for macOS

Mount the DMG file by double clicking on it, and drag the LDC icon over the Applications icon to copy the program into the Applications folder. If you want to copy the LDC into another location, just drag the icon over the desired folder.

#### Upgrading of LDC

**Step 1.** Run the application.

The **Device Discovery** window appears automatically, and the program checks the available updates on Lightware’s website and opens the update window if LDC updates are found.

The current and the update version numbers can be seen at the top of the window and they are shown in this window even with the snapshot install.


The **Update** window can also be opened by clicking on the **About icon** and the **Update** button.

**Step 2.** Set the desired update setting in the **Options** section.

- If you do not want to check for the updates automatically, uncheck **the circle** that contains the green tick.
- If you want to postpone the update, a reminder can be set with different delays from the **drop down list**.
- If the proxy settings traverse the update process, set the proper values, then click on the **OK** button.

**Step 3.** Click on the **Download update** button to start the updating.

The updates can be checked manually by clicking on the **Check now** button.

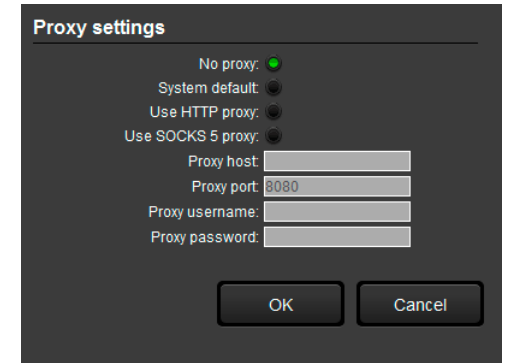

### 5.4. Running the LDC


The common way to start the software is to double-click on the LDC icon. But the LDC can be run by command line parameters as follows:

#### Connecting to a Device with Static IP Address

The LDC is connected to a device with the indicated static IP address directly; the Device Discovery window is not displayed. When the port number is not set, the default port is used: 6107 (LW3 protocol).

**Format:** LightwareDeviceController -i <IP\_address>:<port>

**Example:** LightwareDeviceController -i 192.168.0.20:6107

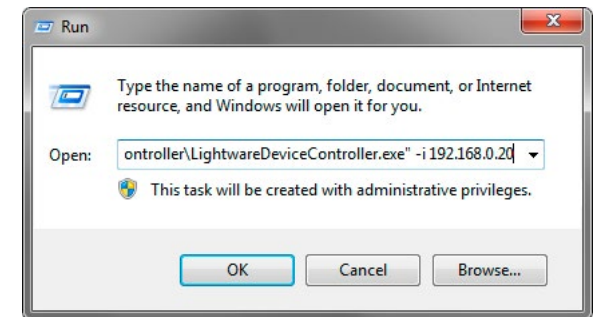

#### Adjusting the Zoom

The window can be zoomed to a specific value to fit to the resolution of the desktop (higher/lower). '1' is the default value (100%).

**Format:** LightwareDeviceController -z <magnifying\_value>


**Example:** LightwareDeviceController -z 1.2

**ATTENTION!** The last set value is stored and applied when LDC is started without a parameter.

## 5.5. Establishing the Connection

**Step 1.** Connect the device to a computer via Ethernet.

**Step 2.** Run the controller software; device discovery window appears automatically.

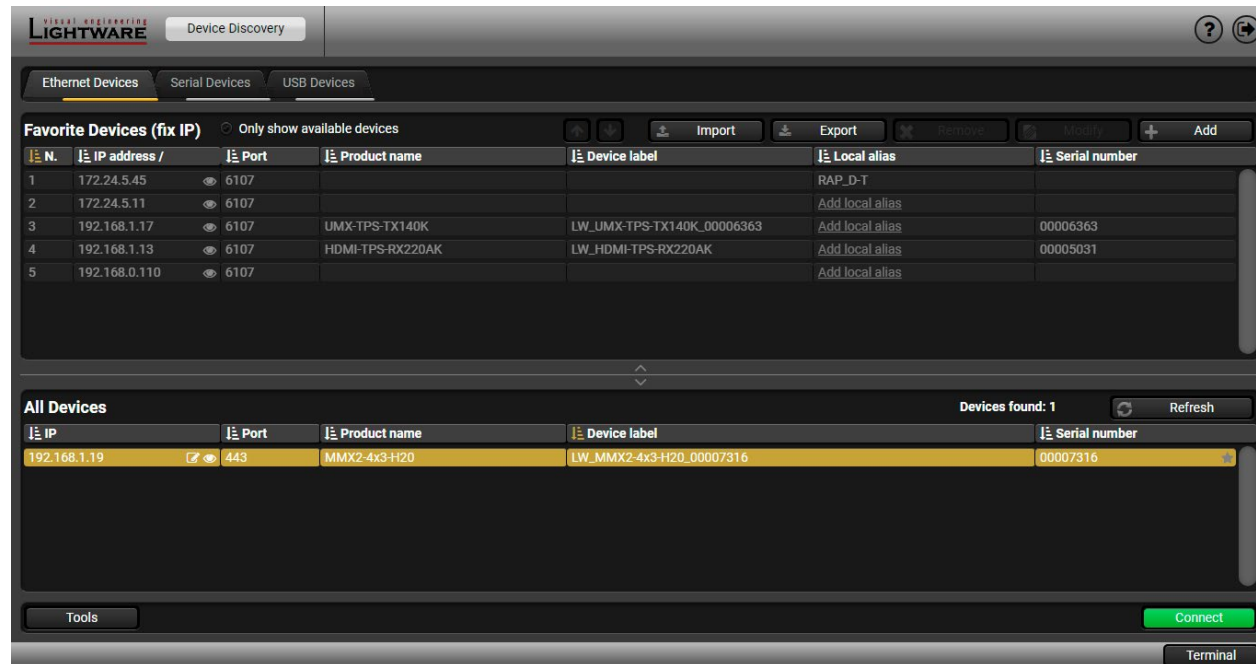


Device discovery window in LDC

The Ethernet tab consists of two lists. **All devices** list contains all Lightware devices that are available in the connected network (in the 255.255.0.0 subnet). However, there is no need to browse all the available devices as you can expand the list of **Favorite devices** with any Lightware device that is connected via Ethernet by any of the following ways:

- Mark the desired device with the ★ symbol in the **All Devices** list,
- Press the **Add** button and add the device in the appearing window, or
- Import** the list of favorite devices that was **exported** previously.

When both the 6107 and 80 ports are disabled, only the secure 443 port remains open, the MMX2 switcher appears in the all devices list with 443 port.

Double click on the device offers an option to open the other ports (80 and 6107) and use e.g. Lightware Device Controller software.

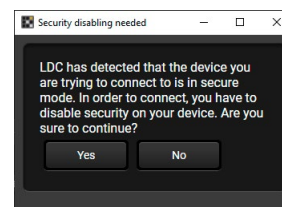


### Add New Favorite Device

**DIFFERENCE:** This feature is available in LDC since v2.5.5.

Press the **Add** button; in the appearing window you can enter the **IP address**. The **hostname** of the desired device can be used instead, if it is supported. That allows setting a unique name to identify the device in a network. If the host name is saved in this window and the IP address is changing, the device will still be available and connectible.

**ATTENTION!** The host name connection-feature does not work when the target device is accessed over VPN.

See more information about the host name property in the [Setting the Hostname](#) section.

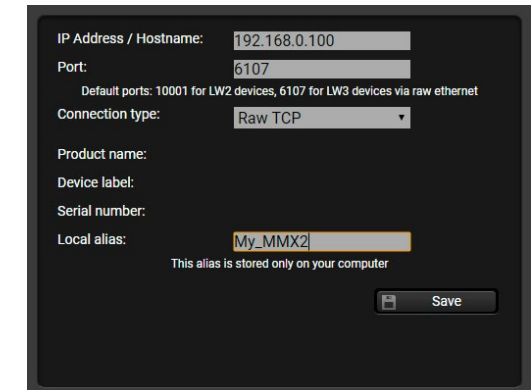

### Import/Export the List of Favorite Devices


**DIFFERENCE:** This feature is available in LDC since v2.5.5.

The list of favorite devices can be exported/imported by the dedicated buttons (saved as \*.JSON file). The list can be imported later (in another computer, too), but please note that the current list will be overwritten by the imported list.

### Changing the IP Address

To modify the IP address settings quickly, it is not necessary to enter the device's settings/network menu, you can set them by clicking the pencil icon beside the IP address.

You can see the new settings only in this window. The device needs a few seconds to apply the new settings. *#ipaddress*

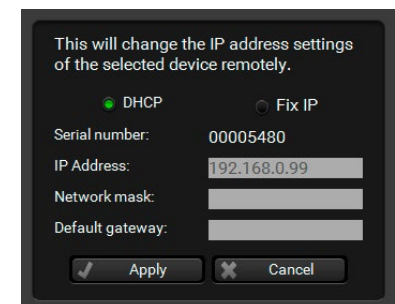

### Identifying the Device


**DIFFERENCE:** This feature is available only from 1.2.0 firmware version.

Clicking on the icon results in the blinking of the status LEDs for 10 seconds. The feature helps to find the device itself physically.

## 5.6. Bulk Device Management

It is possible to configure several devices at once with the Bulk Device Management tool. This feature can be accessed by clicking on the Tools button in the bottom left corner of the Device Discovery window and choosing the Bulk Management option.


**DIFFERENCE:** This function is available from the firmware version v2.6.0b6 of the LDC and v1.3.1b1 of the MMX2 series devices.

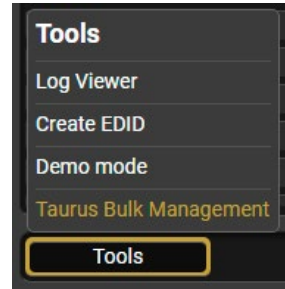

### 5.6.1. Network Settings

It is possible to set the network settings of several devices at once by using a .csv file that contains the list of the devices that we need to configure, then uploading it into the LDC.


Please note that if the data in the file is missing or incorrect, then the discovery of the affected device will fail and an 'Invalid data' message will be displayed in the State column. In case of an IP or MAC address conflict, the message is 'Duplicated'.

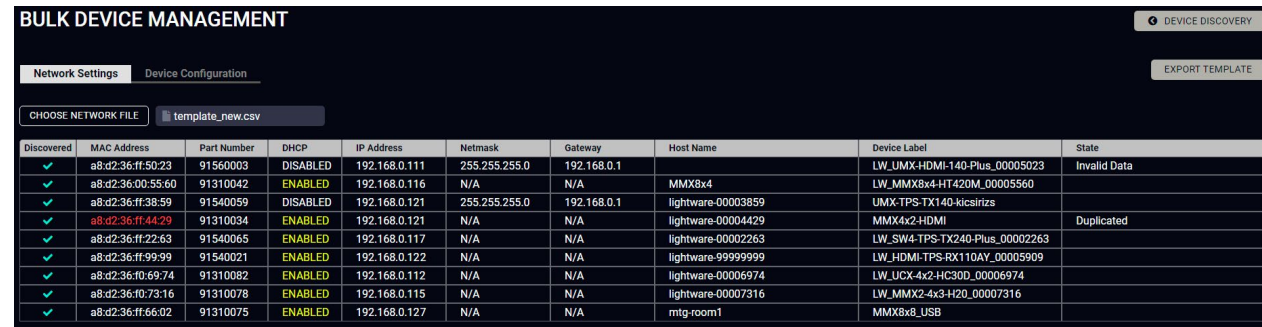

MACADDRESS	PARTNUMBER	DHCP	IP	NETMASK	GATEWAY	HOSTNAME	DEVICELABEL
a8:d2:36:ff:50:23	91560003	DISABLED	192.168.0.111	255.255.255.0	192.168.0.1	lightware-00005023	LW_UMX-HDMI-140-Plus_00005023
a8:d2:36:00:55:60	91310042	ENABLED	192.168.0.116	255.255.255.0	192.168.0.1	MMX8x4	LW_MMX8x4-HT420M_00005560
a8:d2:36:ff:38:59	91540059	DISABLED	192.168.0.121	255.255.255.0	192.168.0.1	lightware-00003859	UMX-TPS-TX140-kicsirizs
a8:d2:36:ff:44:29	91310034	ENABLED	192.168.0.121	N/A	N/A	lightware-00004429	MMX4x2-HDMI
a8:d2:36:ff:22:63	91540065	ENABLED	192.168.0.117	N/A	N/A	lightware-00002263	LW_SW4-TPS-TX240-Plus_00002263
a8:d2:36:ff:99:99	91540021	ENABLED	192.168.0.122	N/A	N/A	lightware-99999999	LW_HDMI-TPS-RX110AY_00005909
a8:d2:36:f0:69:74	91310082	ENABLED	192.168.0.112	N/A	N/A	lightware-00006974	LW_UCX-4x2-HC30D_00006974
a8:d2:36:f0:73:16	91310078	ENABLED	192.168.0.115	N/A	N/A	lightware-00007316	LW_MMX2-4x3-H20_00007316
a8:d2:36:ff:66:02	91310075	ENABLED	192.168.0.127	255.255.255.0	192.168.0.1	mtg-room1	MMX8x8_USB

Changing the network settings can be done in a few easy steps:

- Step 1.** First alter the settings you need to change in the .csv file that contains the devices. You can use a template file accessible via the **Export template** button and saving the file to your computer, then filling it out with the parameters of the devices. The file contains the MAC address, Partnumber, DHCP status, IP address, Netmask, Gateway, Hostname and Device label of each device.
- Step 2.** Upload the .csv file into the LDC by pressing the **Choose network file** button and browsing the file in the pop-up window. This will result in a list of the devices appearing on the screen.
- Step 3.** Finally, press the **Apply settings** button to execute the changes. This might take up to a minute to finish.

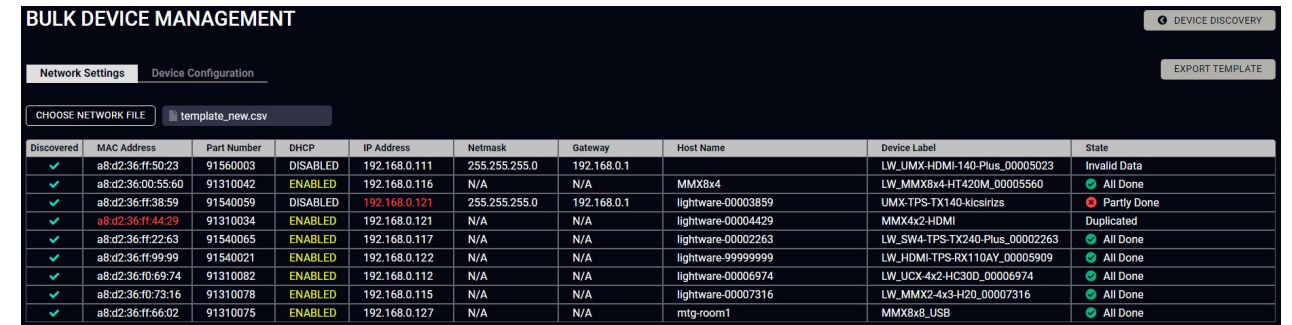

Message	DHCP enabled	DHCP disabled	Device discovered
All Done	Successful procedure		
Partly Done	Failure setting the Host name and/or the Device label		
Unavailable device	Host name <b>and</b> Device label missing	IP address, Network, <b>and/or</b> Gateway missing	
Failed	Host name <b>and</b> Device label incorrect	IP address, Network <b>and</b> Gateway incorrect	
IP mismatch	-	Host name <b>and</b> Device label incorrect	

**ATTENTION!** The 'Failed' and 'IP mismatch' status indicators are not common, they appear when the multicast and/or the port used for LMDMP connection is disabled, or if the firmware version of the device is below the recommended (see the pop-up window when opening the Bulk Management or the beginning of this chapter)

## 5.6.2. Device Configuration

Here you can choose the devices that need to be configured and upload a previously saved configuration to all of them at once. This is a helpful tool for quick and easy reconfiguration of the devices after a firmware update. This function allows uploading configurations to devices with the same firmware version, without changing their network settings.

**BULK DEVICE MANAGEMENT**

Network Settings | **Device Configuration** | EXPORT TEMPLATE

DEVICE DISCOVERY OR UPLOAD DEVICE LIST | template.csv | UPLOAD CONFIG FILE | config\_clone\_00007316\_v14...

Only .gz files are supported

<input type="checkbox"/>	MAC Address	DHCP	IP Address	Host Name	Device Label	State
<input type="checkbox"/>	a8:d2:36:f0:69:74	ENABLED	192.168.0.117	lightware-00006974	LW_UCX-4x2-HC30D_00006...	IP mismatch!
<input type="checkbox"/>	a8:d2:36:f0:73:16	ENABLED	192.168.0.110	lightware-00007316	LW_MMX2-4x3-H20_000073...	Duplicated
<input type="checkbox"/>	a8:d2:36:f0:71:03	ENABLED	192.168.0.110	lightware-00007103	LW_MMX2-4x3-H20_000071...	DEVICELABEL mismatch!
<input type="checkbox"/>	a8:d2:36:00:b3:f7	ENABLED	192.168.4.214	lightware-B4206603	LW_UCX-4x2-HC30_B42066...	
<input type="checkbox"/>	a8:d2:36:01:64:68	ENABLED	192.168.4.231	lightware-C5274629	LW_UCX-2x1-HC30_C52746...	
<input type="checkbox"/>	a8:d2:36:f0:73:13	ENABLED	192.168.4.33	lightware-C3257074	LW_UCX-4x2-H30_C3257074	HOSTNAME mismatch! DEVI...
<input type="checkbox"/>	a8:d2:36:f0:68:75	ENABLED	192.168.4.105	lightware-00006875	LW_UCX-4x2-HC30_000068...	
<input type="checkbox"/>	a8:d2:36:f0:75:30	ENABLED	192.168.0.178	lightware-00007530	LW_UCX-4x2-HC30_000075...	
<input type="checkbox"/>		ENABLED	192.168.5.76	lightware-C3258910	LW_UCX-4x2-HC30_C32589...	Invalid Data

APPLY SETTINGS

Please note that if the data in the .csv file is missing or incorrect, then the discovery of the affected device will fail and an 'Invalid data' message will be displayed in the State column. In case of an IP or MAC address conflict, the message is 'Duplicated', or if the IP address is incorrect, 'IP mismatch!'. 'HOSTNAME mismatch!' or 'DEVICELABEL mismatch!' appears if the respective values are incorrect.

Changing the configuration of the devices can be done in a few easy steps.

- Step 1.** Set the desired configurations in one of the devices, then clone your configuration in the **Settings** menu, under the **System** tab. Click on the **Download clone file** button in the right, set the file name in the pop-up window and press **Save**. Please note that this file is not available for offline editing.
- Step 2.** Go back to the Device Discovery screen of the LDC, click on the **Tools** button in the bottom left corner and select the **Bulk Management** option.
- Step 3.** Select the Device Configuration tab, then press the black **Device discovery** button for the LDC to list all compatible devices, or upload a device list that has been created beforehand. For such a file, you can use a template by clicking on the **Export template** button and saving it to your computer, see in the previous section. You can upload this file into the LDC by clicking on the **Upload device list** button, browsing the desired file and pressing the **Open** button.

**Step 4.** Once uploaded, you can further select devices from the list to be configured or you can change settings in all of them by ticking the box next to the head of the list.

**Step 5.** To change the configuration of the devices, you need to upload a configuration file previously saved from a device with the same firmware version via the **Upload config file** button. Browse the file in the pop-up window and press **Open**.

**Step 6.** Click on the **Apply settings** button in the lower right corner to start the reconfiguration procedure.

**BULK DEVICE MANAGEMENT**

Network Settings | **Device Configuration** | EXPORT TEMPLATE

DEVICE DISCOVERY OR UPLOAD DEVICE LIST | template.csv | UPLOAD CONFIG FILE | config\_clone\_00007316\_v14...

Only .gz files are supported

<input type="checkbox"/>	MAC Address	DHCP	IP Address	Host Name	Device Label	State
<input type="checkbox"/>	a8:d2:36:f0:69:74	ENABLED	192.168.0.117	lightware-00006974	LW_UCX-4x2-HC30D_000069...	✘ Firmware version mismat...
<input type="checkbox"/>	a8:d2:36:f0:73:16	ENABLED	192.168.0.119	lightware-00007316	LW_MMX2-4x3-H20_00007316	✔ Configuration saved succ...
<input type="checkbox"/>	a8:d2:36:f0:71:03	DISABLED	192.168.0.123	lightware-00007103	LW_MMX2-4x3-H20_00007103	✔ Configuration saved succ...

APPLY SETTINGS

The list will be updated when the configuration procedure is finished, where in case of success, the **✔ Configuration saved successfully** message will be displayed in the State column.

Please note that a configuration can only be applied to a device with the same firmware version, otherwise the **✘ Firmware version mismatch** error message will appear under the State column.

If the configuration is applied to a different variant, the **✘ Variant mismatch** error message will appear.


If the network settings are incorrect, applying the configuration will fail, and the message **✘ Incorrect network settings** will appear under the State column.


For more details about saving a configuration, see the [Clone configuration](#) section.

If a device that is in the list is not connected to the network or its IP address is incorrect, the software will fail to detect it, and will display a **✘ Failed to fetch** message in the State column when applying settings.

## 5.7. Crosspoints


#crosspoint #switch

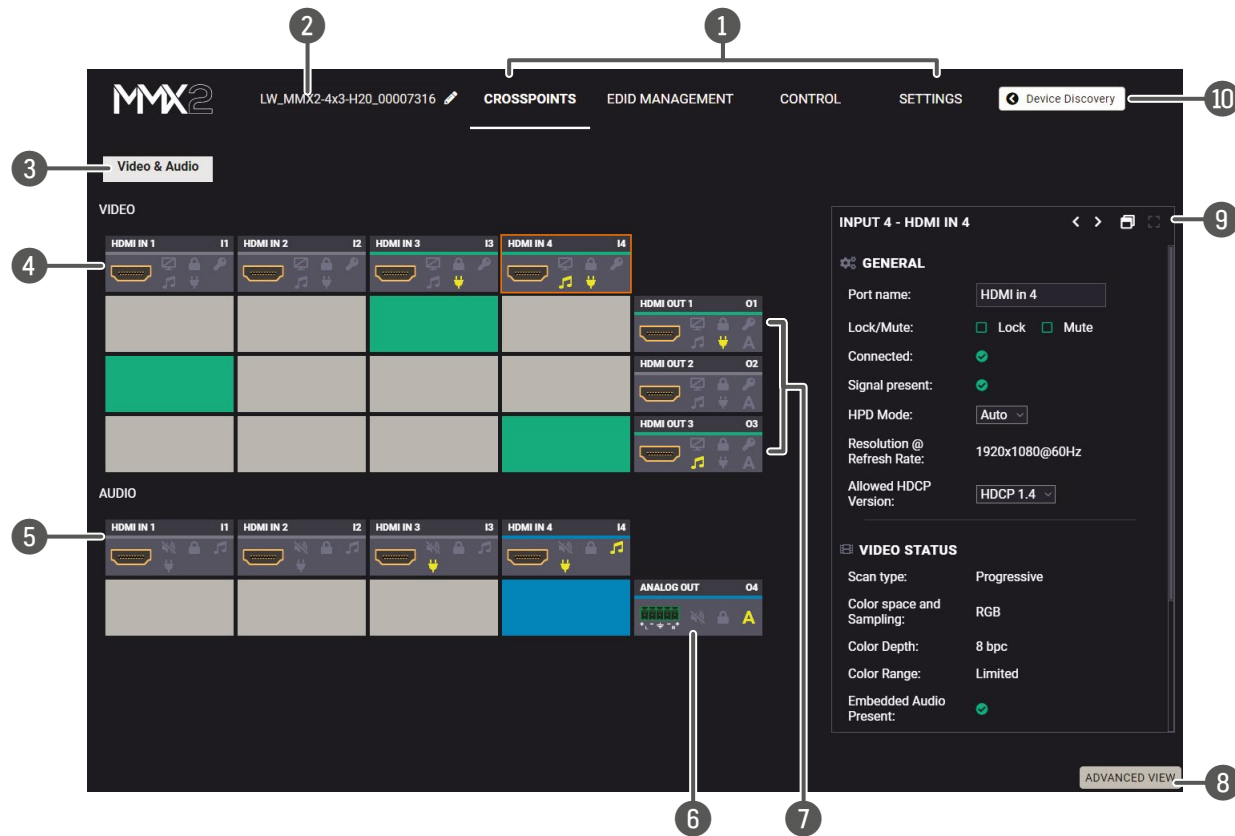

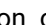- 1 **Main menu** The available menu items are displayed. The active one is highlighted.
- 2 **Information ribbon** The label shows the device label, which can be edited in the Settings menu - [Status](#) tab.
- 3 **Submenu** The Video&Audio crosspoint menu is displayed.
- 4 **Video input ports** Each tile represents a video input port. The tiles below the port show the current crosspoint setting; if the port is switched to an output, the color of the tile is green, otherwise white. Clicking on the port tile opens the input properties window.
- 5 **Audio input ports** Each tile represents an audio input port. All of them are logical audio ports, they mean the de-embedded audio channel of the selected HDMI inputs. For more details, see the [Embedded Audio Input](#).
- 6 **Audio output port** Analog audio output port; clicking on the output tile opens the [Analog Audio Output](#) window.
- 7 **Video output ports** HDMI video output ports; clicking on the tile opens the [HDMI Video Output](#) port properties window.
- 8 **Advanced view** Displaying the [Advanced View Window](#), showing the Terminal window and the LW3 protocol tree.
- 9 **Properties window** Settings and status information of the selected panel are displayed in this section. Clicking on the icon  the properties section opens in new window.
- 10 **Navigation button** Device discovery window can be displayed by clicking on this button.

### 5.7.1. Port Tiles

The colors of the port tiles and the displayed icons represent different states and information:

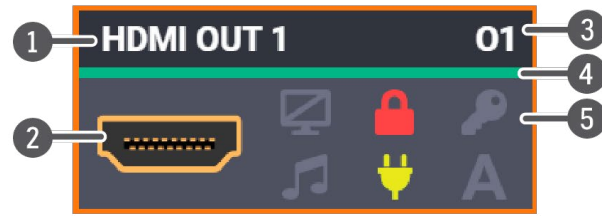

- ① Port name
- ② Port symbol
- ③ Port number
- ④ Signal present indicator  
**green:** present  
**grey:** not present
- ⑤ State indicators

**State Indicators**    *#lock #unlock #mute #unmute*

Following icons display different states of the port/signal:


Icon is grey	Description	Icon is highlighted	Description
	Port is unmuted		Port is muted
	Port is unlocked		Port is locked
	Signal is not encrypted with HDCP		Signal is encrypted with HDCP (the HDCP version is displayed)
	Embedded audio is not present		Embedded audio is present
	There is no connected device		The device is connected
	Autoselect is disabled		Autoselect is enabled
	Audio is unmuted		Audio is muted

## 5.8. Port Properties Window

Clicking on the port tile opens the Port properties window. This section shows the available settings and status information by port types. [#lock](#) [#unlock](#) [#mute](#) [#unmute](#)

### 5.8.1. HDMI Video Input

Clicking on the HDMI video input port icon results in opening the Port properties window. The most important information and settings are available from the panel.

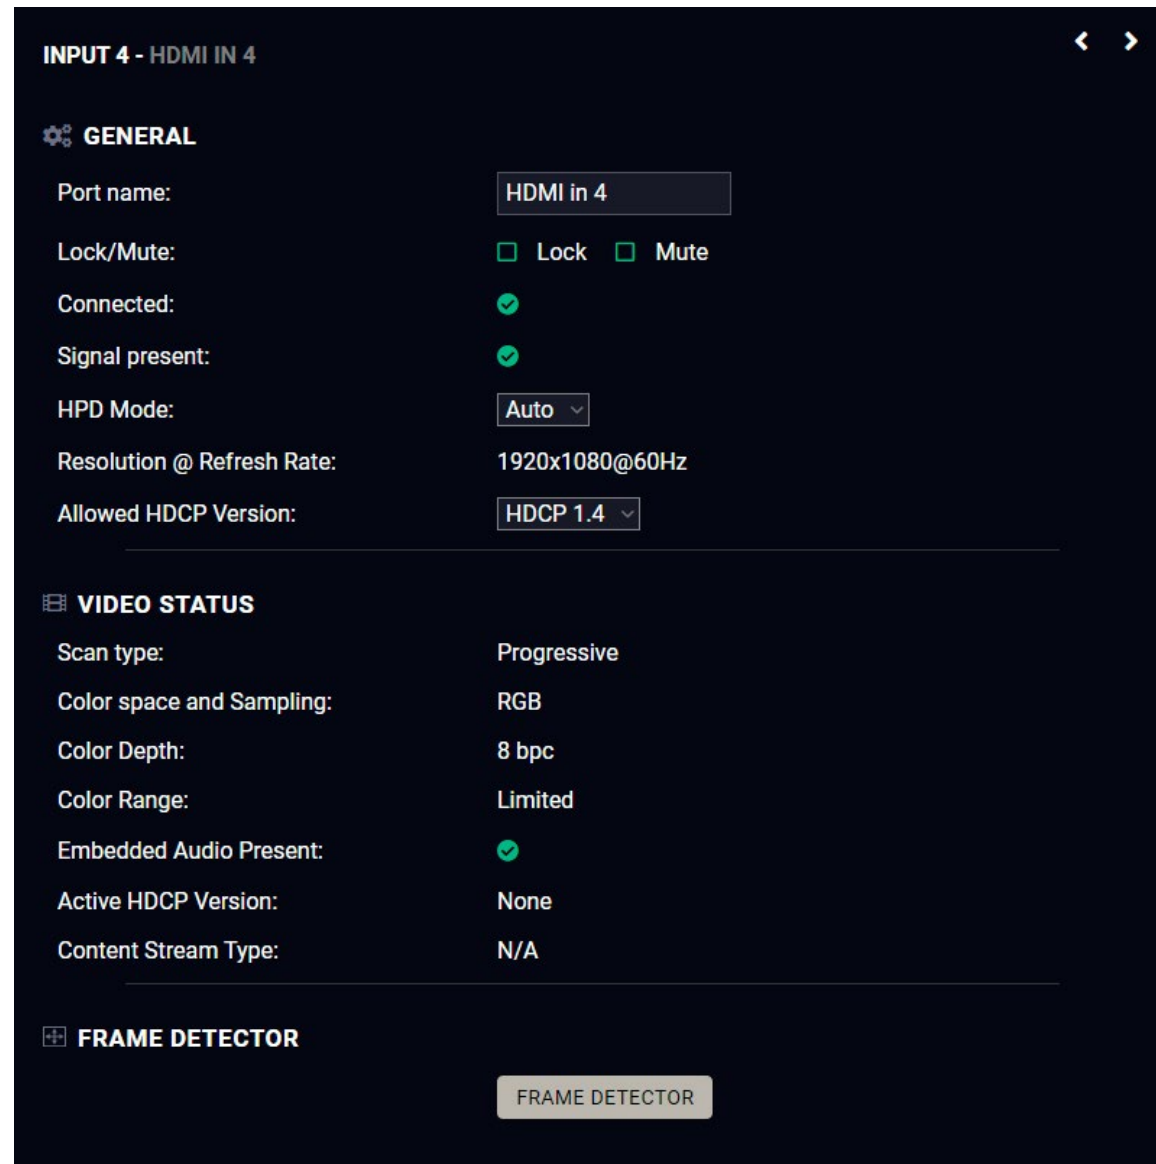

Port properties window of the HDMI video input

#### Available settings and tools

##### Port name

The name of a port can be changed by typing the new name and clicking on the **Set** button. The following characters are allowed when naming: Letters (A-Z) and (a-z), hyphen (-), underscore (\_), numbers (0-9), and dot (.). Max length: 63 characters.

##### Lock [#lock](#) [#unlock](#)

The port can be locked to the currently connected output ports by adding a tick. If the port is locked, the crosspoint state of this port cannot be changed.

**INFO:** When the locked input is switched to the output, the crosspoint state can not be changed and all inputs are locked in that line.

##### Mute [#mute](#) [#unmute](#)

The incoming signal can be muted/unmuted by adding/removing a tick. If the port is muted, no signal is transmitted from the input port.

##### Allow HDCP Version [#hdcp](#)

**ATTENTION!** HDCP 2.2 signal handling is limited up to two input ports at the same time.

- **Off:** The connected source will detect that the switcher is not HDCP-compliant and turn off authentication if the content allows it.
- **HDCP 1.4:** The connected source will detect that the switcher is compliant with HDCP 1.4, but not compliant with HDCP 2.2.
- **HDCP 2.2:** The connected source will detect that the switcher is compliant with HDCP 2.2.

##### Frame detector

For more details, see the [Frame Detector](#) section.



## 5.8.2. HDMI Video Output

**OUTPUT 1 - HDMI OUT 1** < >

**GENERAL**

Port name:

Lock/Mute:  Lock  Mute

Connected:

Signal present:

Resolution @ Refresh Rate: 1920x1080@60Hz

---

**VIDEO STATUS**

Scan type: Progressive

Color space and Sampling: RGB

Color Depth: 8 bpc

Color Range: Limited

Active HDCP Version: None

Content Stream Type: N/A

Sink Max HDCP Version: HDCP 1.4

HDCP Status: N/A

HDCP Mode:

Allowed HDCP Version: HDCP 2.2

---

**AUDIO STATUS**

Embedded Audio Present:

Audio Sampling frequency: 48 kHz

Audio Signal type: PCM

---

**OUTPUT OPTIONS**

Output 5V Enable:

Output Signal Type:

Embedded Audio Mute:  Mute

*Port properties window of the HDMI video output*

## Available settings and tools

### General

#### Port name

The name of a port can be changed by typing the new name and clicking on the **Set** button. The following characters are allowed when naming: Letters (A-Z) and (a-z), hyphen (-), underscore (\_), numbers (0-9), and dot (.). Max length: 63 characters.

#### Lock *#lock #unlock*

The port can be locked to the currently connected output ports by adding a tick. If the port is locked, the crosspoint state of this port cannot be changed.

#### Mute *#mute #unmute*

The incoming signal can be muted/unmuted by adding/removing a tick. If the port is muted, no signal is transmitted from the input port.

#### HDCP Mode *#hdc*

- **HDCP mode:** Auto / Always - The transmitter forces the source to send the signal without encryption if the content allows when Auto mode is selected; *#signaltype #hdc*

### Output Options

#### Output 5V Enable

- Auto / On / Off - The setting lets the source and the sink devices be connected – independently of the transmitted signal.

#### Output Signal Type

- Auto / DVI - The outgoing signal format can be selected from a drop-down menu.

#### Embedded Audio Mute

Add a tick to turn off the embedded audio.

### Frame detector

For more details, see the [Frame Detector](#) section.

## Autoselect

Autoselect feature makes the switching of an input to an output without human intervention possible. The crosspoint state changes based on the active input signals.

The following operation policies can be set: `#autoselect` `#videoautoselect`

**Disable autoselect:** crosspoint state change happens manually.

**First detect:** selected input port is kept connected to the output as long as it has an active signal.


**Last detect mode:** it is always the last attached input that is selected to be transmitted.

**Individual input settings:** it is always the highest priority active input that is selected to be transmitted (1- highest priority, 100- lowest priority).

Pay attention to the following settings for the proper operation of the Autoselect function:


- Be sure that all priority values are filled in;
- Be sure that all inputs are enabled with the green tick on the right side;
- Always click on the **Apply autoselect settings** button after the changes to launch the new settings.

See more details about the feature in the [The Autoselect Feature](#) section.

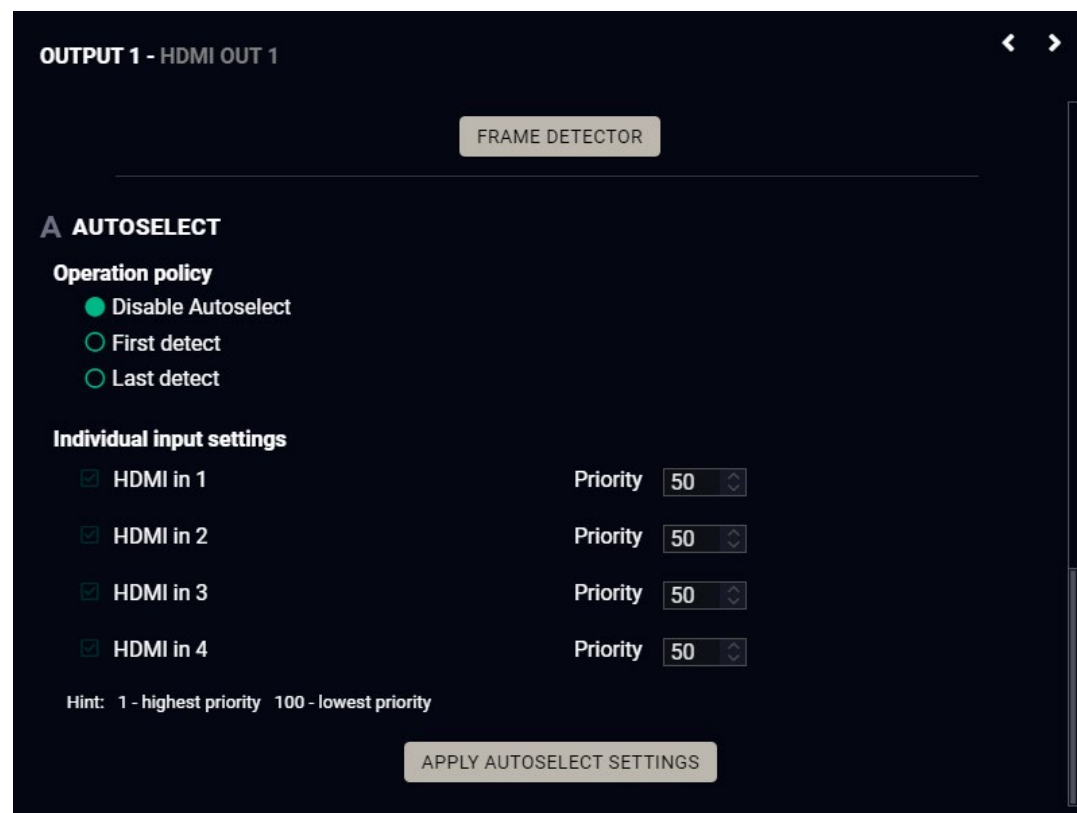

*Autoselect settings in HDMI output panel*

## 5.8.3. Embedded Audio Input

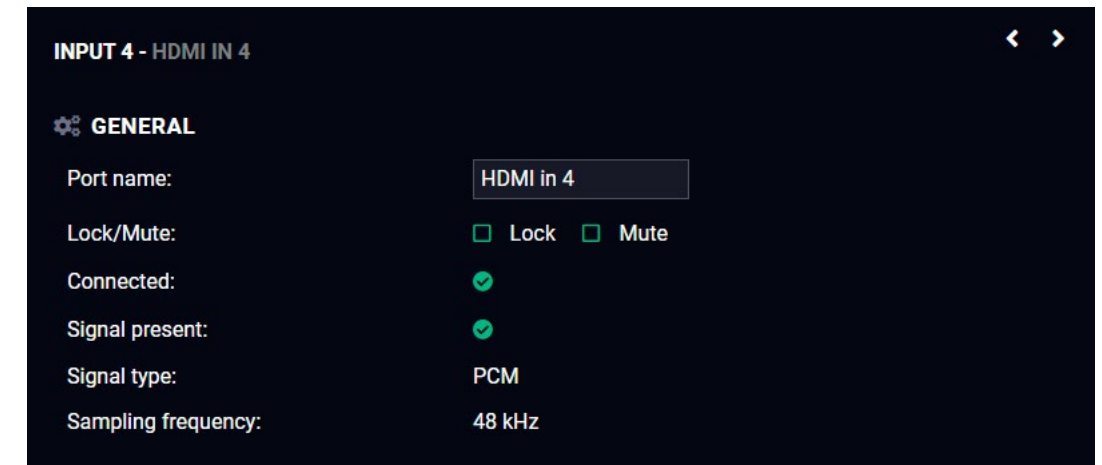

*Audio port properties window of HDMI input*

### Available settings

#### Port name

The name of a port can be changed by typing the new name and clicking on the **Set** button. The following characters are allowed when naming: Letters (A-Z) and (a-z), hyphen (-), underscore (\_), numbers (0-9), and dot (.). Max length: 63 characters.


#### Lock `#lock` `#unlock`

The port can be locked to the currently connected output ports by adding a tick. If the port is locked, the crosspoint state of this port cannot be changed.

#### Mute `#mute` `#unmute`

The incoming signal can be muted/unmuted by adding/removing a tick. If the port is muted, no audio signal is transmitted from the input port.

### 5.8.4. Analog Audio Output

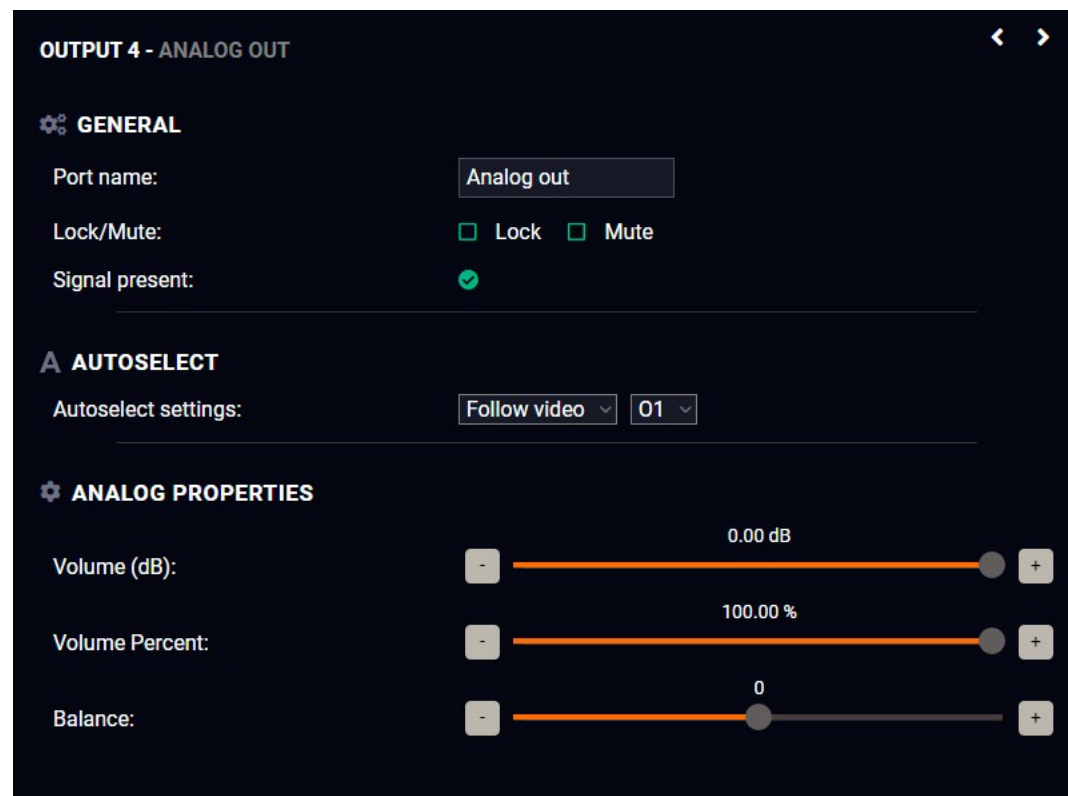

**Port properties window of the analog audio output**

**Available settings:** [#analogaudio](#) [#volume](#) [#balance](#)

- Port name
- Mute/unmute the port;
- Lock/unlock the port;
- Autoselect settings: off / follow video (O1 or O2). Follow video option means that the audio of the selected video input will be switched to the analog audio output. When the video crosspoint changes, audio crosspoint follows it.
- Volume: from 100 to 0%, in step 1% (0 dB to -95.625 dB, in step 0.375 dB (default is 0 dB));
- Balance: from -100 to +100, in step 1 (default is 0 = center).

### 5.8.5. Frame Detector

The ports can show detailed information about the signal like full size and active video resolution. This feature is a good troubleshooter if compatibility problems occur during system installation. To access this function, open the port properties window and click on **Frame detector** button. [#framedetector](#)



**Frame Detector Window**

Lightware's Frame Detector function works like a signal analyzer and makes it possible to determine the exact video format that is present on the port, thus helps to identify many problems. E.g. actual timing parameters may differ from the expected and this may cause some displays to drop the picture.

Frame Detector measures detailed timings on the video signals just like a built-in oscilloscope, but it is much more easy to use. Actual display area shows the active video size (light grey). Dark grey area of the full frame is the blanking interval, which can contain the info frames and embedded audio data for HDMI signals. Shown values are measured actually on the signal and not retrieved only from the HDMI info frames.


## 5.9. CEC Tool

The device is able to send Consumer Electronics Control (CEC) commands via the HDMI outputs. This feature is to remote control the sink device. CEC is a bi-directional communication via the HDMI cable.

#cec

**ATTENTION!** Make sure that the controlled unit is CEC-capable and this function is enabled.

**INFO:** MMX2 series devices are only capable of sending CEC commands, but not of receiving them.

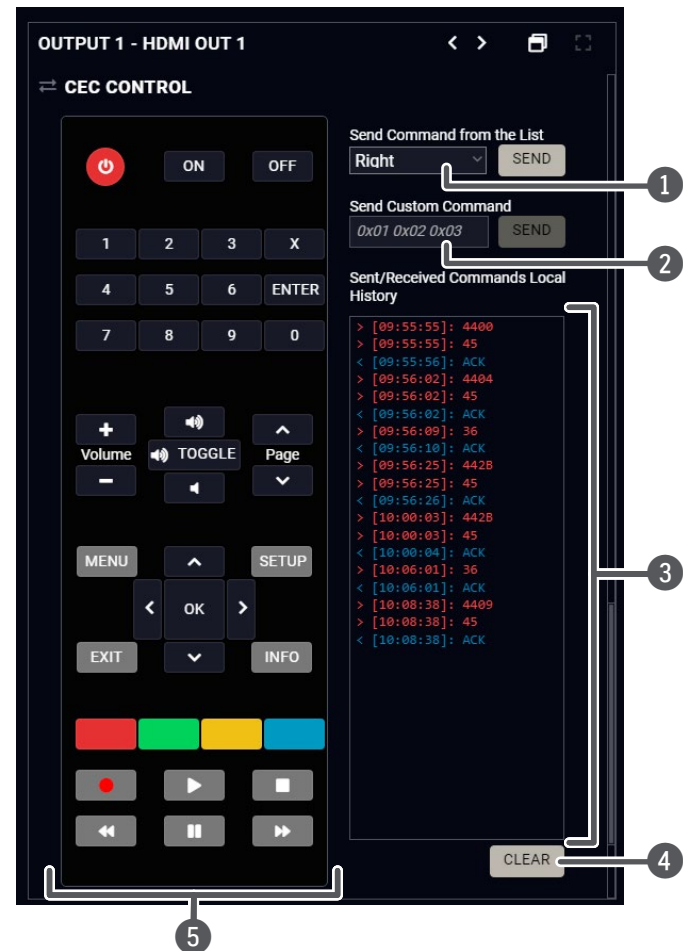


- 1 **Drop-down command list** Containing the basic CEC commands, most of them are displayed on the graphical interface too (on the left side). Click on the **Send** button to send the command.
- 2 **Custom command textbox** The text field is for sending hexadecimal commands in the indicated format to the source. Click on the **Send** button to send the command.
- 3 **Received Command box** Displays all the sent CEC commands (in red) and the received answers (in blue) with a timestamp.
- 4 **Clear button** Click on the **Clear** button to erase the content of the terminal window.
- 5 **CEC command button panel** This panel provides the quick and easy management of CEC commands. These buttons are pre-programmed with basic functions and send commands towards the sink. The communication is displayed in the Received Command box. For the list of the commands, see the [CEC Command Sending](#) section. Both the layout and the functionality are similar to the design of a remote control.

It can occur that the third-party device can receive, but not execute the command, because it is not supported by the product. Check the accepted commands in the documentation of the device.

## 5.10. EDID Management

Advanced EDID Management can be accessed by selecting the EDID menu. There are two panels: left one contains Source EDIDs, right one contains Destination places where the EDIDs can be emulated or copied.

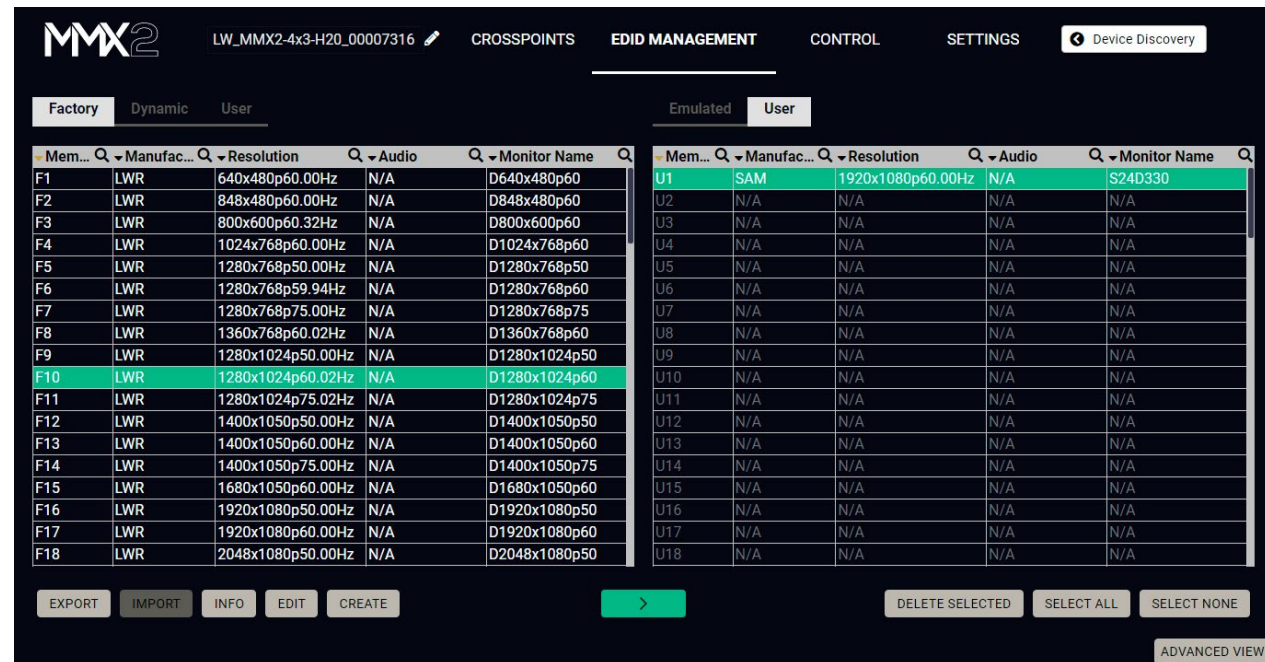

EDID Menu

### Control Buttons

	Exporting an EDID (save to a file)		Transfer button: executing EDID emulation or copying
	Importing an EDID (load from a file)		Deleting EDID (from User memory)
	Display EDID Summary window		Selecting all memory places in the right panel
	Opening Advanced EDID Editor with the selected EDID		Selecting none of the memory places in the right panel
	Opening Easy EDID Creator		

#edid

### 5.10.1. EDID Operations

#### Changing Emulated EDID

- Step 1.** Choose the desired **EDID list** on the source panel and select an **EDID**.
- Step 2.** Press the **Emulated** button on the top of the Destination panel.
- Step 3.** Select the desired **port** on the right panel (one or more ports can be selected); the EDID(s) will be highlighted with a yellow cursor.
- Step 4.** Press the **Transfer** button to change the emulated EDID.

#### Learning an EDID

The process is the same as changing the emulated EDID; the only difference is the Destination panel: press the **User** button. Thus, one or more EDIDs can be copied into the user memory either from the factory memory or from a connected sink (Dynamic).

#### Exporting an EDID

- Source EDID can be downloaded as a file (\*.bin, \*.dat or \*.edid) to the computer.
- Step 1.** Select the desired **EDID** from the Source panel (line will be highlighted with yellow).
  - Step 2.** Press the **Export** button to open the dialog box and save the file to the computer.

#### Importing an EDID

- Previously saved EDID (\*.bin, \*.dat or \*.edid file) can be uploaded to the user memory:
- Step 1.** Press the **User** button on the top of the Source panel and select a **memory slot**.
  - Step 2.** Press the **Import** button below the Source panel.
  - Step 3.** Browse the file in the opening window then press the **Open** button. Browsed EDID is imported into the selected User memory.

**ATTENTION!** The imported EDID overwrites the selected memory place even if it is not empty.

#### Deleting EDID(s)

- The EDID(s) from User memory can be deleted as follows:
- Step 1.** Press **User** button on the top of the Destination panel.
  - Step 2.** Select the desired **memory slot(s)**; one or more can be selected ("Select All" and "Select None" buttons can be used). The EDID(s) will be highlighted in yellow.
  - Step 3.** Press the **Delete selected** button to delete the EDID(s).

### 5.10.2. EDID Summary Window

Select an EDID from Source panel and press **Info** button to display EDID summary.

INFO

**GENERAL**

- EDID version: 1
- EDID revision: 3
- Manufacturer ID: LWR (Lightware Visual Engineering)
- Product ID: 0000
- Monitor serial number: Not present
- Year of manufacture: 2010
- Week of manufacture: Not Used
- Signal interface: Digital
- Separate Sync H&V: -
- Composite sync on H: -
- Sync on green: -
- Serration on VS: -
- Color depth: Undefined
- Interface standard: Not defined
- Color spaces: RGB 4:4:4
- Aspect ratio: 0
- Display size: 0 cm X 0 cm

EDID Summary Window

### 5.10.3. Editing an EDID

Select an EDID from the Source panel and press the Edit button to display Advanced EDID Editor window. The editor can read and write all descriptors, which are defined in the standards, including the additional CEA extensions. Any EDID from the device's memory or a saved EDID file can be loaded into the editor. The software resolves the raw EDID and displays it as readable information to the user. All descriptors can be edited, and saved in an EDID file, or uploaded to the User memory. For more details about EDID Editor please visit our website ([www.lightware.com](http://www.lightware.com)) and download the [EDID Editor Application note](#).

EDIT

**EDID BYTE EDITOR**

	0	1	2	3	4	5	6	7	8	9
0	00	FF	FF	FF	FF	FF	FF	00	32	F2
10	00	00	00	00	00	00	00	14	01	03
20	80	00	00	78	06	EE	91	A3	54	4C
30	99	26	0F	50	54	00	00	00	01	01
40	01	01	01	01	01	01	01	01	01	01
50	01	01	01	01	02	3A	80	D0	72	38
60	2D	40	10	2C	45	80	80	38	74	00
70	00	1E	00	00	00	10	00	00	00	00
80	00	00	00	00	00	00	00	00	00	00
90	00	00	00	FD	00	31	33	37	39	0F
100	01	0A	20	20	20	20	20	20	00	00
110	00	FC	00	44	31	39	32	30	78	31
120	30	38	30	70	35	30	00	BD		

EDID Editor Window

### 5.10.4. Creating an EDID - Easy EDID Creator

Since the Advanced EDID Editor mentioned above needs more complex knowledge about EDID, Lightware introduced a wizard-like interface for fast and easy EDID creation. With Easy EDID Creator, it is possible to create custom EDIDs in four simple steps. By clicking on the **Create** button below the Source panel, **Easy EDID Creator** is opened in a new window. For more details about EDID Editor please visit our website ([www.lightware.com](http://www.lightware.com)) and download the [EDID Editor Application note](#).

CREATE

**Select Resolution & Interface**

**Video Format**  
**Audio Format**  
**Finish**

Back Next

**SELECT RESOLUTION & INTERFACE**

Welcome to the Easy EDID Creator!

With this software you are able to create a unique EDID according to your demands. Details can be added or changed in the Advanced EDID Editor later if needed.

Please select the format type and the preferred resolution. If you don't find the proper mode in the list, use the Custom format type setting, enter the resolution and the program will estimate the best blanking times.

**Important notes:**

- If you want to send audio then you must select HDMI or DisplayPort. DVI and VGA do not support audio transmission.
- Most DVI displays are not able to process HDMI signals. If you have a DVI display, please check its specifications.
- The supported color depth will be 24bits/pixel by default.
- USB TYPE-C means DisplayPort interface over a different physical interface.

Format type: Broadcast


Resolution: 640x480p60

Interface type: VGA, DVI, **HDMI**, DisplayPort, USB TYPE-C

**EDID Creator Window**

## 5.11. Control Menu

### 5.11.1. Ethernet

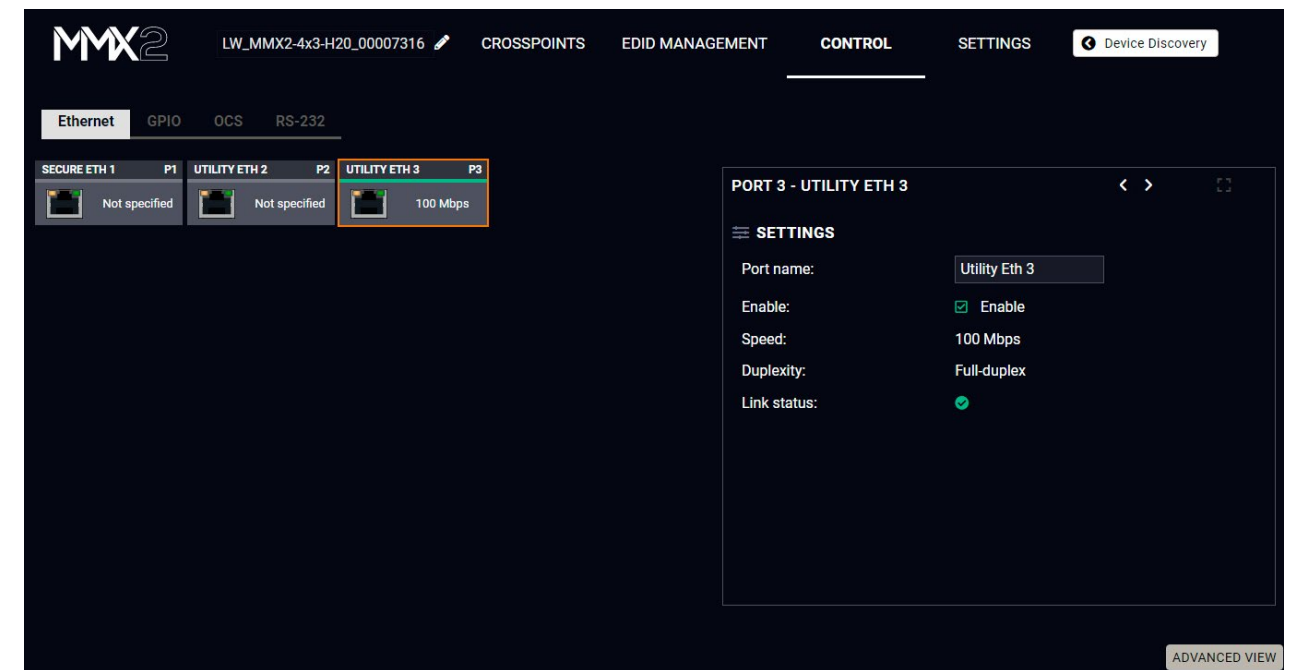

**Ethernet tab in Control menu**


Five ports are displayed in the Ethernet settings: Three of them belong to the RJ-45 Ethernet connectors. You can check the status of the Ethernet line by each ports: the speed and the duplexity of the connection. The remaining two are for configuring the Ethernet layer in the USB-C ports.

The following settings are available for each ports:


- Rename the port
- Enable / disable the port;

### 5.11.2. GPIO

The GPIO port has 6 pins, which operate at TTL digital signal levels and can be controlled by LDC or protocol commands. Select a GPIO pin under the Port settings section; the settings (pin direction and input level) are displayed on the port tiles as well. `#gpio`

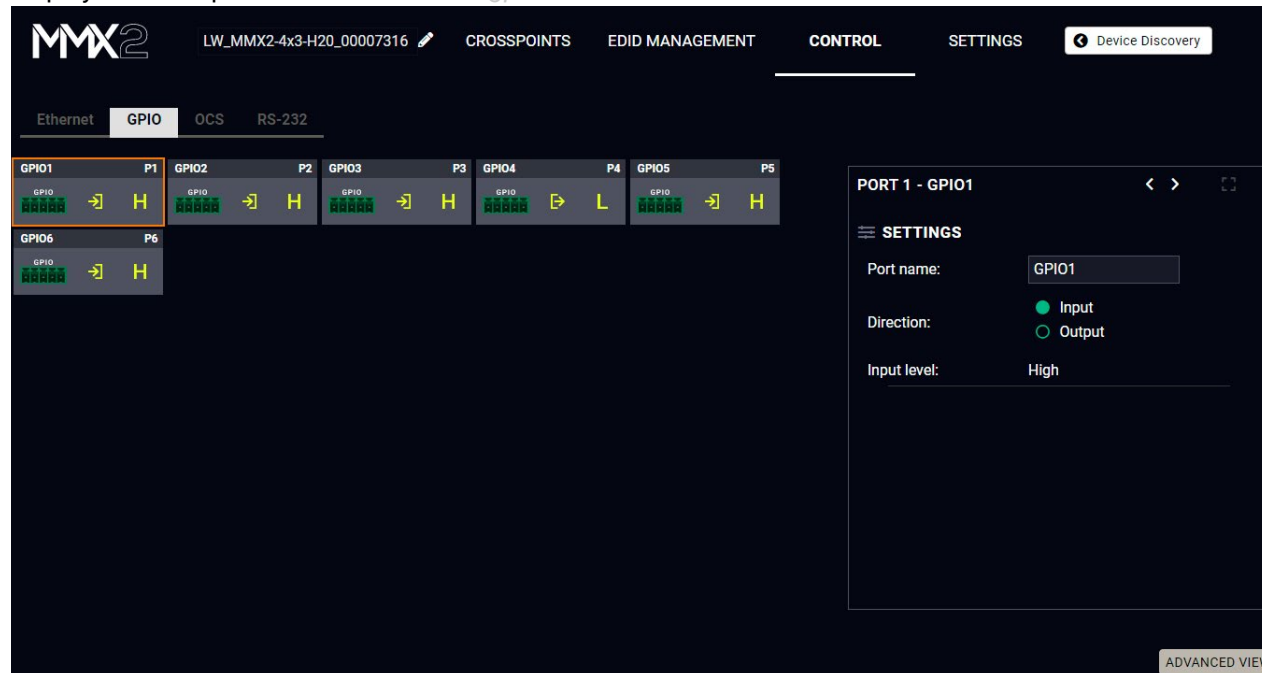

**INFO:** Output level can be set only if the pin direction is set to Output. In case of input direction, the output level setting and the **Toggle** button is not available.

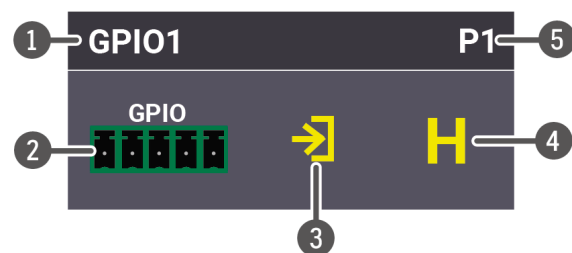


- ① GPIO pin name
- ② GPIO Port symbol
- ③ Pin direction:
  - ➔ Input
  - Output
- ④ Level indicator:
  - L: Low
  - H: High
- ⑤ GPIO Port number

#### Interval (only for Output direction)

Interval section is designed for setting the chosen GPIO pin to the specified level for a specified time. Configure the **Duration** time and the **Logic level** of the desired value. Confirm by clicking on the **Set interval** button.

### 5.11.3. OCS - Occupancy Sensor

The OCS sensor has 3 pins, where the first pin is a 24V logic input. The default state is high. Different type of sensors exist: some send high level, some send low level to this input when the room is occupied. Active-high or active-low logic might be configured for this port in LDC to support them.

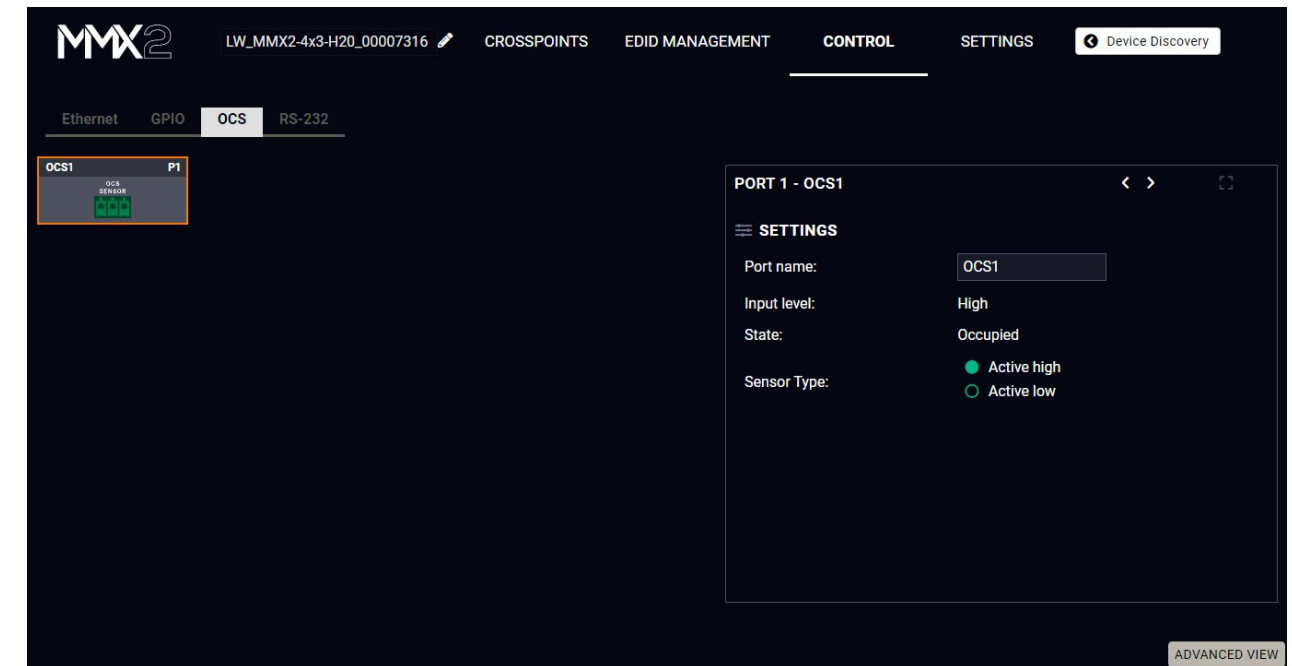

**Input level** refers to the current input signal level of the first pin.

**State** value can be free or occupied, depending on the Sensor type setting and the Input level (e.g. when the sensor type is Active high and the input value is high, the state reports 'Occupied').


**Sensor type** can be active high/active low, and this defines whether the low or high input level means the occupancy.

`#ocs`



### 5.11.4. RS-232

**DIFFERENCE:** MMX2-4x1-H20 model is assembled with one local RS-232 port.

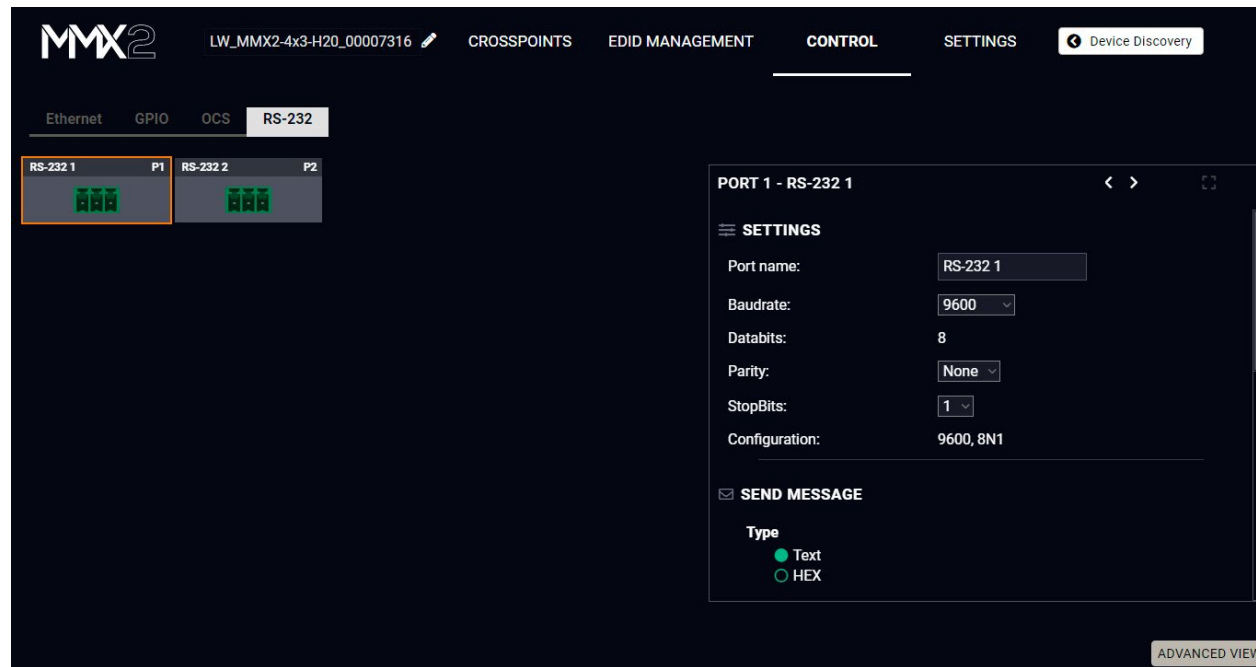


RS-232 tab in Control menu

The following settings and functions are available: `#rs-232`  
`#serial`

- **Baud rate:** 9600, 14400, 19200, 38400, 57600, 115200;
- **Data bits:** 8;
- **Parity:** None, Odd, or Even; `#rs232`

#### Send Message Section


The serial message sending is achieved by Lightware REST API, and it can be in text or hexadecimal format. The CR/LF (Carriage Return/Line Feed) can be enabled optionally.

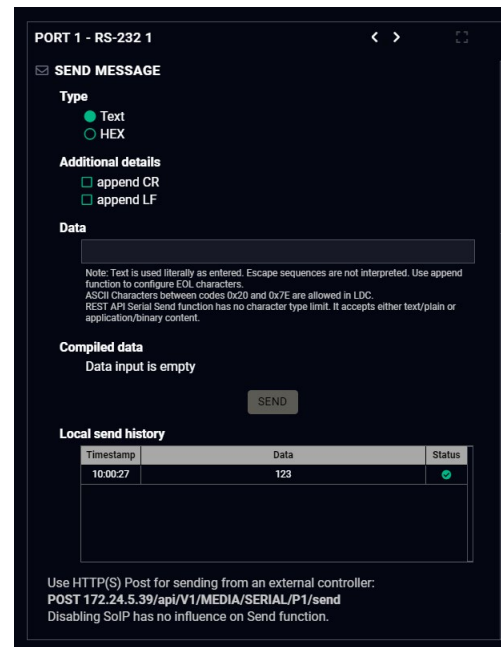

## 5.12. Settings Menu

### 5.12.1. Status

The most important hardware and software related information can be found on this tab: hardware and firmware version, serial numbers, MAC addresses, temperatures, and voltage information. Device label can be changed to a unique description by the **Set** button.

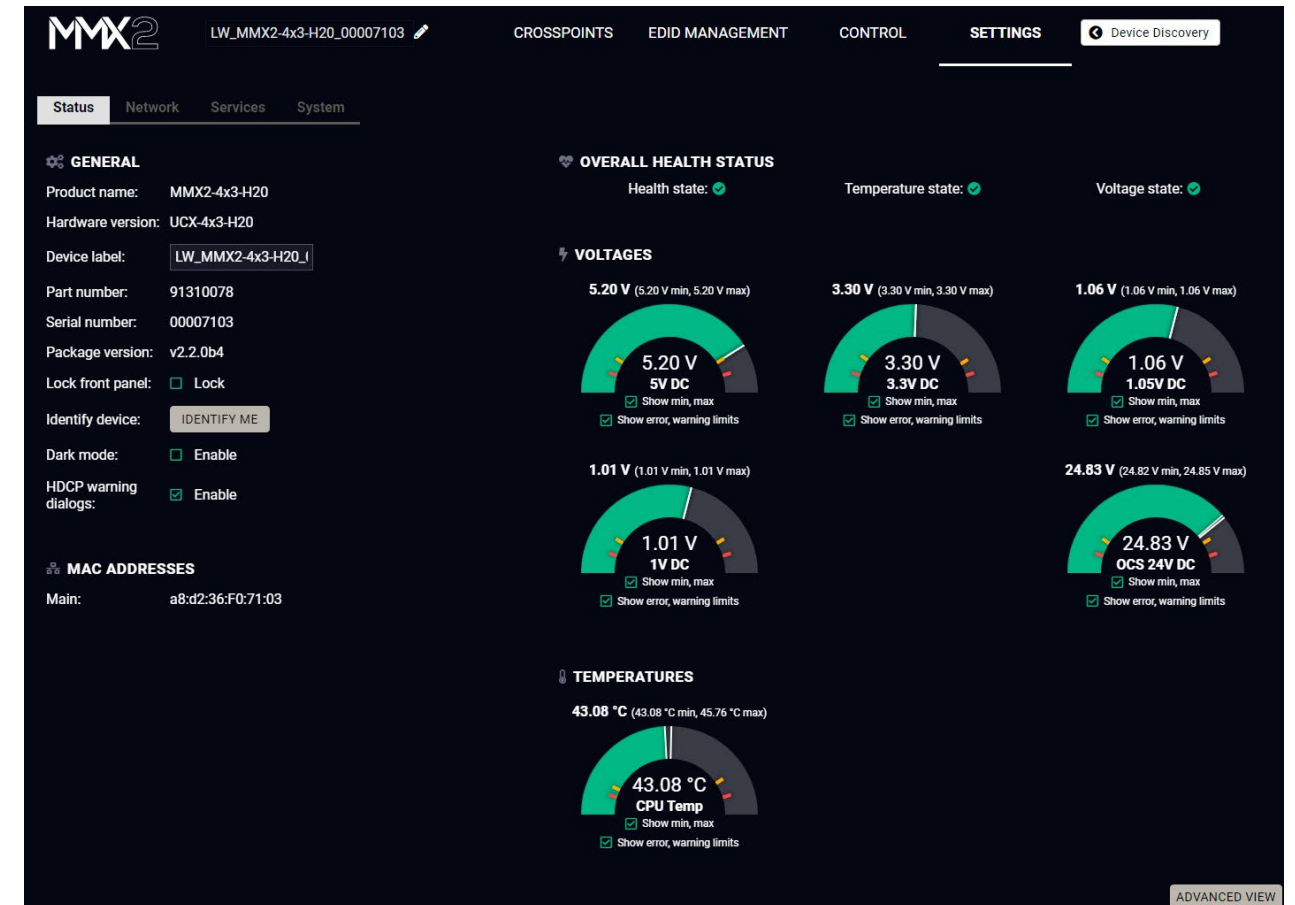


Status tab in Settings menu

You can disable the functionality of the front panel buttons by marking the Lock front panel option. This is same method of the control lock enabled by the front panel buttons. See the details in the [Control Lock](#) section. Clicking on the **Identify me** button results in the blinking of the status and crosspoint LEDs in green for 10 seconds. The feature helps to identify the device itself in the rack shelf.

**Dark mode enable:** When Dark mode is enabled, all LEDs on the unit are switched off (after 60 seconds by default) if no buttons are pressed. Pressing any button brings back the status info on the LEDs without performing the function of the button itself.

`#darkmode` `#buttonlock` `#lockbutton` `#devicelabel`  
`#label` `#producttype` `#firmwareversion` `#status` `#serialnumber`

## 5.12.2. Network

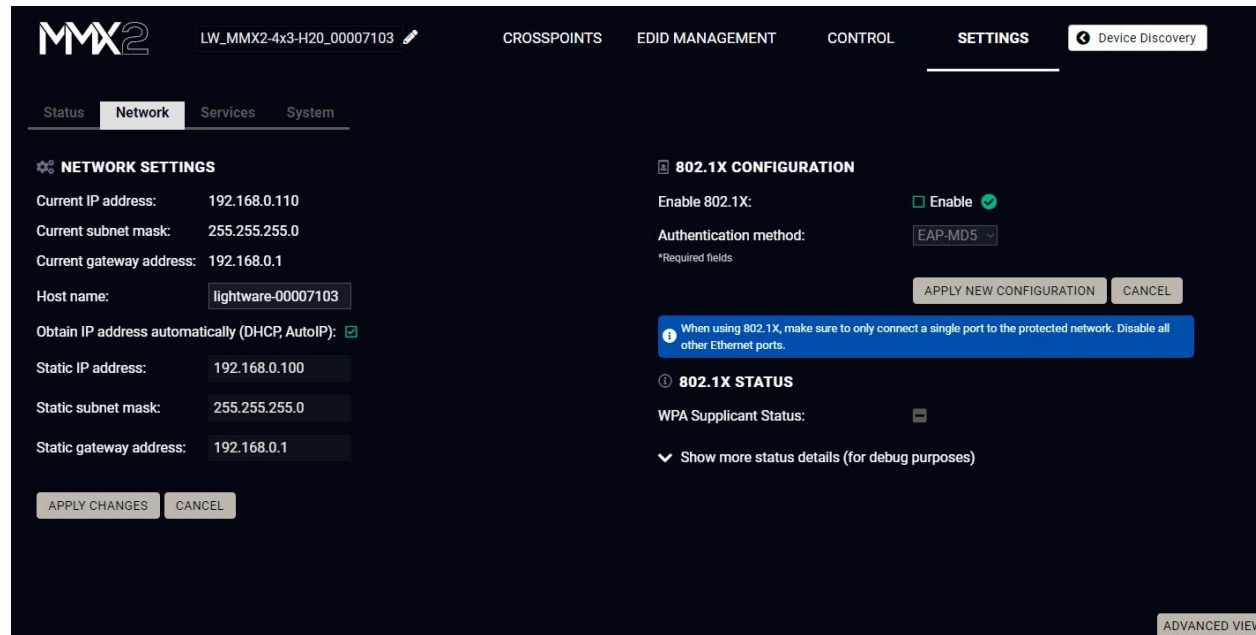

**Network tab in Settings menu**

### Network Settings

IP address and DHCP settings can be set on this tab. Always press the **Apply settings** button to save changes.

When the host name is modified, clicking on the **Restart http(s) services** button is also needed.

**INFO:** New certificate is generated after the hostname changing.

## 802.1x Configuration


### Authentication Process

You will find the 802.1x authentication section in the bottom left corner.

You can enable authentication by ticking in the Enable box. Once 802.1x authentication is enabled, you can choose the authentication method from the drop-down menu: **EAP-MD5** or **EAP-TLS**.

**DIFFERENCE:** From firmware version v2.11.0, EAP-MD5 authentication is unavailable.

When using EAP-MD5, authentication will require an Identity and a Password to gain access to the secure network.

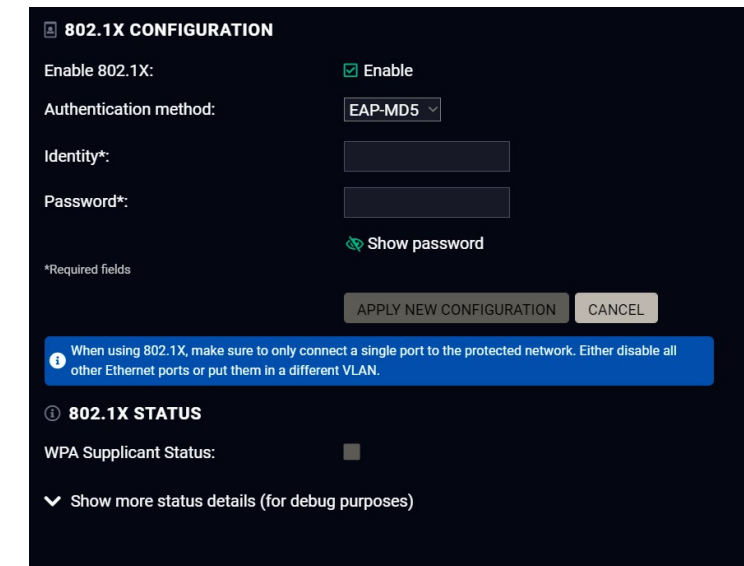

With EAP-TLS, you will also need CA and Client certificates, a Client Private Key, and a password for the Key.

Status Network System

### 802.1X CONFIGURATION

Enable 802.1X:  Enable

Authentication method: EAP-TLS

Identity\*:

CA Certificate\*: No file selected

Client Certificate\*: No file selected

Client Private Key\*: No file selected

Client Private Key Password:

[Show password](#)

\*Required fields

When using 802.1X, make sure to only connect a single port to the protected network. Either disable all other Ethernet ports or put them in a different VLAN.

### 802.1X STATUS

After entering every necessary information, click on the **Apply new configuration** button, and the authentication process starts.

### 802.1X CONFIGURATION

Enable 802.1X:  Enable ✓

Authentication method: EAP-TLS ✓

Identity\*: (Present in current config) ✓

CA Certificate\*: (Present in current ...  ✓

Client Certificate\*: (Present in current ...  ✓

Client Private Key\*: (Present in current ...  ✓

Client Private Key Password: (Present in current config) ✓


[Show password](#)

\*Required fields

If every component is correct, the device will gain access to the secure LAN.

### 5.12.3. Service

The Services tab is available from LDC version v2.2.0.

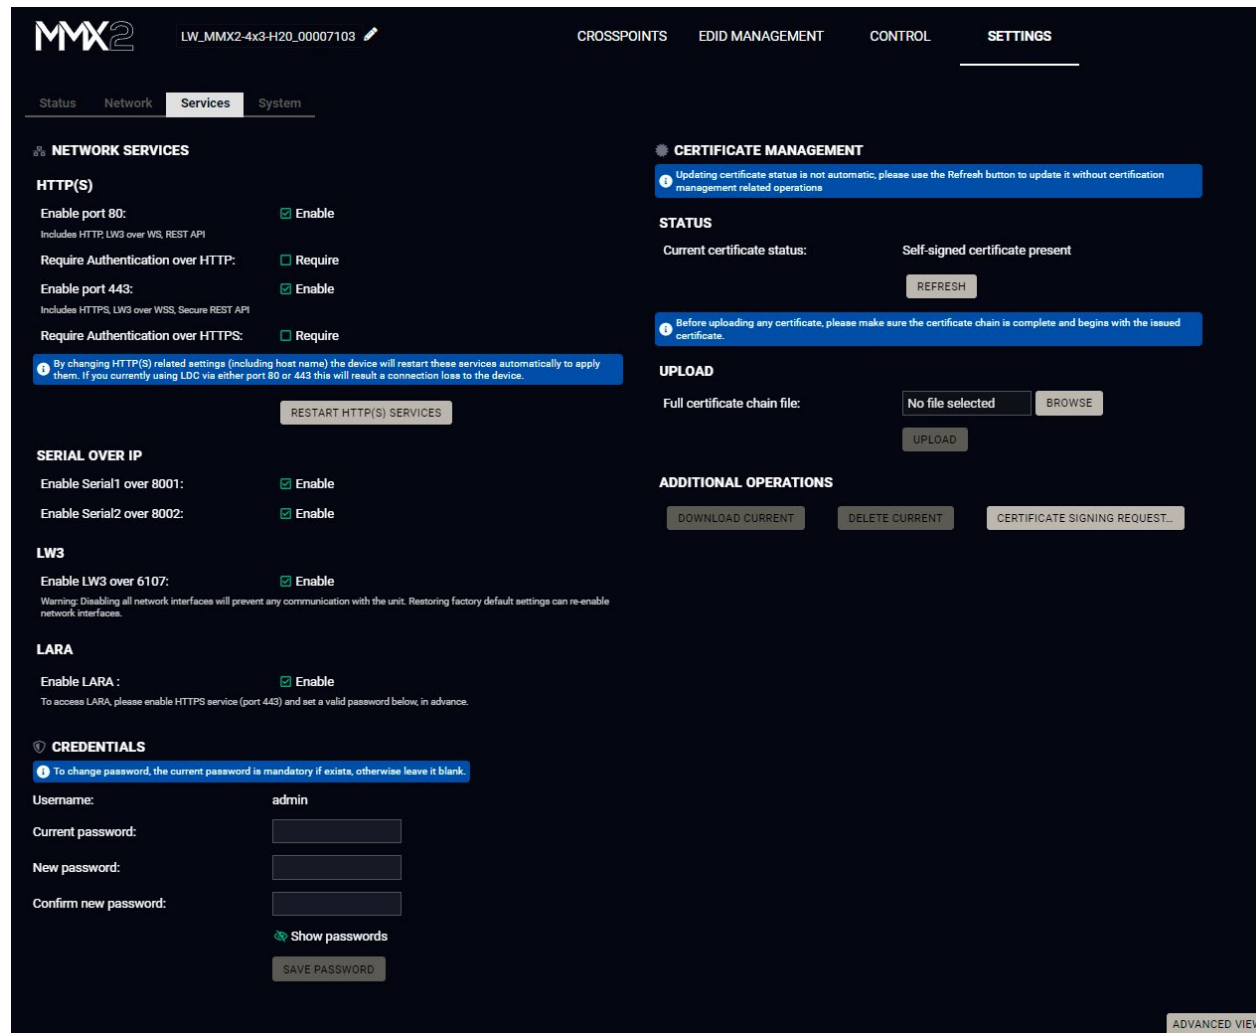

Service tab in Settings menu

#### Network Services

##### HTTP/HTTPS

MMX2 series switcher provides HTTP/HTTPS server services on its 80 and 443 port to make it accessible over WebSocket (WS), LW3 protocol, using Lightware Device Controller and REST API for device control (see the detailed list about the additional available features in the summary table of the [Lightware Advanced Room Automation \(LARA\)](#) section).

HTTPS protocol encrypts the transferred data to keep it protected. For more details about the HTTPS, see the [Encryption \(HTTPS, WSS\)](#) section.

- **Enable/Disable HTTP/ HTTPS port:** To ensure the secure data traffic, the HTTP port (80) can be disabled, and the all the information can be transferred via HTTPS (443 port).

80 or 443 port is necessary to upload/download UserScripts, log and clone files so one of them should be opened to reach these functions.

**DIFFERENCE:** UserScripts are only available with up to firmware version v1.4.4. From firmware version v1.5.0, LARA replaces functions previously managed by UserScripts.

**ATTENTION!** Please ensure proper time and date setting in the device because it affects the self-signed certificate (SSL) generation when using WSS or HTTPS. Improper time and date setting may lead to certificate rejection.

- **Require Authentication over HTTP/HTTPS:** authentication helps limit the access to the device by setting a username (admin) and password. For more details, see the [Basic Authentication](#) section. No password is set by default, the authentication can be enabled after setting a password.
- **Restart HTTP(S) Services** is required after the authentication settings changed.

##### Serial over IP

The signal route of the serial- IP transmission can be broken by disabling the serial over 8001 or 8002 port. For more details about the RS-232, see the [Serial Interface](#) section.

##### LW3

**Enable LW3 over 6107:** LW3 protocol commands, Lightware Device Controller software.

**WARNING!** Lightware Device Controller software operates on 6107 port, when it is disabled, the MMX2 series switcher can be controlled only with protocol commands via http(s). [Reset to Factory Default Settings](#) can re-enable the network interfaces.

##### LARA

LARA can be enabled by ticking in the box after enabling HTTPS and setting a password, which can be done below.

##### Credentials

**DIFFERENCE:** From firmware version v2.11.0 and LDC version v2.8.0, password history is maintained in authentication, not allowing for the last 10 passwords to be set again.

The authentication password can be set here for HTTP/HTTPS ports. UTF-8 characters are allowed. Min length: 10 characters, max length: 100 characters. The password string can not be queried. `#password`

**ATTENTION!** If a wrong password is entered during login five times in a row, all login attempts are denied for 15 minutes.

##### New Password

**DIFFERENCE:** From firmware version v2.1.0, the old password is also required when changing the password.

**ATTENTION!** Authentication feature in MMX2 series is not equal to the Cleartext login feature in the Advanced Control Pack in the TPS family extenders.

`#portblock` `#network` `#http` `#https`

## Certificate Management

**DIFFERENCE:** This feature is available from firmware version v2.2.0.

You can upload certificates signed by the Certificate Authority (CA) to provide secure connection to the devices with the webLDC.

To download a Certificate Signing Request (CSR), follow these steps:

**Step 1.** Navigate to the Settings menu, Services tab and click on the **Certificate Signing Request** button.

**Step 2.** Enter the data required for the authentication process. It is important to provide all information related to your organization, because it will be used to verify your identity.

**Step 3.** Once all the necessary data has been entered, the file can be downloaded via the button in the bottom, and sent for signing.

**Step 4.** When the CA signs the certificate, it will create a .pem file, which then can be uploaded onto the device.


**Step 5.** After uploading, press the **Refresh** button in the Certificate Management section and the signed certificate shall be active.

Please be aware that the certificate will use the device's own private key and will not work for any other device. Each device must have its own certification file.

*The certificate signing request form*

Information	Description	Example
Common Name	The domain name you wish to secure.	www.example.com
Organization Name	The legal name of the company or organization, any suffix included.	Lightware Visual Engineering PLC
Organizational Unit	The name of the internal organizational department/division.	IT
Locality	The name of the city, town, village etc. of the organization.	Budapest
State	Province, region, county or state, not abbreviated.	Pest county
Country	The country of the organization can be chose from the drop-down menu.	Hungary
Email Address	The contact address of the certificate administrator or the IT department of the company.	example@lightware.com


In the Subject Alt Name(s) field you can enter additional information for more hosts to be certified with one SSL file. The information type can be chosen from the drop down menu. You can have several Subject Alt Name fields.

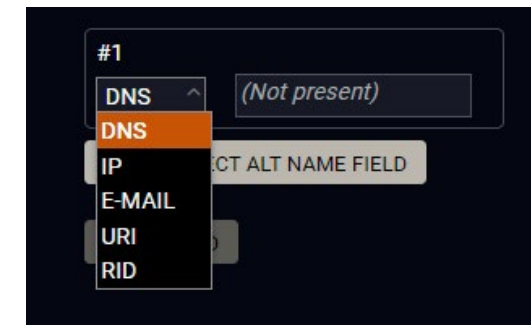

You can enter the following information in the Subject Alt Name field:

- DNS
- IP address
- E-mail address
- URI
- RID

### 5.12.4. System

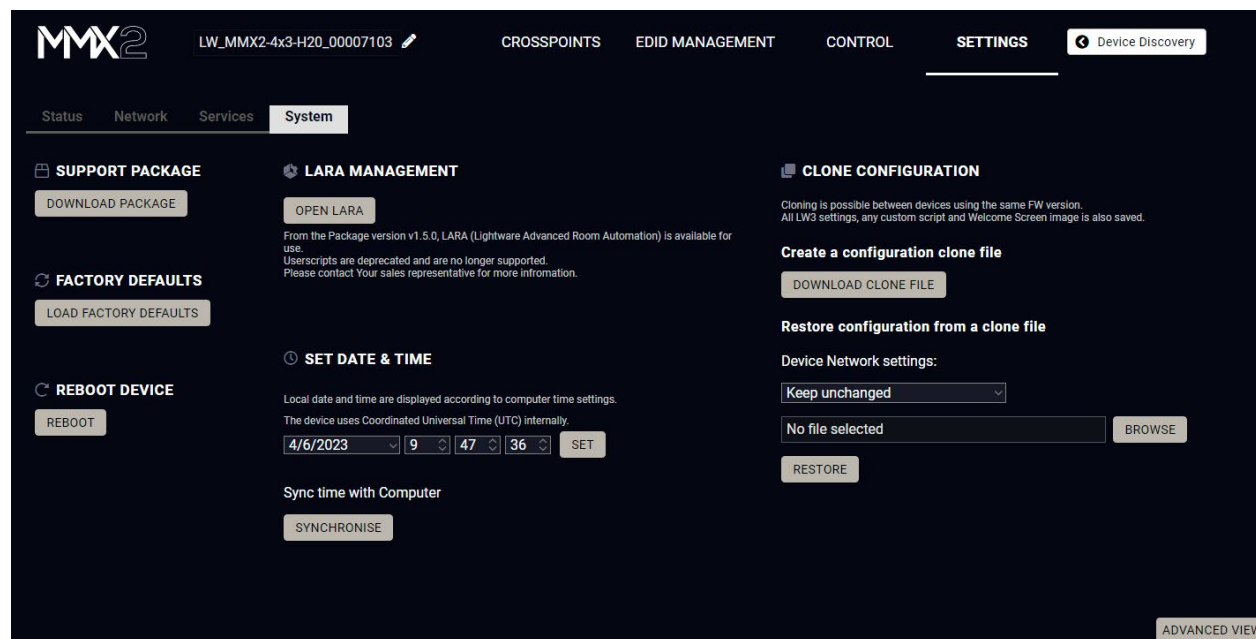

System tab in Settings menu

The following functions are available under System tab:

- **Support package** - saving a log file of the device, helps during the troubleshooting process
- **Load factory defaults** - recalling factory default settings and values. All factory default settings are listed in the [Factory Default Settings](#) section.
- **Reboot** - rebooting the system.
- **Set time** - (internal) clock of the switcher, which is used for logging events.
- Pressing the **Sync with Computer** button is a quick and easy way to set the time. `#factory #log #systemlog #reboot #restart`

**ATTENTION!** Please ensure proper time and date setting in the device, because it affects the self-signed certificate (SSL) generation when using WSS or HTTPS. Improper time and date setting may lead to certificate rejection.

#### Script management

This interface is for running custom zipped file which is made by Lightware for special request.

Add a tick to enable the **Run script**. It means that the script runs until another script is uploaded or this function is disabled.

Click on the **Upload File** to browse a zipped file. It will replace the previous one.

**DIFFERENCE:** UserScripts are only available with up to firmware version v1.4.4. From firmware version v1.5.0, LARA replaces functions previously managed by UserScripts.

#### LARA management

The LARA interface can be opened by clicking on the Open LARA button.

**DIFFERENCE:** LARA is available in UCX devices from firmware version v1.5.0.

#### Clone configuration

Clone configuration makes saving all the LW3 settings, custom scripts and welcome screen image and uploading them to another device possible.

**ATTENTION!** Please note that clone configuration function operates properly when the same firmware version is installed on the devices.

**ATTENTION!** If the device that the clone configuration is created on is password protected, the devices where this file is uploaded will also ask for a password. However, as passwords are not saved in the configuration file, the password is reset to **admin**.

#### Create a configuration clone file

Click on the **Download Clone File** button to save the setting to the computer.

#### Restore a configuration from a clone file

**Step 1.** Choose the desired network setting from the drop down menu:

- Keep unchanged.
- Restore from clone file (hostname will change, because the hostname property is also cloned from the original device and it can affect the generated certificates of the 443 port).
- Set to DHCP mode.
- Set to custom non-DHCP mode (in this case additional settings required: IP Address, Subnet Mask, Gateway Address).


**INFO:** The network settings relates to Static or DHCP setting/ IP address/ Subnet mask/ Gateway address and the hostname property. Network service settings (enable http(s) ports, authentication etc.) will be always restored.

**Step 2.** Click on the **Select file** button to browse a clone file from the PC.

**Step 3.** The cloning process will start by clicking on **Restore** button.

See the entire list of the saved data in the backup file in the [Content of the Backup File](#) section.

### 5.13. Advanced View Window

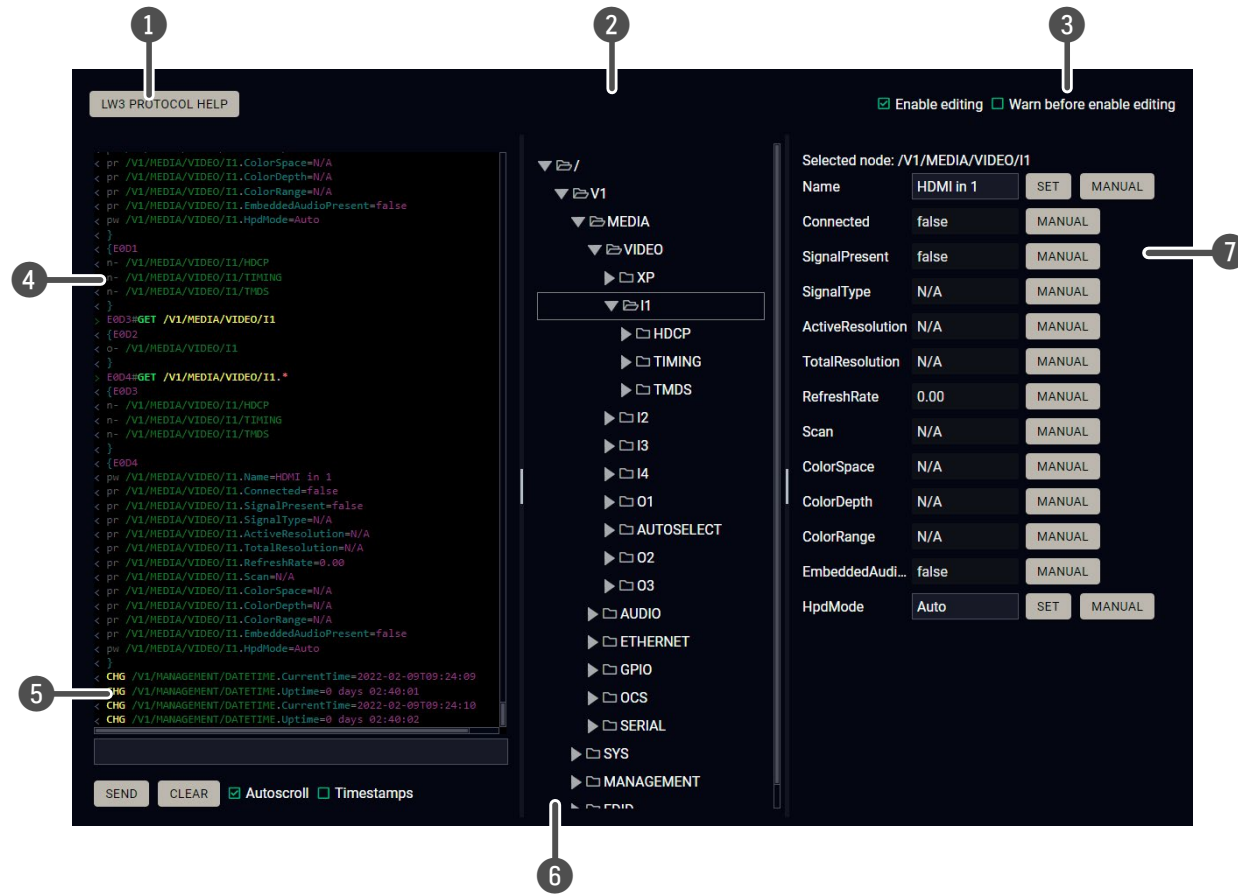

- 1 **LW3 protocol help** Pushing the button results in a help window opening, which describes the most important information about LW3 protocol commands in HTML format.
- 2 **Edit mode** The default appearance is the read-only mode. If you want to modify the values or parameters, tick the option. You will be prompted to confirm your selection.
- 3 **Warning mode** If this is checked, a warning window pops up when you enable Edit mode.
- 4 **Terminal window** Commands and responses with time and date are listed in this window. Sent command starts with '>' character, received response starts with '<' character. The color of each item depends on the type of the command and response. The content of the window can be emptied by the **Clear** button. If the **Autoscroll** option is ticked, the list is scrolled automatically when a new line is added.
- 5 **Command line** Type the desired command and execute it by the **Send** button. Clear all current commands and responses in the Terminal window by the **Clear** button. The commands typed in this line are not escaped automatically.
- 6 **Protocol tree** LW3 protocol tree; select an item to see its content.
- 7 **Node list** Correspondent parameters and nodes are shown that are connected to the selected item in the protocol tree. The commands typed in these fields are escaped automatically.
  - #advancedview*
  - #terminal*
  - Manual button:** Manual (short description) of the node can be called and displayed in the terminal window.
  - Set button:** Saves the value/parameter typed in the textbox.
  - Call button:** Calls the method, e.g. reloads factory default settings.

# 7

## Lightware REST API Reference

The device can be controlled through standard HTTP(S) requests to ensure the control functions from web browsers or terminal program.

- ▶ [OVERVIEW](#)
- ▶ [INSTRUCTIONS FOR THE TERMINAL APPLICATION USAGE](#)
- ▶ [PROTOCOL RULES](#)
- ▶ [REST API SECURITY](#)
- ▶ [SYSTEM COMMANDS](#)
- ▶ [VIDEO PORT SETTINGS - GENERAL](#)
- ▶ [CEC COMMAND SENDING](#)
- ▶ [AUDIO PORT SETTINGS](#)
- ▶ [EDID MANAGEMENT](#)
- ▶ [ETHERNET PORT CONFIGURATION](#)
- ▶ [NETWORK SECURITY](#)
- ▶ [SERIAL PORT CONFIGURATION](#)
- ▶ [SERIAL PORT MESSAGING](#)
- ▶ [GPIO PORT CONFIGURATION](#)
- ▶ [OCS PORT CONFIGURATION](#)
- ▶ [UPDATING THE DEVICE VIA REST API](#)
- ▶ [LIGHTWARE REST API QUICK SUMMARY](#)



## 6.1. Overview

The Lightware REST API is designed to provide a platform-free interface, where the MMX2 series switchers can be controlled by HTTP requests. REST API is a software architectural style based on HTTP protocol, so it can be used via web browser, Node.js, terminal programs.


The MMX2 series device provides a REST API server where most of the LW3 commands are available (for more details, see the [Lightware REST API vs. LW3 Protocol](#) section).

Lightware devices can be controlled with LW3 protocol commands (for more details, see the [LW3 Programmers' Reference](#)), LW3 protocol consist of read-only, read-write properties and methods, which operate the same way as REST API GET/POST methods. This is not a new protocol, the LW3 tree structure became available via HTTP(s).

## 6.2. Instructions for the Terminal Application Usage

### 6.2.1. Web Browser Plugins

REST API interface can be easily accessed via a web browser's plugin, see the example below:

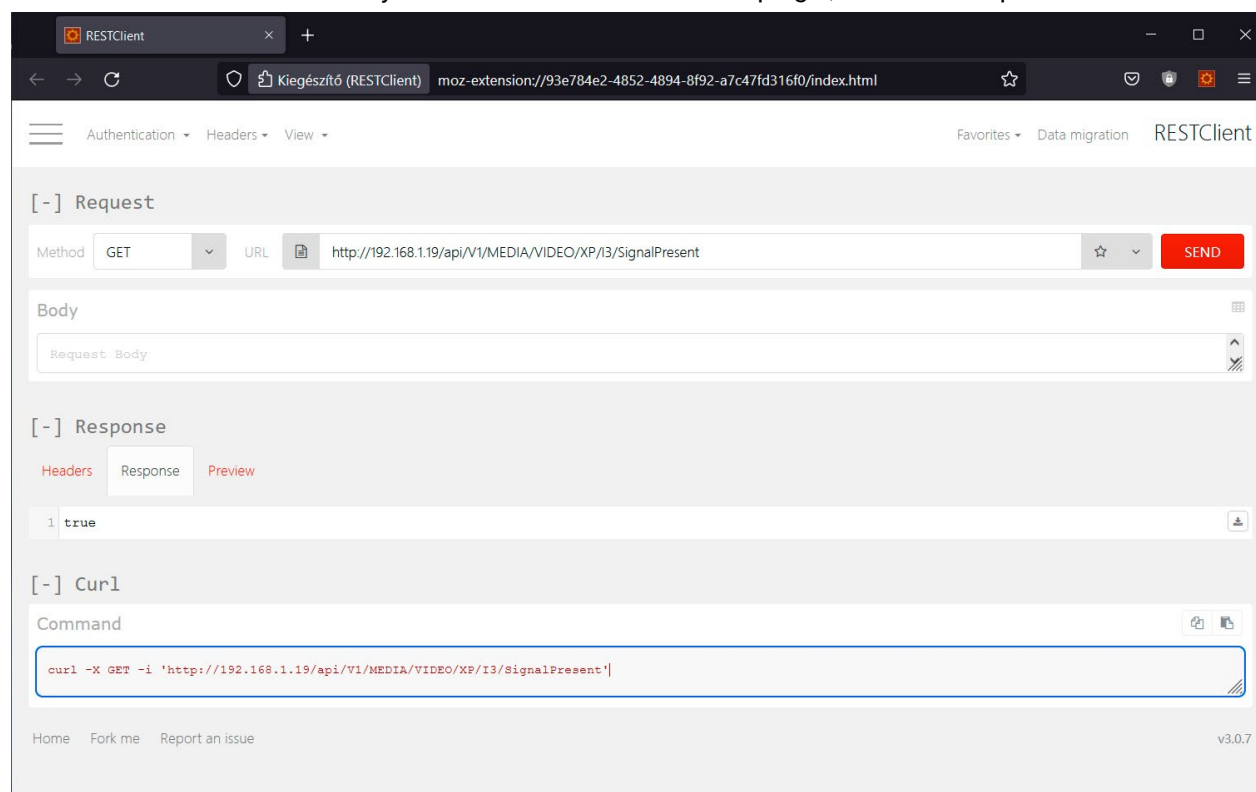

**RESTClient plugin for Mozilla Firefox**

### 6.2.2. Terminal Application

The REST API requests can be applied to the switcher using a terminal application. You need to install one of them to your control device, for example, Putty, CLI or Curl. *#terminal*


#### Curl

**Curl** is a command line tool that can also connect to the MMX2 REST SERVER and display communication in a terminal window. It supports data transferring with HTTP and HTTPS standards and handles the basic authentication (username and password) in Windows® and Linux operating systems. Multi-line commands are also accepted, so a script can be stored in a .txt file for future reference.

Check if the Curl package is installed on your system. Type into your console: `curl`. When the answer is 'curl: try 'curl --help' for more information', curl is installed.

Some web browser plugins (e.g. REST Client) display the curl version of the sent request.

Once the terminal window is opened, you can enter the commands. Some typical examples are listed in the following section.

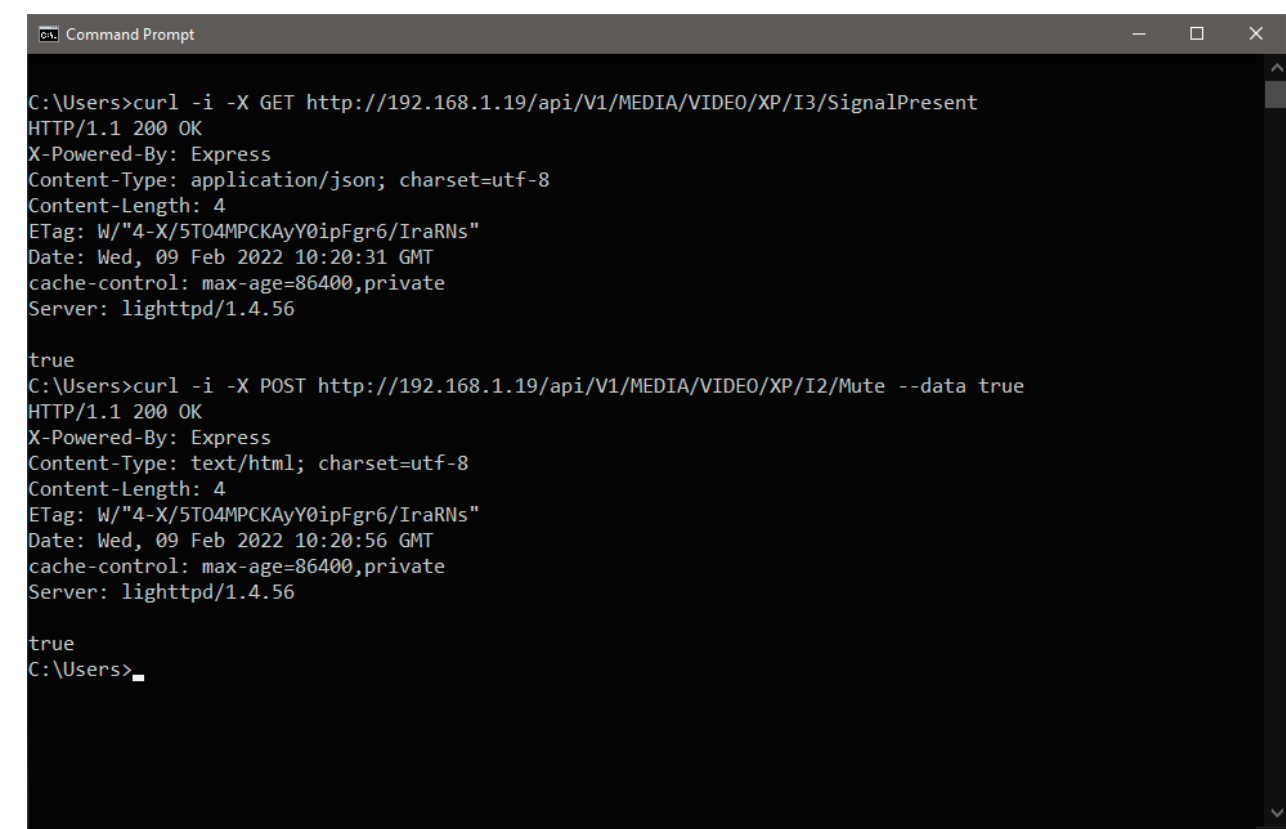

**REST API communication in a command line window**

**GET Command Example**

Query the Signal Presence

```
curl -i -X GET <ip>/api/<NodePath>/<PropertyName>
```

```
C:\Users>curl -i -X GET http://192.168.0.55/api/V1/MEDIA/VIDEO/XP/I2/SignalPresent
HTTP/1.1 200 OK
X-Powered-By: Express
Content-Type: application/json; charset=utf-8
Content-Length: 5
ETag: W/"5-fLbvuyullyqbUJdcl1F/4U0SywQ"
Date: Sat, 13 May 2034 13:39:24 GMT
cache-control: max-age=86400,private
Server: lighttpd/1.4.56

false
```

**POST Command Example 1.**

Set the Mute State

```
curl -X POST -i <ip>/api/<NodePath>/<PropertyName> --data <value>
```

```
C:\Users>curl -X POST -i http://192.168.0.55/api/V1/MEDIA/VIDEO/XP/I2/Mute --data true
HTTP/1.1 200 OK
X-Powered-By: Express
Content-Type: text/html; charset=utf-8
Content-Length: 5
ETag: W/"5-hg914ZeUflab5o9bn2uUeaPo3CI"
Date: Sat, 13 May 2034 13:48:09 GMT
cache-control: max-age=86400,private
Server: lighttpd/1.4.56

true
```

**POST Command Example 2.**

Switch video crosspoint

```
curl -X POST -i <ip>/api/<NodePath>/<PropertyName> --data <value>
```

```
C:\Users>curl -X POST -i http://192.168.0.55/api/V1/MEDIA/VIDEO/XP/switch --data I2:01
HTTP/1.1 200 OK
X-Powered-By: Express
Content-Type: text/plain; charset=utf-8
Content-Length: 2
ETag: W/"2-n009QiTiwXgNtWtBJezz8kv3SLc"
Date: Sat, 13 May 2034 14:02:01 GMT
cache-control: max-age=86400,private
Server: lighttpd/1.4.56

OK
```

**POST Command with Basic Authentication Example**

Switch video crosspoint

```
curl --user <username>:<password> -X POST -i <ip>/api/<NodePath>/<PropertyName>
--data <value>
```

```
C:\Users>curl --user admin:pwd -X POST -H -i http://192.168.0.110/api/V1/MEDIA/VIDEO/XP/switch
--data I2:01

OK
```

**HTTPS Command Example 2.**

Switch video crosspoint


```
curl -X POST -k -i <ip>/api/<NodePath>/<PropertyName> --data <value>
```

```
C:\Users>curl -X POST -k -i https://192.168.0.110/api/V1/MEDIA/VIDEO/XP/switch --data I2:01
HTTP/1.1 200 OK
X-Powered-By: Express
Content-Type: text/plain; charset=utf-8
Content-Length: 2
ETag: W/"2-n009QiTiwXgNtWtBJezz8kv3SLc"
Date: Sun, 28 May 2034 12:28:20 GMT
cache-control: max-age=86400,private
Server: lighttpd/1.4.56

OK
```

## 6.3. Protocol Rules

### 6.3.1. Command Structure Example

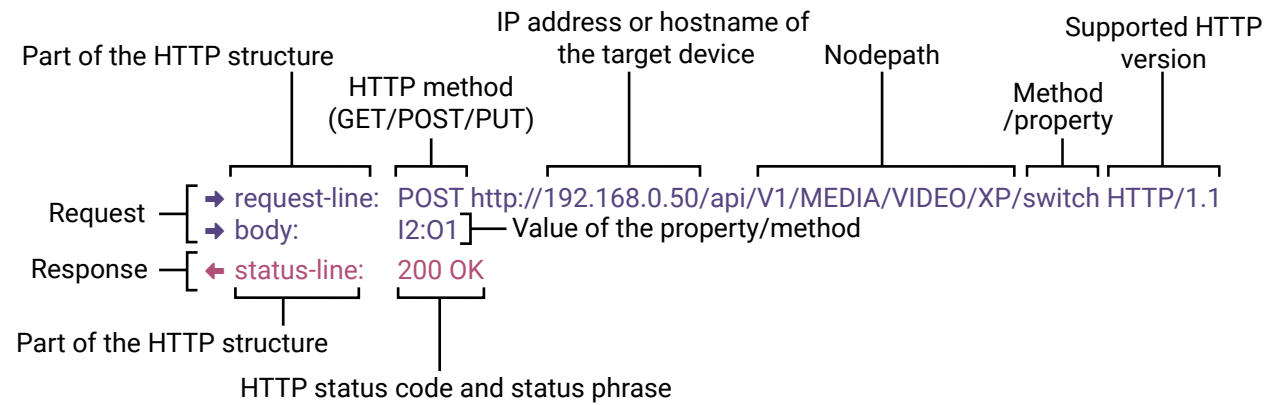

The examples below show how to apply the REST API in different environments:

#### Curl in Command Line Terminal

```
→ curl -X POST -i http://192.168.0.55/api/V1/MEDIA/VIDEO/XP/switch --data I2:01
```

#### REST API Client in Mozilla

**Method:** POST  
**URL:** http://192.168.0.55/api/V1/MEDIA/VIDEO/XP/switch  
**Body content type:** text/plain  
**Body:** I2:01

### 6.3.2. General Rules

- All names and parameters are case-insensitive.
- The methods, nodes and properties are separated by a slash (/) character.
- The node name consists of letters of the English alphabet and numbers.
- All properties and methods are available HTTP(S) below /api as an URL.
- The HTTP server is available on port 80, the HTTPS server is available on port 443.
- GET / PUT/ POST methods are supported.
- The request-line contains the IP address (or hostname) and the nodepath.
- Arguments and property values should be given in the HTTP request's body as a plain text.
- REST API - LW3 converter does escaping automatically.
- The node paths describe the exact location of the node, listing each parent node up to the root.
- The supported HTTP protocol: standard HTTP/1.1
- There is no maximum size or character length of the request.

### 6.3.3. Legend for the Control Commands

#### Command and Response – Example

→ request-line: GET <ip>/api/V1/MEDIA/VIDEO/<in>/SignalPresent

← body: <status code>

Format	Description
<ip>	IP address or hostname of the target device
<in>	Input port number
<out>	Output port number
<port>	Input or output port number
<loc>	Location number
<parameter>	Variable defined and described in the command
<expression>	Batched parameters: the underline means that more expressions or parameters can be placed by using a semicolon, e.g. <u>I2;I4</u> or <u>F27:E1;F47:E2</u>
→	Sent request
←	Received response
.	Space character

Further, not listed <parameters> are defined at each commands.

### 6.3.4. Lightware REST API vs. LW3 Protocol

All methods and properties of the LW3 tree structure appear below /api as a HTTP(s) URL. The separator character is always a slash (/) character instead of point (.) and colon (:). The URL is case-insensitive.

#### Example

The LW3 property:  
 /V1/MEDIA/VIDEO/I2.ActiveResolution

Available in REST API:  
 192.168.0.1/api/V1/MEDIA/VIDEO/I1/ActiveResolution  
 192.168.0.1/API/v1/media/video/i1/activeresolution

The following features are implemented only in REST API, but not in LW3 protocol:

- [Sending a Message via RS-232](#)

The most important commands are listed in this chapter. Other commands can be inferred by the LW3 tree structure, where the read-only (eg. `pr /V1/MEDIA/VIDEO/I4.Connected`) and read-write properties (`pw /V1/MEDIA/VIDEO/I4.Name`) can be listed. For more details about LW3 tree structure, see the [LW3 Programmers' Reference](#) section or the [Advanced View Window](#).

### 6.3.5. Method Types

#### GET Method

GET method can be used to get the value of a property. It works the same way as the LW3 GET command.

#### PUT/ POST Method

In this case, POST and PUT are equivalent, they are for modifying read-write properties and invoking methods. They replace LW3 SET and CALL command.

### 6.3.6. Supported Commands

#### Querying property value (GET)

The requested value is in the body of the response.

Protocol	Command
REST API	→ request-line: GET<ip>/api/<NODEPATH>/<PropertyName>
Example	→ request-line: GET http://192.168.0.1/api/V1/MEDIA/VIDEO/XP/I2/SignalPresent
LW3	▶ GET-/<NODEPATH>.<PropertyName>
Example	▶ GET /V1/MEDIA/VIDEO/XP/I2.SignalPresent

#### Setting property value (SET)

The desired property value should be given as a plain text in the body of the request. The new value is in the body of the response.

Protocol	Command
REST API	→ request-line: POST<ip>/api/<NODEPATH>/<PropertyName> → body: <new_value>
Example	→ request-line: POST http://192.168.0.1/api/V1/MEDIA/VIDEO/XP/I2/Mute → body: false
LW3	▶ SET-/<NODEPATH>.<PropertyName>=<new_value>
Example	▶ SET /V1/MEDIA/VIDEO/XP/I2.Mute=false

#### Invoking method (CALL)

The argument should be given in the body of the request.

Protocol	Command
REST API	→ request-line: POST<ip>/api/<NODEPATH>/<methodName> → body: <new_value>
Example	→ request-line: POST http://192.168.0.1/api/V1/MEDIA/VIDEO/XP/switch → body: I5:01
LW3	▶ CALL-/<NODEPATH>:<methodName>(<value>)
Example	▶ CALL /V1/MEDIA/VIDEO/XP:switch(I5:01)

### 6.3.7. Not Supported Commands

#### Querying node (GET)

Protocol	Command	Note
REST API	Not supported	404 error code
LW3	▶ GET-/<NODEPATH>	
Example	▶ GET /V1/MEDIA/VIDEO	

#### Subscribing to a node (OPEN)

Protocol	Command	Note
REST API	Not interpreted	Not supported
LW3	▶ OPEN-/<NODEPATH>	
Example	▶ OPEN /V1/MEDIA/VIDEO	

#### Unsubscribing from a Node (CLOSE)

Protocol	Command	Note
REST API	Not interpreted	Not supported
LW3	▶ CLOSE-/<NODEPATH>	
Example	▶ CLOSE /V1/MEDIA/VIDEO	

### 6.3.8. Status Codes, Error Messages

The standard HTTP response codes are defined to supply information about the response and the executed command like:

Error code		Description
200	OK	Standard response for successful HTTP request.
401	Unauthorized	
405	Method Not Allowed	A request method is not supported for the requested resource. This is the error code when trying to modify a read-only property.
404	Not Found	Invalid nodepath or property name.
406	Not Acceptable	LW3 server error response for POST and PUT method, equals the following LW3 error codes: <b>pE</b> : an error for the property <b>mE</b> : an error for a method
500	Internal Server Error	All other errors (Lw3ErrorCodes_InternalError).

### 6.3.9. Polling

Subscription and unsubscription features are not supported, they can be substituted with polling. It means that a custom user script sends a request for a detected property from time to time.

## 6.4. REST API Security

The REST API is designed with two security features: **Authentication** and **Encryption**. Both of them are optional and can be used independently of each other.

### 6.4.1. Authentication

Basic access authentication is designed to limit user access for the REST API server. It requires user authentication by using a password (username is fixed).

Follow the instructions below to set the password:

**Step 1.** Set the password.

→ request-line: POST <ip>/api/V1/MANAGEMENT/NETWORK/AUTHENTICATION/setPassword  
→ body: <new\_password>

**Step 2.** Enable the basic authentication on the chosen port (HTTP: 80 or HTTPS: 443).

→ request-line: POST <ip>/api/V1/MANAGEMENT/NETWORK/SERVICES/HTTP/AuthenticationEnabled  
→ body: true

**Step 3.** Restart network services.

→ request-line: POST <ip>/api/V1/MANAGEMENT/NETWORK/SERVICES/HTTP/restart

**ATTENTION!** The password will not be encrypted by this authentication mode, it remains accessible when the communication happens on HTTP.

For more details, see the [Basic Authentication](#) section.

### 6.4.2. Encryption (HTTPS)

There is no encryption when the REST API communication happens via HTTP, because the HTTP protocol is not encrypted. The REST API server is available via HTTPS on the 443 port. To avoid the data interception (e.g. stealing the password) HTTP should be disabled and HTTPS protocol used instead.

**ATTENTION!** Please ensure proper time and date setting in MMX2, because it affects the self-signed certificate (SSL) generation when using WSS or HTTPS. Improper time and date setting may lead to certificate rejection.

HTTPS does not guarantee that the communication is secure. Make sure that the client communicates with the server directly, without any third-party element in the communication route (Man-in-the-middle attack).

For more details, see the [Encryption \(HTTPS, WSS\)](#) section.

## 6.5. System Commands

### 6.5.1. Setting the Device Label

INFO: The device label can be changed to a custom text in the [Status](#) tab of the LDC software.

#### Request and Response *#devicelabel #label*

```
→ request-line: POST http://<ip>/api/V1/MANAGEMENT/LABEL/DeviceLabel
→ body:         <custom_name>

← status-line:  200·OK
← body:         <custom_name>
```

The Device Label can be 49 character long and ASCII characters are allowed. Longer names are truncated.

#### Example

```
→ request-line: POST http://192.168.0.50/api/V1/MANAGEMENT/LABEL/DeviceLabel
→ body:         MMX2room

← status-line:  200 OK
← body:         MMX2room
```

### 6.5.2. Resetting the Device

The switcher can be restarted – the current connections will be terminated.

#### Request and Response *#reboot #restart*

```
→ request-line: POST http://<ip>/api/V1/SYS/restart
```

INFO: The body has to be empty, and the content type should be text/plain.

```
← status-line:  200 OK
```

#### Example

```
→ request-line: POST http://192.168.0.50/api/V1/SYS/restart
← status-line:  200 OK
```

### 6.5.3. Restoring the Factory Default Settings

#### Request and Response

```
→ request-line: POST http://<ip>/api/V1/SYS/factoryDefaults
```

INFO: The body has to be empty, and the content type should be text/plain.

```
← status-line:  200 OK
```

#### Example

```
→ request-line: POST http://192.168.0.50/api/V1/SYS/factoryDefaults
← status-line:  200 OK
```

The device is restarted, current connections are terminated, and the default settings are restored. See the complete list in the [Factory Default Settings](#) section. *#factory*

### 6.5.4. Querying the Firmware Package Version

#### Request and Response *#firmwareversion*

```
→ request-line: GET http://<ip>/api/V1/MANAGEMENT/UID/PACKAGE/Version
← status-line:  200·OK
← body:         <firmware_version>
```

#### Example

```
→ request-line: GET http://192.168.0.50/api/V1/MANAGEMENT/UID/PACKAGE/Version
← status-line:  200 OK
← body:         1.3.3b3
```

### 6.5.5. Control Lock

Enable/disable the operation of the front panel buttons.

#### Request and Response *#lockbutton #buttonlock*

```
→ request-line: POST http://<ip>/api/V1/MANAGEMENT/UI/ControlLock
→ body:         <lock_status>

← status-line:  200·OK
← body:         <lock_status>
```

#### Parameters

Parameter	Parameter description	Values	Value description
<lock_status>	Front panel button locking status	None	None: all functions of the front panel button are enabled.
		locked	The front panel buttons are locked, and can be unlocked by a button combination ( <a href="#">Control Lock</a> ).
		force locked	The front panel buttons are locked and cannot be unlocked by a button combination, only in LDC (on the <a href="#">Status</a> tab) or using the LW3 command (or REST API).

#### Example

```
→ request-line: POST http://192.168.0.50/api/V1/MANAGEMENT/UI/ControlLock
→ body:         force locked

← status-line:  200 OK
← body:         Force locked
```

### 6.5.6. Setting the Current Time

#### Request and Response *#time*

```

→ request-line: POST http://<ip>/api/V1/MANAGEMENT/DATETIME/setTime
→ body:         <current_time>

← status-line:  200 OK
← body:         OK

```

#### Parameters

<current\_time>: The new router time in ISO 8601 date time format.

#### Example

```

→ request-line: POST http://192.168.0.50/api/V1/MANAGEMENT/DATETIME/setTime
→ body:         2034-05-06T14:47:25

← status-line:  200 OK
← body:         OK

```

### 6.5.7. Identifying the Device

Calling the method makes the status LEDs blink for 10 seconds. The feature helps to find the device physically.

#### Request and Response *#identifyme*

```

→ request-line: POST http://<ip>/api/V1/MANAGEMENT/UI/identifyMe
INFO: The body has to be empty, and the content type should be text/plain.

← status-line:  200 OK

```

#### Example

```

→ request-line: POST http://192.168.0.50/api/V1/MANAGEMENT/UI/identifyMe
← status-line:  200 OK

```

### 6.5.8. Toggling the Dark Mode Setting

The LEDs of the device can be switched off, if their light could be annoying. In Dark mode, all the LEDs are switched off, except the LEDs of the RJ45 connectors (Ethernet and TPS in). *#darkmode*

#### Request and Response

```

→ request-line: POST http://<ip>/api/V1/MANAGEMENT/UI/DARKMODE/Enable
→ body:         <mode_state>

← status-line:  200 OK
← body:         <mode_state>

```

#### Parameters

If the <mode\_state> parameter is **true** (or **1**), the Dark mode function is **enabled**, if the parameter is **false** (or **0**), the function is **disabled**.

#### Example

```

→ request-line: POST http://192.168.0.50/api/V1/MANAGEMENT/UI/DARKMODE/Enable
→ body:         true

← status-line:  200 OK
← body:         true

```

### 6.5.9. Setting the Delay of the Dark Mode

The Dark mode can be enabled right away, or after a certain time. Thus, the mode is enabled if no buttons are pressed for a while. Pressing any button brings back the status info on the LEDs without performing the function of the button itself. The delay time can be set by this command.

#### Request and Response

```

→ request-line: POST http://<ip>/api/V1/MANAGEMENT/UI/DARKMODE/Delay
→ body:         <delay_time>

← status-line:  200 OK
← body:         <delay_time>

```

#### Parameters

The <delay\_time> parameter means seconds, and the default value is 0. If set to 0, no delay is applied, and the Dark mode can be enabled immediately by the **DarkModeEnable** property. This delay has an affect to the **wakeFromDarkMode** method as well.

#### Example

```

→ request-line: POST http://192.168.0.50/api/V1/MANAGEMENT/UI/DARKMODE/Delay
→ body:         10

← status-line:  200 OK
← body:         10

```

## 6.6. Video Port Settings - General

### 6.6.1. Switching Video Input

#### Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/VIDEO/XP/switch  
 → body: <in>:<out>  
 ← status-line: 200 OK

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/VIDEO/XP/switch  
 → body: I5:01  
 ← status-line: 200 OK

INFO: When using the '0' value as an input, the input will be disconnected and no signal will appear on the output.

**ATTENTION!** Video crosspoint has a limitation: I1 and I5 ports are not available at the same time, only one of them can be selected to any output. When one of the outputs is switched to I1 or I5, the other output can not be switched to I1 or I5. In this case the switch command returns an error message.

#### Example

→ request-line: GET http://192.168.0.50/api/V1/MEDIA/VIDEO/XP/O1/ConnectedSource  
 ← body: I5  
 → request-line: GET http://192.168.0.50/api/V1/MEDIA/VIDEO/XP/O2/ConnectedSource  
 ← body: I5  
 → request-line: POST http://192.168.0.50/api/V1/MEDIA/VIDEO/XP/switch  
 → body: I1:01  
 ← status-line: 405 Method Not Allowed

### 6.6.2. Switching an Input to All Outputs

#### Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/VIDEO/XP/switchAll  
 → body: <in>  
 ← status-line: 200 OK

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/VIDEO/XP/switchAll  
 → body: I1  
 ← status-line: 200 OK

### 6.6.3. Locking the Video Port

#### Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/VIDEO/XP/<port>/Lock  
 → body: <locked\_state>  
 ← status-line: 200 OK  
 ← body: <locked\_state>

#### Parameters

Parameter	Parameter description	Values	Value description
<locked_state>	Locked state	true	The port is locked
		false	The port is unlocked

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/VIDEO/XP/I2/Lock  
 → body: false  
 ← status-line: 200 OK  
 ← body: false

### 6.6.4. Muting the Video Port

#### Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/VIDEO/XP/<port>/Mute  
 → body: <muted\_state>  
 ← status-line: 200 OK  
 ← body: <muted\_state>

#### Parameters

Parameter	Parameter description	Values	Value description
<muted_state>	Muted state	true	The port is locked.
		false	The port is unlocked.

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/VIDEO/XP/I2/Mute  
 → body: false  
 ← status-line: 200 OK  
 ← body: false



### 6.6.5. Setting the Autoselect Policy

#### Request and Response

→ request-line: POST-http://<ip>/api/V1/MEDIA/VIDEO/AUTOSELECT/<out>/Policy  
 → body: <autoselect\_mode>  
 ← status-line: 200 OK  
 ← body: <autoselect\_mode>

#### Parameters

Parameter	Parameter description	Values	Value description
<autoselect_mode>	The autoselect policy	<b>Off</b>	The autoselect function is disabled.
		<b>Last Detect</b>	It is always the last attached input that is automatically switched to the output.
		<b>First Detect</b>	The first active video input is selected.

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/VIDEO/AUTOSELECT/O2/Policy  
 → body: First detect  
 ← status-line: 200 OK  
 ← body: First detect

### 6.6.6. Changing the Autoselect-Included Input Ports

#### Request and Response

→ request-line: POST-http://<ip>/api/V1/MEDIA/VIDEO/AUTOSELECT/<out>/<in>/Included  
 → body: <state>  
 ← status-line: 200 OK  
 ← body: <state>

#### Parameters

Parameter	Parameter description	Values	Value description
<state>	The chosen input is ignored in the autoselect process or not.	<b>true</b>	The port is included in autoselect.
		<b>false</b>	The autoselect function ignores that port.

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/VIDEO/AUTOSELECT/O2/I1/Included  
 → body: false  
 ← status-line: 200 OK  
 ← body: false

### 6.6.7. Changing the Input Port Priority

#### Request and Response

→ request-line: POST-http://<ip>/api/V1/MEDIA/VIDEO/AUTOSELECT/<out>/<in>/Priority  
 → body: <prio\_num>  
 ← status-line: 200 OK  
 ← body: <prio\_num>

#### Parameters

The <prio> parameter means the priority number from 1 to 100, equal numbers are allowed. Inputs can have different priorities in relation with two or more outputs. Therefore the output port number is part of the node path of input port priorities.

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/VIDEO/AUTOSELECT/O2/I2/Priority  
 → body: 51  
 ← status-line: 200 OK  
 ← body: 51

### 6.6.8. Querying the Connected Source

#### Request and Response

→ request-line: GET-http://<ip>/api/V1/MEDIA/VIDEO/XP/<out>/ConnectedSource  
 ← status-line: 200-OK  
 ← body: <in>

#### Example

→ request-line: GET http://192.168.0.50/api/V1/MEDIA/VIDEO/XP/O2/ConnectedSource  
 ← status-line: 200 OK  
 ← body: I1

### 6.6.9. Querying the Connected Destinations

#### Request and Response

→ request-line: GET-http://<ip>/api/V1/MEDIA/VIDEO/XP/<in>/ConnectedDestinations  
 ← status-line: 200-OK  
 ← body: ["<out1>";"<out1>"]

#### Example

→ request-line: GET http://192.168.0.50/api/V1/MEDIA/VIDEO/XP/I3/ConnectedDestinations  
 ← status-line: 200 OK  
 ← body: ["O1";"O2"]

### 6.6.10. Querying the Input Switching Capability

Video crosspoint has a limitation: I1 or I5 ports can not be selected to any output at the same time. **Busy** value of the switchable property refers to the limitation.

#### Request and Response

→ request-line: GET http://<ip>/api/V1/MEDIA/VIDEO/XP/<out>/SWITCHABLE/<in>  
 ← status-line: 200 OK  
 ← body: <switchable\_state>

#### Parameters

Parameter	Parameter description	Values	Value description
<switchable_state>	The chosen input is can be switched to the output or not.	<b>OK</b>	The connection of the chosen input and output is allowed.
		<b>Busy</b>	The chosen input can not be switched to the output.
		<b>Locked</b>	The chosen input can not be switched to the output, because input is locked.

#### Example

→ request-line: GET http://192.168.0.50/api/V1/MEDIA/VIDEO/XP/O2/SWITCHABLE/I1  
 ← status-line: 200 OK  
 ← body: Busy

### 6.6.11. Querying the Video Signal Presence

#### Request and Response

→ request-line: GET http://<ip>/api/V1/MEDIA/VIDEO/<port>/SignalPresent  
 ← status-line: 200 OK  
 ← body: <state>

#### Parameters

Parameter	Parameter description	Values	Value description
<state>	This property gives a feedback about the current signal presence of the port.	<b>true</b>	The video signal is present.
		<b>false</b>	The video signal is not present.

#### Example

→ request-line: GET http://192.168.0.50/api/V1/MEDIA/VIDEO/I1/SignalPresent  
 ← status-line: 200 OK  
 ← body: true

### 6.6.12. HDCP Setting (Input Port)

HDCP capability can be set on the input ports, thus non-encrypted content can be seen on a non-HDCP compliant display. See more information in the [HDCP Management](#) section.

**ATTENTION!** HDCP 2.2 signal handling is limited to up to two input ports at the same time.

#### Request and Response #hdcp

→ request-line: POST http://<ip>/api/V1/MEDIA/VIDEO/<in>/HDCP/AllowedHdcpVersion  
 → body: <allowed\_hdcp>  
 ← status-line: 200 OK  
 ← body: <allowed\_hdcp>

#### Parameters

Parameter	Parameter description	Values	Value description
<allowed_hdcp>	The input port reports the HDCP capability.	<b>HDCP 1.4</b> <b>HDCP 2.2</b> <b>Off</b>	The input port reports HDCP 1.4 capability. The input port reports HDCP 2.2 capability. The input port reports non-HDCP compliance.

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/VIDEO/I1/HDCP/AllowedHdcpVersion  
 → body: HDCP 1.4  
 ← status-line: 200 OK  
 ← body: HDCP 1.4

### 6.6.13. HdcpMode

HDCP capability can be set to Auto/Always on the output ports, thus non-encrypted content can be transmitted to a non-HDCP compliant display. See more information in the [HDCP Management](#) section.

#### Request and Response *#hdcp*

→ request-line: POST-http://<ip>/api/V1/MEDIA/VIDEO/<out>/HdcpMode  
 → body: <hdcp\_mode>  
 ← status-line: 200 OK  
 ← body: <hdcp\_mode>

#### Parameters

Parameter	Parameter description	Values	Value description
<hdcp_mode>	HDCP encryption setting on the output port	<b>Auto</b>	The encryption is enabled on the output port if the signal on the input port is encrypted.
		<b>Always</b>	The outgoing signal is HDCP-encrypted.

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/VIDEO/01/HDCP/HdcpMode  
 → body: Auto  
 ← status-line: 200 OK  
 ← body: Auto

### 6.6.14. Querying Embedded Audio Presence

→ request-line: GET-http://<ip>/api/V1/MEDIA/VIDEO/<port>/EmbeddedAudioPresent  
 ← status-line: 200 OK  
 ← body: <embedded\_state>

#### Parameters

Parameter	Parameter description	Values	Value description
<embedded_state>	It shows if the video contains audio or not.	<b>true</b>	There is embedded audio in the video signal.
		<b>false</b>	There is no embedded audio in the video signal.

#### Example

→ request-line: GET http://192.168.0.50/api/V1/MEDIA/VIDEO/I2/EmbeddedAudioPresent  
 ← status-line: 200 OK  
 ← body: true

### 6.6.15. Muting Embedded Audio

→ request-line: POST-http://<ip>/api/V1/MEDIA/VIDEO/<port>/EmbeddedAudioMute  
 → body: <mute\_state>  
 ← status-line: 200 OK  
 ← body: <mute\_state>

#### Parameters

Parameter	Parameter description	Values	Value description
<mute_state>	It shows if the embedded audio is muted or not.	<b>true</b>	The embedded audio is muted.
		<b>false</b>	The embedded audio is unmuted.

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/VIDEO/01/EmbeddedAudioMute  
 → body: false  
 ← status-line: 200 OK  
 ← body: false

### 6.6.16. Setting Output Signal Type

#### Request and Response *#signaltype*

→ request-line: POST-http://<ip>/api/V1/MEDIA/VIDEO/<out>/OutputSignalType  
 → body: <signal\_type>  
 ← status-line: 200 OK  
 ← body: <signal\_type>

#### Parameters

Parameter	Parameter description	Values	Value description
<signal_type>	Signal type setting	<b>Auto</b>	The outgoing signal type is HDMI.
		<b>DVI</b>	The outgoing signal type is DVI.

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/VIDEO/01/OutputSignalType  
 → body: Auto  
 ← status-line: 200 OK  
 ← body: Auto

### 6.6.17. Turning on Output 5V

The 5V power towards the sink can be enabled or disabled as follows:

#### Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/VIDEO/<out>/Output5VMode  
→ body: <5V\_pwr>  
← status-line: 200 OK  
← body: <5V\_pwr>

#### Parameters

Parameter	Parameter description	Value	Value description
<5V_pwr>	5V power towards the sink	On Off	Enable 5V power on HDMI port Disable 5V power on HDMI port

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/VIDEO/01/Output5VMode  
→ body: On  
← status-line: 200 OK  
← body: On

## 6.7. CEC Command Sending

**DIFFERENCE:** This feature and the commands below are available from FW package v1.4.0b4.

The device is able to send Consumer Electronics Control (CEC) commands. This feature is for remote controlling the source or sink device. CEC is a bi-directional communication via the HDMI cable.

**ATTENTION!** To have a successful CEC command processing, the connected HDMI device must support CEC. #cec

### 6.7.1. Simple CEC Code Sending

This command is for sending simple CEC commands to the connected sink device. In this case the <command> is sent in a CEC frame without any opcode. The command also allows sending many commands at once.

The commands can be sent by the following two formats – defined in the header:

- **text/plain:** hexa strings (as seen in the example)
- **application/octet-stream:** binary data that allows sending a file with the desired codes

#### Request and Response

→ request-line: POST·http://<ip>/api/V1/MEDIA/VIDEO/<port>/CEC/send  
 → body: <command>  
 ← status-line: 200 OK  
 ← body: <response>

#### Parameters

Parameter	Parameter description	Values	Value description
<port>	Video output port	01-02*	Video output port number
<command> **	Two-digit-long hexa code to control the sink device	04	Power on
		0D	Power off
		36	Standby
		821000	Select input 1
		822000	Select input 2
		823000	Select input 3

\* It depends on the capabilities of the UCX device.

\*\* The supported list of <commands> depends on the connected sink device.

The <response> can be:

<response>	HTTP code	Result
ACK	200	The transmission is successful
NACK	444	The command is not accepted
Timeout	408	Timeout
Internal Error	500	Other error

#### Example

→ request-line: POST·http://192.168.1.9/api/V1/MEDIA/VIDEO/01/CEC/send  
 → body: 04  
 ← status-line: 200 OK  
 ← body: ACK

### 6.7.2. Remote Control Code Sending

This command is for sending the so-called 'push-button-commands'. There is a range within the CEC commands for this purpose, e.g. volume up/down. With this method one <command> is put between the 0x44 and 0x45 opcodes in the background.

#### Request and Response

→ request-line: POST·http://<ip>/api/V1/MEDIA/VIDEO/<port>/CEC/sendUserControlClick  
 → body: <command>  
 ← status-line: 200 OK  
 ← body: <response>

#### Parameters

Parameter	Parameter description	Values	Value description
<port>	Video output port	01-02*	Video output port number
<command> **	Two-digit-long hexa code to control the sink device	6D	Power on
		6C	Power off

\* It depends on the capabilities of the UCX device.

\*\* The supported list of <commands> depends on the connected sink device.

The <response> can be the same as written at the previous command.

#### Example

→ request-line: POST·http://192.168.1.9/api/V1/MEDIA/VIDEO/01/CEC/sendUserControlClick  
 → body: 6D  
 ← status-line: 200 OK  
 ← body: ACK

## 6.8. Audio Port Settings

### 6.8.1. Switching Audio Input

#### Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/AUDIO/XP/switch  
 → body: <audio\_in>:03  
 ← status-line: 200 OK  
 ← body: <audio\_in>:03

#### Parameters

Parameter	Parameter description	Values	Value description
<audio_in>	Audio input port	I1-I4	Audio input port number

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/AUDIO/XP/switch  
 → body: I2:03  
 ← status-line: 200 OK  
 ← body: I2:03

INFO: When using the '0' value as an input, the input will be disconnected and no signal will appear on the output.

**ATTENTION!** When I5 is selected for video source, the de-embedded audio of the I1 is not available because the video crosspoint has a limitation: I1 and I5 ports are not available at the same time, only one of them can be selected to any output. For more details about it see the [Audio Interface](#) section.

### 6.8.2. Querying the Connected Source

#### Request and Response

→ request-line: GET http://<ip>/api/V1/MEDIA/AUDIO/XP/03/ConnectedSource  
 ← status-line: 200 OK  
 ← body: <audio\_in>

#### Parameters

Parameter	Parameter description	Values	Value description
<audio_in>	Audio input port	I1-I4	Audio input port number

#### Example

→ request-line: GET http://192.168.0.50/api/V1/MEDIA/AUDIO/XP/03/ConnectedSource  
 ← status-line: 200 OK  
 ← body: I2

### 6.8.3. Querying the Connected Destinations

#### Request and Response

→ request-line: GET http://<ip>/api/V1/MEDIA/AUDIO/XP/<audio\_in>/ConnectedDestinations  
 ← status-line: 200 OK  
 ← body: <audio\_out>

#### Parameters

Parameter	Parameter description	Values	Value description
<audio_in>	Audio input port	I1-I4	Audio input port number
<audio_out>	Audio output port	O4	Audio output port number

#### Example

→ request-line: GET http://192.168.0.50/api/V1/MEDIA/AUDIO/XP/I3/ConnectedDestinations  
 ← status-line: 200 OK  
 ← body: O3

### 6.8.4. Setting Autoselect Operation Mode

#### Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/AUDIO/AUTOSELECT/O4/Policy  
 → body: <op\_mode>  
 ← status-line: 200 OK  
 ← body: <op\_mode>

#### Parameters

Parameter	Parameter description	Values	Value description
<op_mode>	Operation mode	Follow video	Follows the video crosspoint state automatically.
		Off	Autoselect function is disabled.

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/AUDIO/AUTOSELECT/O4/Policy  
 → body: Follow video  
 ← status-line: 200 OK  
 ← body: Follow video

### 6.8.5. Setting the Followed Video Port to Autoselect

#### Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/AUDIO/AUTOSELECT/O3/VideoFollowPort  
 → body: <out>  
 ← status-line: 200 OK  
 ← body: <out>

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/AUDIO/AUTOSELECT/O3/VideoFollowPort  
 → body: 01  
 ← status-line: 200 OK  
 ← body: 01

### 6.8.6. Locking the Audio Port

#### Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/AUDIO/XP/<audio\_port>/Lock  
 → body: <locked\_state>  
 ← status-line: 200 OK  
 ← body: <locked\_state>

#### Parameters

Parameter	Parameter description	Values	Value description
<audio_port>	Audio Port	I1-I4 O4	Audio input port number Audio output port number
<locked_state>	Locked state	true false	The port is locked The port is unlocked

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/AUDIO/XP/I2/Lock  
 → body: false  
 ← status-line: 200 OK  
 ← body: false

### 6.8.7. Muting the Audio Port 1

INFO: Suspends the connection of the chosen port (no signal is forwarded).

#### Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/AUDIO/XP/<audio\_port>/Mute  
 → body: <muted\_state>  
 ← status-line: 200 OK  
 ← body: <muted\_state>

#### Parameters

Parameter	Parameter description	Values	Value description
<audio_port>	Audio Port	I1-I4 O4	Audio input port number Audio output port number
<muted_state>	Muted state	true false	The port is muted. The port is unmuted.

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/AUDIO/XP/I2/Mute  
 → body: false  
 ← status-line: 200 OK  
 ← body: false

INFO: All inputs and analog output ports have a mute property in the audio XP (e.g. http://<ip>/api/V1/MEDIA/AUDIO/XP/I1.Mute). Outputs have a separate mute function within the port node as well:

- http://<ip>/api/V1/MEDIA/VIDEO/XP/O1.EmbeddedAudioMute
- http://<ip>/api/V1/MEDIA/VIDEO/XP/O2.EmbeddedAudioMute
- http://<ip>/api/V1/MEDIA/AUDIO/O3.Mute

### 6.8.8. Muting the Audio Port 2

INFO: The volume of the analog audio output is set to low.

#### Request and Response

```
→ request-line: POST-http://<ip>/api/V1/MEDIA/AUDIO/O4/Mute
→ body:         <muted_state>
← status-line:  200 OK
← body:         <muted_state>
```

#### Parameters

Parameter	Parameter description	Values	Value description
<audio_port>	Audio Port	I1-I4 O4	Audio input port number Audio output port number
<muted_state>	Muted state	true false	The port is muted. The port is unmuted.

#### Example

```
→ request-line: POST http://192.168.0.50/api/V1/MEDIA/AUDIO/O4/Mute
→ body:         false
← status-line:  200 OK
← body:         false
```

### 6.8.9. Querying the Audio Signal Presence

#### Request and Response

```
→ request-line: GET-http://<ip>/api/V1/MEDIA/AUDIO/<audio_port>/SignalPresent
← status-line:  200 OK
← body:         <signal_state>
```

#### Parameters

Parameter	Parameter description	Values	Value description
<audio_port>	USB Port	I1-I4 O4	Audio input port number Audio output port number
<signal_state>	Signal presence	true false	The audio signal is present. No audio signal is present.

#### Example

```
→ request-line: GET http://192.168.0.50/api/V1/MEDIA/AUDIO/I1/SignalPresent
← status-line:  200 OK
← body:         false
```

### 6.8.10. Analog Audio Output Volume (dB) Setting

#### Request and Response #analogaudio #volume

```
→ request-line: POST-http://<ip>/api/V1/MEDIA/AUDIO/O4/VolunedB
→ body:         <level>
← status-line:  200 OK
← body:         <level>
```

#### Parameter

The <level> parameter sets the output volume (attenuation) between -95.62 dB and 0 dB in step of -0.375 dB. The value is rounded up if necessary, to match with the step value.

#### Example

```
→ request-line: POST http://192.168.0.50/api/V1/MEDIA/AUDIO/O4/VolunedB
→ body:         -15
← status-line:  200 OK
← body:         -15
```

### 6.8.11. Analog Audio Output Volume Percent Setting

#### Request and Response

```
→ request-line: POST-http://<ip>/api/V1/MEDIA/AUDIO/O4/VolumePercent
→ body:         <percent>
← status-line:  200 OK
← body:         <percent>
```

#### Parameters

The <percent> parameter sets the output volume (attenuation) between 100% and 0%, in step of 1%. The value is rounded up if necessary to match with the step value.

#### Example

```
→ request-line: POST http://192.168.0.50/api/V1/MEDIA/AUDIO/O4/VolumePercent
→ body:         50
← status-line:  200 OK
← body:         50
```



### 6.8.12. Setting the Balance

#### Request and Response *#balance*

```

→ request-line: POST http://<ip>/api/V1/MEDIA/AUDIO/O4/Balance
→ body:         <level>

← status-line:  200 OK
← body:         <level>

```

#### Parameters

The <level> parameter sets the balance; -100 means left balance, 100 means right balance, step is 1. Center is 0 (default).

#### Example

```

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/AUDIO/O4/Balance
→ body:         0

← status-line:  200 OK
← body:         0

```

### 6.8.13. Analog Audio Output Level Setting by Steps (dB)

#### Request and Response *#analogaudio #volume*

```

→ request-line: POST http://<ip>/api/V1/MEDIA/AUDIO/O4/stepVolumedB
→ body:         <step>

← status-line:  200 OK
← body:         <step>

```

#### Parameters

The volume is increased or decreased with the given <step> value in dB.

#### Example

```

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/AUDIO/O4/stepVolumedB
→ body:         -1

← status-line:  200 OK
← body:         OK

```

The volume is decreased with 1 dB, the current volume is -1.95 dB, which means 77.84% in percent.

### 6.8.14. Analog Audio Output Level Setting by Steps in Percent

#### Request and Response

```

→ request-line: POST http://<ip>/api/V1/MEDIA/AUDIO/O4/stepVolumePercent
→ body:         <step>

← status-line:  200 OK
← body:         <step>

```

#### Parameters

The volume is increased or decreased by the given <step> value in percent.

#### Example

```

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/AUDIO/O4/stepVolumePercent
→ body:         5

← status-line:  200 OK
← body:         OK

```

### 6.8.15. Analog Audio Output Balance Setting by Steps

#### Request and Response

```

→ request-line: POST http://<ip>/api/V1/MEDIA/AUDIO/O4/stepBalance
→ body:         <step>

← status-line:  200 OK
← body:         <step>

```

#### Parameters

The volume is increased or decreased by the given <step> value.

#### Example

```

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/AUDIO/O4/stepBalance
→ body:         5

← status-line:  200 OK
← body:         OK

```

## 6.9. EDID Management

### 6.9.1. Querying the Emulated EDIDs

#### Request and Response *#edid*

→ request-line: GET·http://<ip>/api/V1/EDID/EdidStatus  
 ← status-line: 200·OK  
 ← body: ["<source>:E1";"<source>:E2";" <source>:E3;""<source>:E4"]

#### Parameters

Parameter	Parameter description	Values	Value description
<source>	Source EDID memory place	F1-F120	Factory EDIDs
		U1-U14	User EDIDs
		D1-D2	Dynamic EDIDs

#### Example

→ request-line: GET http://192.168.0.50/api/V1/EDID/EdidStatus  
 ← status-line: 200 OK  
 ← body: ["F47:E1","F47:E2","F47:E3","F47:E4"]

Emulated EDID memory for input port is listed with the EDID number that is currently emulated on the input.

### 6.9.2. Querying the Validity of a Dynamic EDID

#### Request and Response

→ request-line: GET·http://<ip>/api/V1/EDID/D/D1/Validity  
 ← status-line: 200·OK  
 ← body: <validity>

#### Parameters

If the <validity> parameter is **true**, the EDID is valid. If the parameter is **false**, the EDID is invalid.

#### Example

→ request-line: GET http://192.168.0.50/api/V1/EDID/D/D1/Validity  
 ← status-line: 200 OK  
 ← body: true

The 'Validity' property is true, valid EDID is stored in D1 memory place.

### 6.9.3. Query the Preferred Resolution of a User EDID

#### Request and Response

→ request-line: GET·http://<ip>/api/V1/EDID/U/<user\_edid>/PreferredResolution  
 ← status-line: 200·OK  
 ← body: <preferred\_resolution>

#### Example

→ request-line: GET http://192.168.0.50/api/V1/EDID/U/U2/PreferredResolution  
 ← status-line: 200 OK  
 ← body: 1920x1080p60.00Hz

INFO: Use the **Manufacturer** and **MonitorName** properties to query further information.

### 6.9.4. Emulating an EDID to an Input Port

#### Request and Response

→ request-line: POST·http://<ip>/api/V1/EDID/switch  
 → body: <source>:<destination>  
 ← status-line: 200 OK  
 ← body: <source>:<destination>

#### Parameters

Parameter	Parameter description	Values	Value description
<source>	Source EDID memory place	F1-F120	Factory EDIDs
		U1-U14	User EDIDs
		D1-D2	Dynamic EDIDs
<destination>	The emulated EDID memory of the desired input port	U1-U14	User EDIDs

#### Example

→ request-line: POST http://192.168.0.50/api/V1/EDID/switch  
 → body: F49:E2  
 ← status-line: 200 OK  
 ← body: OK

### 6.9.5. Emulating an EDID to All Input Ports

#### Request and Response

→ request-line: POST http://<ip>/api/V1/EDID/switchAll  
 → body: <source>  
 ← status-line: 200 OK  
 ← body: OK

#### Parameters

Parameter	Parameter description	Values	Value description
<source>	Source EDID memory place	F1-F148	Factory EDIDs
		U1-U100	User EDIDs
		D1-D2	Dynamic EDIDs

#### Example

→ request-line: POST http://192.168.0.50/api/V1/EDID/switchAll  
 → body: F47  
 ← status-line: 200 OK  
 ← body: OK

### 6.9.6. Copying an EDID to User Memory

#### Request and Response

→ request-line: POST http://<ip>/api/V1/EDID/copy  
 → body: <source>:<destination>  
 ← status-line: 200 OK  
 ← body: OK

#### Parameters

Parameter	Parameter description	Values	Value description
<source>	Source EDID memory place	F1-F148	Factory EDIDs
		U1-U100	User EDIDs
		D1-D2	Dynamic EDIDs
<destination>	The emulated EDID memory of the desired input port	U1-U100	User EDIDs

#### Example

→ request-line: POST http://192.168.0.50/api/V1/EDID/copy  
 → body: F1:U2  
 ← status-line: 200 OK  
 ← body: OK

### 6.9.7. Deleting an EDID from User Memory

#### Request and Response

→ request-line: POST http://<ip>/api/V1/EDID/delete  
 → body: <user\_edid>  
 ← status-line: 200 OK  
 ← body: OK

#### Parameters

Parameter	Parameter description	Values	Value description
<user_edid>	The emulated EDID memory of the desired input port.	U1-U14	User EDIDs

#### Example

→ request-line: POST http://192.168.0.50/api/V1/EDID/delete  
 → body: U2  
 ← status-line: 200 OK  
 ← body: OK

### 6.9.8. Resetting the Emulated EDIDs

#### Request and Response

→ request-line: POST http://<ip>/api/V1/EDID/reset  
 INFO: The body has to be empty, and the content type should be text/plain.  
 ← status-line: 200 OK  
 ← body: OK

#### Example

→ request-line: POST http://192.168.0.50/api/V1/EDID/reset  
 ← status-line: 200 OK  
 ← body: OK

Calling this method switches all emulated EDIDs to a factory default one. See the table in the [Factory EDID List](#) section.

## 6.10. Ethernet Port Configuration

### 6.10.1. Setting the DHCP State

**ATTENTION!** When you change a network property, the new value is stored, but the **applySettings** method must always be called to apply the new settings. When two or more network parameters are changed, the **applySettings** method is enough to be called once as a final step.

**Request and Response** #dhcp #network #ipaddress

```
→ request-line: POST http://<ip>/api/V1/MANAGEMENT/NETWORK/DhcpEnabled
→ body:         <dhcp_status>

← status-line:  200 OK
← body:         <dhcp_status>
```

#### Parameters

If the <dhcp\_status> parameter is **true**, the current IP address setting is DHCP, if the parameter is **false**, the current IP address is static.

#### Example

```
→ request-line: POST http://192.168.0.50/api/V1/MANAGEMENT/NETWORK/DhcpEnabled
→ body:         true

← status-line:  200 OK
← body:         true

→ request-line: POST http://192.168.0.50/api/V1/MANAGEMENT/NETWORK/applySettings
← status-line:  200 OK
← body:         OK
```

INFO: The **applySettings** method will save and apply the new value and will reboot the device.

INFO: The current setting can be queried by using the [GET Method](#).

### 6.10.2. Changing the IP Address (Static)

#### Request and Response

```
→ request-line: POST http://<ip>/api/V1/MANAGEMENT/NETWORK/StaticIpAddress
→ body:         <IP_address>

← status-line:  200 OK
← body:         <IP_address>
```

#### Example

```
→ request-line: POST http://192.168.0.50/api/V1/MANAGEMENT/NETWORK/StaticIpAddress
→ body:         192.168.0.100

← status-line:  200 OK
← body:         192.168.0.100

→ request-line: POST http://192.168.0.50/api/V1/MANAGEMENT/NETWORK/applySettings
← status-line:  200 OK
← body:         OK
```

INFO: The **applySettings** method will save and apply the new value and will reboot the device.

INFO: The current setting can be queried by using the [GET Method](#).

### 6.10.3. Changing the Subnet Mask (Static)

#### Request and Response #ipaddress

```
→ request-line: POST http://<ip>/api/V1/MANAGEMENT/NETWORK/StaticNetworkMask
→ body:         <netmask>

← status-line:  200 OK
← body:         <netmask>
```

#### Example

```
→ request-line: POST http://192.168.0.50/api/V1/MANAGEMENT/NETWORK/StaticNetworkMask
→ body:         255.255.255.0

← status-line:  200 OK
← body:         255.255.255.0

→ request-line: POST http://192.168.0.50/api/V1/MANAGEMENT/NETWORK/applySettings
← status-line:  200 OK
← body:         OK
```

INFO: The **applySettings** method will save and apply the new value and will reboot the device.

INFO: The current setting can be queried by using the [GET Method](#).

### 6.10.4. Changing the Gateway Address (Static)

#### Request and Response

```

→ request-line: POST http://<ip>/api/V1/MANAGEMENT/NETWORK/StaticGatewayAddress
→ body:         <gw_address>

← status-line:  200 OK
← body:         <gw_address>

```

#### Example

```

→ request-line: POST http://192.168.0.50/api/V1/MANAGEMENT/NETWORK/StaticGatewayAddress
→ body:         192.168.0.1

← status-line:  200 OK
← body:         192.168.0.1

→ request-line: POST http://192.168.0.50/api/V1/MANAGEMENT/NETWORK/applySettings
← status-line:  200 OK
← body:         OK

```

INFO: The **applySettings** method will save and apply the new value and will reboot the device.

INFO: The current setting can be queried by using the [GET Method](#).

### 6.10.5. Applying Network Settings

#### Request and Response

```

→ request-line: POST http://<ip>/api/V1/MANAGEMENT/NETWORK/applySettings

```

INFO: The body has to be empty, and the content type should be text/plain.

```

← status-line:  200 OK
← body:         OK

```

#### Example

```

→ request-line: POST http://192.168.0.50/api/V1/MANAGEMENT/NETWORK/applySettings
← status-line:  200 OK
← body:         OK

```

All network settings that were changed are applied and network interface restarts.

### 6.10.6. Setting the Hostname

The host name is a property that can be used instead of the IP address when connecting to the device. It is also suitable for finding the device in the Device Discovery window of the LDC, see more details in the [Add New Favorite Device](#) section. Furthermore, it can be used to open the The Built-in Miniweb. If the IP address of the device is changing, the host name can be used as a fixed property.

After hostname changing, restarting network services is required. New SSL certificate will be generated.

#### Request and Response

```

→ request-line: POST http://<ip>/api/V1/MANAGEMENT/NETWORK/HostName
→ body:         <unique_name>

← status-line:  200 OK
← body:         <unique_name>

```

#### Parameters

The `<unique_name>` can be 1-64 character(s) long and the following are allowed for naming: the elements of the English alphabet and numbers. Hyphen (-) and dot (.) are also accepted, except as last character.

#### Example

```

→ request-line: POST http://192.168.0.50/api/V1/MANAGEMENT/NETWORK/HostName
→ body:         room-switcher

← status-line:  200 OK
← body:         room-switcher

```

## 6.11. Network Security

### 6.11.1. Enabling/Disabling Ethernet Port

#### Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/ETHERNET/<ethernet\_port>/Enabled  
 → body: <status>  
 ← status-line: 200 OK  
 ← body: <status>

#### Parameters

Identifier	Parameter description	Parameter values
<ethernet_port>	Ethernet port number	P1-P3 (device-dependent)
<status>	The port is enabled. The port is disabled.	true false

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/ETHERNET/P1/Enabled  
 → body: false  
 ← status-line: 200 OK  
 ← body: false

### 6.11.2. Querying Network Service Port Number

#### Request and Response #http #https

→ request-line: GET http://<ip>/api/V1/MANAGEMENT/NETWORK/SERVICES/<port>/Port  
 ← status-line: 200 OK  
 ← body: <port\_num>

#### Parameters

Identifier	Parameter description	Parameter values
<port>	Port type	HTTP HTTPS LW3 SERIAL1 SERIAL2
<port_num>	Port number	80 443 6107 8001 8002

#### Example

→ request-line: GET http://192.168.0.50/api/V1/MANAGEMENT/NETWORK/SERVICES/HTTP/Port  
 ← status-line: 200 OK  
 ← body: 80

### 6.11.3. Enabling/Disabling Network Service Port

#### Request and Response

→ request-line: GET http://<ip>/api/V1/MANAGEMENT/NETWORK/SERVICES/<port>/Enabled  
 → body: <status>  
 ← status-line: 200 OK  
 ← body: <status>

#### Parameters

Identifier	Parameter description	Parameter values
<port>	Port type	HTTP HTTPS
<status>	The port is enabled. The port is disabled.	true false

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MANAGEMENT/NETWORK/SERVICES/HTTP/Enabled  
 → body: false  
 ← status-line: 200 OK  
 ← body: false

### 6.11.4. Querying the Username for Authentication

INFO: MMX2 series deal with one user for authentication and the username (admin) can not be changed.

#### Request and Response

→ request-line: GET http://<ip>/api/V1/MANAGEMENT/NETWORK/AUTH/USER1/Name  
 ← status-line: 200 OK  
 ← body: admin

#### Example

→ request-line: GET http://192.168.0.50/api/V1/MANAGEMENT/NETWORK/AUTH/USER1/Name  
 ← status-line: 200 OK  
 ← body: admin

### 6.11.5. Setting Password for Authentication

**DIFFERENCE:** From firmware version v 2.2.0, The minimum character requirement for the password is 10 characters, and it can contain any UTF-8 character.

**INFO:** Due to security reasons, the password is not stored in any property, so it can not be queried. No password is set for default, setting a password before authorizing the authentication is necessary.

#### Request and Response *#password*

→ request-line: POST http://<ip>/api/V1/MANAGEMENT/NETWORK/AUTH/USER1/setPassword  
 → body: <password>  
 ← status-line: 200 OK  
 ← body: <password>

#### Parameters

Identifier	Parameter description	Value description
<password>	User defined password for authentication.	min. character length: 10 max. character length: 100 accepted characters: UTF-8 characters

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MANAGEMENT/NETWORK/AUTH/USER1/setPassword  
 → body: #password12  
 ← status-line: 200 OK  
 ← body: #password12

### 6.11.6. Enabling Authentication

**INFO:** Set the password before enabling the authentication, because no password is set by default. Restart of the HTTP(S) services is required to apply the authentication settings.

#### Request and Response

→ request-line: POST http://<ip>/api/V1/MANAGEMENT/NETWORK/SERVICES/<port>/AuthenticationEnabled  
 → body: <status>  
 ← status-line: 200 OK  
 ← body: <status>

#### Parameters

Identifier	Parameter description	Parameter values
<port>	Port type	HTTP HTTPS
<status>	Authentication enabled Authentication disabled	true false

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MANAGEMENT/NETWORK/SERVICES/HTTP/AuthenticationEnabled  
 → body: false  
 ← status-line: 200 OK  
 ← body: false

## 6.12. Serial Port Configuration

INFO: Port numbering can be found in the [Port Numbering](#) section.

### 6.12.1. BAUD Rate Setting

#### Request and Response *#rs-232 #rs232*

→ request-line: POST http://<ip>/api/V1/MEDIA/SERIAL/<serial\_port>/Baudrate  
 → body: <baudrate>  
 ← status-line: 200 OK  
 ← body: <baudrate>

#### Parameters

Identifier	Parameter description	Parameter values
<serial_port>	Serial port number	P1-P2
<baudrate>	Baud rate value	9600, 19200, 38400, 57600, 115200

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/SERIAL/P1/Baudrate  
 → body: 19200  
 ← status-line: 200 OK  
 ← body: 19200

### 6.12.2. Stop Bits Setting

#### Request and Response *#rs232 #rs-232 #serial*

→ request-line: POST http://<ip>/api/V1/MEDIA/SERIAL/<serial\_port>/StopBits  
 → body: <stopbits>  
 ← status-line: 200 OK  
 ← body: <stopbits>

#### Parameters

Identifier	Parameter description	Parameter values
<serial_port>	Serial port number	P1-P2
<stopbits>	Stop bit value	1 2

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/SERIAL/P1/StopBits  
 → body: 1  
 ← status-line: 200 OK  
 ← body: 1

### 6.12.3. Querying Data Bits

#### Request and Response

→ request-line: GET http://<ip>/api/V1/MEDIA/SERIAL/<serial\_port>/DataBits  
 ← status-line: 200 OK  
 ← body: <databits>

#### Parameters

Identifier	Parameter description	Parameter values
<serial_port>	Serial port number	P1-P2
<databits>	DataBits value	8 9

#### Example

→ request-line: GET http://192.168.0.50/api/V1/MEDIA/SERIAL/P1/DataBits  
 ← status-line: 200 OK  
 ← body: 8

### 6.12.4. Parity Setting

#### Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/SERIAL/<serial\_port>/Parity  
 → body: <parity>  
 ← status-line: 200 OK  
 ← body: <parity>

#### Parameters

Identifier	Parameter description	Parameter values
<serial_port>	Serial port number	P1-P2
<parity>	Parity value	None Odd Even

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/SERIAL/P1/Parity  
 → body: None  
 ← status-line: 200 OK  
 ← body: None



### 6.12.5. Querying the Serial over IP Port Number

#### Request and Response

→ request-line: GET http://<ip>/api/V1/MEDIA/SERIAL/<serial\_port>/SERIALOVERIP/Port  
 ← status-line: 200 OK  
 ← body: <port\_nr>

#### Parameters

Identifier	Parameter description	Parameter values
<serial_port>	Serial port number	P1-P2
<port_nr>	Serial over IP port number	8001 8002

#### Example

→ request-line: GET http://192.168.0.50/api/V1/MEDIA/SERIAL/P1/SERIALOVERIP/Port  
 ← status-line: 200 OK  
 ← body: 8001

### 6.12.6. Enabling the Serial over IP Port

#### Request and Response #rs232 #rs-232 #serial

→ request-line: POST http://<ip>/api/V1/MEDIA/SERIAL/<serial\_port>/SERIALOVERIP/Enabled  
 → body: <state>  
 ← status-line: 200 OK  
 ← body: <state>

#### Parameters

Identifier	Parameter description	Parameter values
<serial_port>	Serial port number	P1-P2
<state>		true false

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/SERIAL/P1/SERIALOVERIP/Enabled  
 → body: false  
 ← status-line: 200 OK  
 ← body: false

## 6.13. Serial Port Messaging

### 6.13.1. Sending a Message via RS-232

**ATTENTION!** Serial message sending is implemented only via Lightware REST API. This function is not available with LW3 protocol command. #message

#### Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/SERIAL/<serial\_port>/send  
 → body: <message>  
 ← status-line: 200 OK

#### Parameters

Identifier	Parameter description	Parameter values
<serial_port>	Serial port number	P1-P2
<message>	Serial message	Any format is acceptable (text, binary, hexadecimal etc.), maximum message size is 100K. Escaping is unnecessary.

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/SERIAL/P1/send  
 → body: PWR0  
 ← status-line: 200 OK

The 'PWR0' message is sent out via the P1 serial port.

**INFO:** The device can receive a serial message by a special way. When a message is sent from the device, the response from the connected device is accepted within 100 ms. The communication is closed after that time interval.

## 6.14. GPIO Port Configuration

### 6.14.1. Setting the Direction of a GPIO Pin

#### Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/GPIO/<pin>/Direction  
 → body: <dir>  
 ← status-line: 200 OK  
 ← body: <dir>

#### Parameters

Parameter	Parameter description	Value	Value description
<pin>	GPIO pin number.	<b>P1-P6</b>	
<dir>	The direction of the GPIO pin.	<b>Input</b>	input
		<b>Output</b>	output

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/GPIO/P1/Direction  
 → body: Input  
 ← status-line: 200 OK  
 ← body: Input

### 6.14.2. Setting the Output Level of a GPIO Pin

#### Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/GPIO/<pin>/Output  
 → body: <state>  
 ← status-line: 200 OK  
 ← body: <state>

#### Parameters

Parameter	Parameter description	Value	Value description
<pin>	GPIO pin number.	<b>P1-P6</b>	
<value>	The output value of the GPIO pin.	<b>High</b>	high level
		<b>Low</b>	low level

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/GPIO/P1/Output  
 → body: High  
 ← status-line: 200 OK  
 ← body: High

### 6.14.3. Setting the Output Level for a Specified Time

#### Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/GPIO/<pin>/interval  
 → body: <value>;<time>  
 ← status-line: 200 OK  
 ← body: <value>;<time>

#### Parameters

Parameter	Parameter description	Value	Value description
<pin>	GPIO pin number.	<b>P1-P6</b>	
<value>	The output value of the GPIO pin.	<b>High</b>	high level
		<b>Low</b>	low level
<time>	Duration of the desired value in seconds.	<b>1-120</b>	seconds

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/GPIO/P1/interval  
 → body: Low;1  
 ← status-line: 200 OK  
 ← body: OK

### 6.14.4. Toggling the Level of a GPIO Pin

The output level can be changed from low to high and from high to low by the command below.

#### Request and Response

→ request-line: POST http://<ip>/api/V1/MEDIA/GPIO/<pin>/toggle  
 INFO: The body has to be empty, and the content type should be text/plain.  
 ← status-line: 200 OK  
 ← body: OK

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/GPIO/P1/toggle  
 ← status-line: 200 OK  
 ← body: OK

## 6.15. OCS Port Configuration

### 6.15.1. Querying the Input Level of an OCS Pin

#### Request and Response #ocs

→ request-line: GET·http://<ip>/api/V1/MEDIA/OCS/P1/InputLevel  
 ← status-line: 200·OK  
 ← body: <value>

#### Parameters

Parameter	Parameter description	Value	Value description
<value>	The input value of the OCS pin.	High	high level
		Low	low level

#### Example

→ request-line: GET http://192.168.0.50/api/V1/MEDIA/OCS/P1/InputLevel  
 ← status-line: 200 OK  
 ← body: Low

### 6.15.2. Setting the Sensor Type

#### Request and Response

→ request-line: POST·http://<ip>/api/V1/MEDIA/OCS/P1/SensorType  
 → body: <sensor\_type>  
 ← status-line: 200 OK  
 ← body: <sensor\_type>

#### Parameters

Parameter	Parameter description	Value	Value description
<sensor_type>	It defines whether the low or high input level means the occupancy.	Active low	Occupancy status is 'Occupied' when the input level is low.
		Active high	Occupancy status is 'Occupied' when the input level is high (default value).

#### Example

→ request-line: POST http://192.168.0.50/api/V1/MEDIA/OCS/P1/SensorType  
 → body: Active low  
 ← status-line: 200 OK  
 ← body: Active low

### 6.15.3. Querying the Reported OCS State

#### Request and Response

→ request-line: GET·http://<ip>/api/V1/MEDIA/OCS/P1/State  
 ← status-line: 200·OK  
 ← body: <status>

#### Parameters

Parameter	Parameter description	Value	Value description
<status>	It reports the occupancy state of the room depending on the sensor type.	Free	When the SensorType=Active high and the Inputlevel=Low or when SensorType=Active low and Inputlevel=High
		Occupied	When the SensorType=Active high and the Inputlevel=High or when SensorType=Active low and Inputlevel=Low

#### Example

→ request-line: GET http://192.168.0.50/api/V1/MEDIA/OCS/P1/State  
 ← status-line: 200 OK  
 ← body: Free

## 6.16. Updating the Device via REST API

### 6.16.1. Querying the Update REST API Version

#### Request and Response

→ request: GET http://<ip>/api/V1/MANAGEMENT/UPDATE/Version  
 ← response: <standard\_response>  
 ← body: <major>.<minor>

#### Parameters


Parameter	Parameter description	Values	Value description
<ip>	The IP address of the device separated with dots.		e.g.: 192.168.0.110
<standard_response>	Standard HTTP response	<b>200 OK</b> <b>400 Bad request</b>	The request has succeeded. The request cannot be processed.
<major>	REST API major version number		
<minor>	REST API minor version number		

#### Example

→ request: GET http://192.168.0.11/api/V1/MANAGEMENT/UPDATE/Version  
 ← response: 200 OK  
 ← body: 1.1

### 6.16.2. The Updating Process

The API allows the device to update itself with an **LFP2** FW package. This new approach means there is no need to run a software on the connected PC (in case of LDU2) for updating the Lightware device.

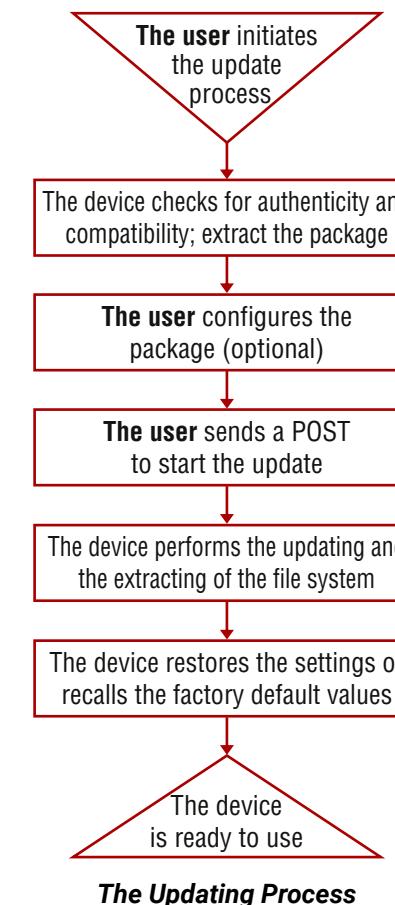

#### The Updating Steps

1. The **User uploads the package** to a dedicated URL.
  - The package is being unpacked during the uploading process.
  - The package is checked by the device to see if they are compatible with each other.
2. The **User can set the uploaded package**.
  - The factory default settings can be recalled (this is the default setting of the package) or the current settings of the device can be restored (optional).
3. The **User starts the self-updating process** by sending a POST method.
  - The device performs the operations in connection with the update (e.g. file system replacement).
  - The device restores the previous settings to the new system, if it was set to.
4. The device is ready to use.

### 6.16.3. Uploading the Package

This step may take up to one or two minutes to finish as the size of the LFP2 package is approx. 100-150 MB (depends on the device and FW version).

#### Request and Response

→ request: POST-<http://<ip/host>/api/V1/MANAGEMENT/UPDATE/Package>  
 → body: <LFP2 file>  
 → content-type: application/octet-stream  
 ← response: <standard\_response>  
 ← body: <message>

#### Parameters

Parameter	Parameter description	Values	Value description
<ip/host>	The IP address or the host name of the device.		e.g.: 192.168.0.110, myDevice
<standard_response>	Standard HTTP response	<b>200 OK</b>	<message>: <b>OK</b> The request has succeeded; the whole package is extracted and the basic checks are done.
		<b>400 Bad request</b>	<message>: <b>Package incompatible: Incompatible partnumber: [...]</b> The request cannot be processed; error during the uploading/checking. e.g. the package is not compatible with the device. The <message> is in text/plain format.
		<b>500 Internal Server Error</b>	<message>: <b>Socket timeout</b> The package uploading was not successful. Please try it again.

#### Example

→ request: POST <http://192.168.0.114/api/V1/MANAGEMENT/UPDATE/Package>  
 → body: (the LFP2 file)  
 ← response: 200 OK  
 ← body: OK

### 6.16.4. Configuration Parameters – Keep the Current Settings

**DIFFERENCE:** This feature is available from FW package v2.1.0.

**ATTENTION!** Restoring the device settings is not allowed if the firmware is **downgraded** to a previous version or the existing (=running) FW package of the device is v1.x. In those cases, recalling the factory default settings is a must.

This is an **optional step** that allows keeping the current settings of the device. The **default setting** of an update is to **recall the factory default** values. If you want to keep the current settings of the device, delete the '**dofactoryreset**' file from the uploaded package as follows:

#### Request and Response

→ request: DELETE-<http://<ip/host>/api/V1/MANAGEMENT/UPDATE/CONFIG/dofactoryreset>  
 ← response: <standard\_response>  
 ← body: <message>

#### Parameters

Parameter	Parameter description	Values	Value description
<ip/host>	The IP address or the host name of the device.		e.g.: 192.168.0.110, myDevice
<standard_response>	Standard HTTP response	<b>200 OK</b>	"Deleted"
		<b>405 Method not allowed</b>	LFP2 package was not uploaded to the device.
		<b>500 Internal Server Error</b>	The file does not exist in the uploaded package (e.g. it was deleted previously). Continue the update process.

#### Example

→ request: DELETE <http://192.168.0.114/api/V1/MANAGEMENT/UPDATE/CONFIG/dofactoryreset>  
 ← response: 200 OK  
 ← body: Deleted

### 6.16.5. Executing the Update

The command is for installing the uploaded package in place of the current system. This step may take up to 7 minutes.

#### Request and Response

→ request: POST http://<ip/host>/api/V1/MANAGEMENT/UPDATE/update  
 → body: <payload>  
 → content-type: text/plain  
 ← response: <standard\_response>  
 ← body: <message>

#### Parameters

Parameter	Parameter description	Values	Value description
<ip/host>	The IP address or the host name of the device.		e.g.: 192.168.0.110, myDevice
<payload>	optional	<b>force</b>	The update can be forced to run in <b>Package incompatible</b> error state, but the security check cannot be bypassed ( <b>Package untrusted</b> state).
<standard_response>	Standard HTTP response	<b>200 OK</b>	The request has succeeded; the update process finished successfully.
		<b>400 Bad request</b>	The request cannot be processed. it may happen that the uploaded package is not compatible with the device ( <b>Package incompatible</b> error state) and the <b>force</b> payload was <b>not</b> used.

**ATTENTION!** Please note that running a **forced update** can make the device inoperable.

#### Example

→ request: POST http://192.168.0.114/api/V1/MANAGEMENT/UPDATE/update  
 ← response: 200 OK  
 ← body: OK

When the 'force' payload is used:

→ request: POST http://192.168.0.114/api/V1/MANAGEMENT/UPDATE/update  
 → body: force  
 → content-type: RAW (JSON)  
 ← response: 200 OK  
 ← body: OK

### 6.16.6. Querying the State of the Updating Process

This command is for querying the current state of the updating process.

#### Request and Response

→ request: GET http://<ip/host>/api/V1/MANAGEMENT/UPDATE/Status  
 ← response: <standard\_response>  
 ← body: <message>

#### Parameters

Parameter	Parameter description	Values	Value description
<ip/host>	The IP address or the host name of the device.		e.g.: 192.168.0.110, myDevice
<standard_response>	Standard HTTP response	<b>200 OK</b>	The request has succeeded. <message> states: <b>Idle</b> : not active, update has not started yet. <b>Package uploading</b> : updating and checking is in progress. <b>Package ready</b> : uploading is done, checking is successful.
		<b>400 Bad Request</b>	The request cannot be processed. <message> states: <b>Package incompatible</b> : the uploaded package is not compatible with the device. <b>Package untrusted</b> : the uploaded package is not secure. <b>Failed</b> : the update is not successful.

**INFO:** Please note that while the new firmware is being programmed in the device, it cannot send a response for a request. Thus the current state cannot be requested either.

After the firmware update is finished successfully, the device would send the 'Idle' response when requesting its status with this command.

#### Example

→ request: GET http://192.168.0.114/api/V1/MANAGEMENT/UPDATE/Status  
 ← response: 200 OK  
 ← body: Package uploading

## 6.17. Lightware REST API Quick Summary

### System Commands

#### Setting the Device Label

- request-line: POST·http://<ip>/api/V1/MANAGEMENT/LABEL/DeviceLabel
- body: <custom\_name>

#### Resetting the Device

- request-line: POST·http://<ip>/api/V1/SYS/restart

#### Restoring the Factory Default Settings

- request-line: POST·http://<ip>/api/V1/SYS/factoryDefaults

#### Querying the Firmware Package Version

- request-line: GET·http://<ip>/api/V1/MANAGEMENT/UID/PACKAGE/Version

#### Control Lock

- request-line: POST·http://<ip>/api/V1/MANAGEMENT/UI/ControlLock
- body: <lock\_status>

#### Setting the Current Time

- request-line: POST·http://<ip>/api/V1/MANAGEMENT/DATETIME/setTime
- body: <current\_time>

#### Identifying the Device

- request-line: POST·http://<ip>/api/V1/MANAGEMENT/UI/identifyMe

#### Toggling the Dark Mode Setting

- request-line: POST·http://<ip>/api/V1/MANAGEMENT/UI/DARKMODE/Enable
- body: <mode\_state>

#### Setting the Delay of the Dark Mode

- request-line: POST·http://<ip>/api/V1/MANAGEMENT/UI/DARKMODE/Delay
- body: <delay\_time>

### Video Port Settings - General

#### Switching Video Input

- request-line: POST·http://<ip>/api/V1/MEDIA/VIDEO/XP/switch
- body: <in>:<out>

#### Switching an Input to All Outputs

- request-line: POST·http://<ip>/api/V1/MEDIA/VIDEO/XP/switchAll
- body: <in>

#### Locking the Video Port

- request-line: POST·http://<ip>/api/V1/MEDIA/VIDEO/XP/<port>/Lock
- body: <locked\_state>

#### Muting the Video Port

- request-line: POST·http://<ip>/api/V1/MEDIA/VIDEO/XP/<port>/Mute
- body: <muted\_state>

#### Setting the Autoselect Policy

- request-line: POST·http://<ip>/api/V1/MEDIA/VIDEO/AUTOSELECT/<out>/Policy
- body: <autoselect\_mode>

#### Changing the Autoselect-Included Input Ports

- request-line: POST·http://<ip>/api/V1/MEDIA/VIDEO/AUTOSELECT/<out>/<in>/Included
- body: <state>

#### Changing the Input Port Priority

- request-line: POST·http://<ip>/api/V1/MEDIA/VIDEO/AUTOSELECT/<out>/<in>/Priority
- body: <prio\_num>

#### Querying the Connected Source

- request-line: GET·http://<ip>/api/V1/MEDIA/VIDEO/XP/<out>/ConnectedSource

#### Querying the Connected Destinations

- request-line: GET·http://<ip>/api/V1/MEDIA/VIDEO/XP/<in>/ConnectedDestinations

#### Querying the Input Switching Capability

- request-line: GET·http://<ip>/api/V1/MEDIA/VIDEO/XP/<out>/SWITCHABLE/<in>

#### Querying the Video Signal Presence

- request-line: GET·http://<ip>/api/V1/MEDIA/VIDEO/<port>/SignalPresent

#### HDCP Setting (Input Port)

- request-line: POST·http://<ip>/api/V1/MEDIA/VIDEO/<in>/HDCP/AllowedHdcpVersion
- body: <allowed\_hdcp>

#### HdcpMode

- request-line: POST·http://<ip>/api/V1/MEDIA/VIDEO/<out>/HdcpMode
- body: <hdcp\_mode>

#### Querying Embedded Audio Presence

- request-line: GET·http://<ip>/api/V1/MEDIA/VIDEO/<port>/EmbeddedAudioPresent

#### Muting Embedded Audio

- request-line: POST·http://<ip>/api/V1/MEDIA/VIDEO/<port>/EmbeddedAudioMute
- body: <mute\_state>

### Setting Output Signal Type

- request-line: POST·http://<ip>/api/V1/MEDIA/VIDEO/<out>/OutputSignalType
- body: <signal\_type>

### Turning on Output 5V

- request-line: POST·http://<ip>/api/V1/MEDIA/VIDEO/<out>/Output5VMode
- body: <5V\_pwr>

## CEC Command Sending

### Simple CEC Code Sending

- request-line: POST·http://<ip>/api/V1/MEDIA/VIDEO/<port>/CEC/send
- body: <command>

### Remote Control Code Sending

- request-line: POST·http://<ip>/api/V1/MEDIA/VIDEO/<port>/CEC/sendUserControlClick
- body: <command>

## Audio Port Settings

### Switching Audio Input

- request-line: POST·http://<ip>/api/V1/MEDIA/AUDIO/XP/switch
- body: <audio\_in>:O3

### Querying the Connected Source

- request-line: GET·http://<ip>/api/V1/MEDIA/AUDIO/XP/O3/ConnectedSource

### Querying the Connected Destinations

- request-line: GET·http://<ip>/api/V1/MEDIA/AUDIO/XP/<audio\_in>/ConnectedDestinations

### Setting Autoselect Operation Mode

- request-line: POST·http://<ip>/api/V1/MEDIA/AUDIO/AUTOSELECT/O4/Policy
- body: <op\_mode>

### Setting the Followed Video Port to Autoselect

- request-line: POST·http://<ip>/api/V1/MEDIA/AUDIO/AUTOSELECT/O3/VideoFollowPort
- body: <out>

### Locking the Audio Port

- request-line: POST·http://<ip>/api/V1/MEDIA/AUDIO/XP/<audio\_port>/Lock
- body: <locked\_state>

### Muting the Audio Port 1

- request-line: POST·http://<ip>/api/V1/MEDIA/AUDIO/XP/<audio\_port>/Mute
- body: <muted\_state>

### Muting the Audio Port 2

- request-line: POST·http://<ip>/api/V1/MEDIA/AUDIO/O4/Mute
- body: <muted\_state>

### Querying the Audio Signal Presence

- request-line: GET·http://<ip>/api/V1/MEDIA/AUDIO/<audio\_port>/SignalPresent

### Analog Audio Output Volume (dB) Setting

- request-line: POST·http://<ip>/api/V1/MEDIA/AUDIO/O4/VolumedB
- body: <level>

### Analog Audio Output Volume Percent Setting

- request-line: POST·http://<ip>/api/V1/MEDIA/AUDIO/O4/VolumePercent
- body: <percent>

### Setting the Balance

- request-line: POST·http://<ip>/api/V1/MEDIA/AUDIO/O4/Balance
- body: <level>

### Analog Audio Output Level Setting by Steps (dB)

- request-line: POST·http://<ip>/api/V1/MEDIA/AUDIO/O4/stepVolumedB
- body: <step>

### Analog Audio Output Level Setting by Steps in Percent

- request-line: POST·http://<ip>/api/V1/MEDIA/AUDIO/O4/stepVolumePercent
- body: <step>

### Analog Audio Output Balance Setting by Steps

- request-line: POST·http://<ip>/api/V1/MEDIA/AUDIO/O4/stepBalance
- body: <step>

## EDID Management

### Querying the Emulated EDIDs

- request-line: GET·http://<ip>/api/V1/EDID/EdidStatus

### Querying the Validity of a Dynamic EDID

- request-line: GET·http://<ip>/api/V1/EDID/D/D1/Validity

### Query the Preferred Resolution of a User EDID

- request-line: GET·http://<ip>/api/V1/EDID/U/<user\_edid>/PreferredResolution

### Emulating an EDID to an Input Port

- request-line: POST·http://<ip>/api/V1/EDID/switch
- body: <source>:<destination>



**Emulating an EDID to All Input Ports**

- request-line: POST·http://<ip>/api/V1/EDID/switchAll
- body: <source>

**Copying an EDID to User Memory**

- request-line: POST·http://<ip>/api/V1/EDID/copy
- body: <source>:<destination>

**Deleting an EDID from User Memory**

- request-line: POST·http://<ip>/api/V1/EDID/delete
- body: <user\_edid>

**Resetting the Emulated EDIDs**

- request-line: POST·http://<ip>/api/V1/EDID/reset

**Ethernet Port Configuration****Setting the DHCP State**

- request-line: POST·http://<ip>/api/V1/MANAGEMENT/NETWORK/DhcpEnabled
- body: <dhcp\_status>

**Changing the IP Address (Static)**

- request-line: POST·http://<ip>/api/V1/MANAGEMENT/NETWORK/StaticIpAddress
- body: <IP\_address>

**Changing the Subnet Mask (Static)**

- request-line: POST·http://<ip>/api/V1/MANAGEMENT/NETWORK/StaticNetworkMask
- body: <netmask>

**Changing the Gateway Address (Static)**

- request-line: POST·http://<ip>/api/V1/MANAGEMENT/NETWORK/StaticGatewayAddress
- body: <gw\_address>

**Applying Network Settings**

- request-line: POST·http://<ip>/api/V1/MANAGEMENT/NETWORK/applySettings

**Setting the Hostname**

- request-line: POST·http://<ip>/api/V1/MANAGEMENT/NETWORK/HostName
- body: <unique\_name>

**Network Security****Enabling/Disabling Ethernet Port**

- request-line: POST·http://<ip>/api/V1/MEDIA/ETHERNET/<ethernet\_port>/Enabled
- body: <status>

**Querying Network Service Port Number**

- request-line: GET·http://<ip>/api/V1/MANAGEMENT/NETWORK/SERVICES/<port>/Port

**Enabling/Disabling Network Service Port**

- request-line: GET·http://<ip>/api/V1/MANAGEMENT/NETWORK/SERVICES/<port>/Enabled
- body: <status>

**Querying the Username for Authentication**

- request-line: GET·http://<ip>/api/V1/MANAGEMENT/NETWORK/AUTH/USER1/Name

**Setting Password for Authentication**

- request-line: POST·http://<ip>/api/V1/MANAGEMENT/NETWORK/AUTH/USER1/setPassword
- body: <password>

**Enabling Authentication**

- request-line: POST·http://<ip>/api/V1/MANAGEMENT/NETWORK/SERVICES/<port>/AuthenticationEnabled
- body: <status>

**Serial Port Configuration****BAUD Rate Setting**

- request-line: POST·http://<ip>/api/V1/MEDIA/SERIAL/<serial\_port>/Baudrate
- body: <baudrate>

**Stop Bits Setting**

- request-line: POST·http://<ip>/api/V1/MEDIA/SERIAL/<serial\_port>/StopBits
- body: <stopbits>

**Querying Data Bits**

- request-line: GET·http://<ip>/api/V1/MEDIA/SERIAL/<serial\_port>/DataBits

**Parity Setting**

- request-line: POST·http://<ip>/api/V1/MEDIA/SERIAL/<serial\_port>/Parity
- body: <parity>

**Querying the Serial over IP Port Number**

- request-line: GET·http://<ip>/api/V1/MEDIA/SERIAL/<serial\_port>/SERIALOVERIP/Port

**Enabling the Serial over IP Port**

- request-line: POST·http://<ip>/api/V1/MEDIA/SERIAL/<serial\_port>/SERIALOVERIP/Enabled
- body: <state>

**Serial Port Messaging****Sending a Message via RS-232**

- ➔ request-line: POST·http://<ip>/api/V1/MEDIA/SERIAL/<serial\_port>/send
- ➔ body: <message>

**GPIO Port Configuration****Setting the Direction of a GPIO Pin**

- ➔ request-line: POST·http://<ip>/api/V1/MEDIA/GPIO/<pin>/Direction
- ➔ body: <dir>

**Setting the Output Level of a GPIO Pin**

- ➔ request-line: POST·http://<ip>/api/V1/MEDIA/GPIO/<pin>/Output
- ➔ body: <state>

**Setting the Output Level for a Specified Time**

- ➔ request-line: POST·http://<ip>/api/V1/MEDIA/GPIO/<pin>/interval
- ➔ body: <value>;<time>

**Toggling the Level of a GPIO Pin**

- ➔ request-line: POST·http://<ip>/api/V1/MEDIA/GPIO/<pin>/toggle

**OCS Port Configuration****Querying the Input Level of an OCS Pin**

- ➔ request-line: GET·http://<ip>/api/V1/MEDIA/OCS/P1/InputLevel

**Setting the Sensor Type**

- ➔ request-line: POST·http://<ip>/api/V1/MEDIA/OCS/P1/SensorType
- ➔ body: <sensor\_type>

**Querying the Reported OCS State**

- ➔ request-line: GET·http://<ip>/api/V1/MEDIA/OCS/P1/State

**Updating the Device via REST API****Querying the Update REST API Version**

- ➔ request: GET·http://<ip>/api/V1/MANAGEMENT/UPDATE/Version

**Uploading the Package**

- ➔ request: POST·http://<ip/host>/api/V1/MANAGEMENT/UPDATE/Package
- ➔ body: <LFP2 file>
- ➔ content-type: application/octet-stream

**Configuration Parameters – Keep the Current Settings**

- ➔ request: DELETE·http://<ip/host>/api/V1/MANAGEMENT/UPDATE/CONFIG/dofactoryreset

**Executing the Update**

- ➔ request: POST·http://<ip/host>/api/V1/MANAGEMENT/UPDATE/update
- ➔ body: <payload>
- ➔ content-type: text/plain

**Querying the State of the Updating Process**

- ➔ request: GET·http://<ip/host>/api/V1/MANAGEMENT/UPDATE/Status

# 7

## LW3 Programmers' Reference

The device can be controlled through Lightware 3 (LW3) protocol commands to ensure the compatibility with other Lightware products. The supported LW3 commands are described in this chapter.

- ▶ [OVERVIEW](#)
- ▶ [INSTRUCTIONS FOR THE TERMINAL APPLICATION USAGE](#)
- ▶ [WEBSOCKET \(WS\) OR SECURED WEBSOCKET \(WSS\) USAGE](#)
- ▶ [PROTOCOL RULES](#)
- ▶ [SYSTEM COMMANDS](#)
- ▶ [VIDEO PORT SETTINGS - GENERAL](#)
- ▶ [CEC COMMAND SENDING](#)
- ▶ [AUDIO PORT SETTINGS](#)
- ▶ [EDID MANAGEMENT](#)
- ▶ [ETHERNET PORT CONFIGURATION](#)
- ▶ [NETWORK SECURITY](#)
- ▶ [SERIAL PORT CONFIGURATION](#)
- ▶ [SENDING A MESSAGE VIA RS-232](#)
- ▶ [GPIO PORT CONFIGURATION](#)
- ▶ [OCS PORT CONFIGURATION](#)
- ▶ [LW3 COMMANDS - QUICK SUMMARY](#)

## 7.1. Overview

The Lightware Protocol #3 (LW3) is implemented in almost all new Lightware devices (matrix switchers, signal extenders and distribution amplifiers) since 2012. The protocol is ASCII-based and all commands are terminated with a carriage return (Cr, '\r') and line feed (Lf, '\n') pair. It is organized as a tree structure that provides outstanding flexibility and user-friendly handling with 'nodes', 'properties' and 'methods'. The **Advanced View** of the Lightware Device Controller software is the perfect tool for browsing and learning how the LW3 protocol can be used in practice.

## 7.2. Instructions for the Terminal Application Usage

### Terminal Application


The LW3 protocol commands can be applied to the switcher using a terminal application. You need to install one of them on your control device, for example **Putty** or **CLI**. `#terminal`

### Establishing Connection

Follow the steps to establish connection to the switcher:

- Step 1.** Connect the switcher to a LAN over Ethernet.
- Step 2.** Open the terminal application (e.g. Putty).
- Step 3.** Add the **IP address** of the device (default: DHCP) and the **port number (6107)**.
- Step 4.** Select the **Raw** connection type, and open the connection.

Once the terminal window is opened, you can enter the LW3 protocol commands, which are listed in the following sections.

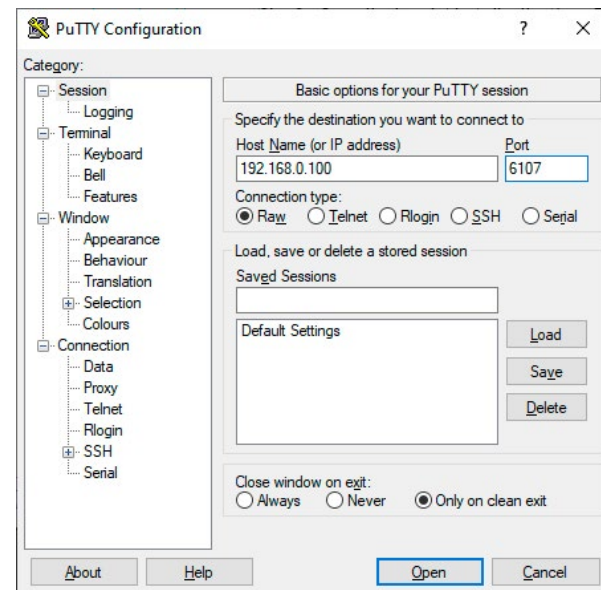

```

172.24.5.39 - PuTTY
GET /V1/MEDIA/+
n- /V1/MEDIA/AUDIO/I1
n- /V1/MEDIA/AUDIO/I2
n- /V1/MEDIA/AUDIO/I3
n- /V1/MEDIA/AUDIO/I4
n- /V1/MEDIA/AUDIO/O1
n- /V1/MEDIA/AUDIO/O2
n- /V1/MEDIA/AUDIO/O3
n- /V1/MEDIA/AUDIO/XP
n- /V1/MEDIA/AUDIO/AUTOSELECT
n- /V1/MEDIA/ETHERNET/P1
n- /V1/MEDIA/ETHERNET/P2
n- /V1/MEDIA/ETHERNET/P3
n- /V1/MEDIA/ETHERNET/P4
n- /V1/MEDIA/ETHERNET/P5
n- /V1/MEDIA/USB/U1
n- /V1/MEDIA/USB/U2

```

LW3 protocol command communication in a terminal window

## 7.3. Websocket (WS) or Secured Websocket (WSS) Usage

MMX2 series switcher provides WS/WSS services on its 80 (for WS) and 443 (for WSS) ports to control the device with LW3 protocol commands. For more details about the websocket, see the [WebSocket Service \(WS, WSS\)](#) section.

The LW3 node tree is available after opening a session with the device on the following path:


- `ws://<ip>/lw3`
- `wss://<ip>/lw3`

### WebSocket Client Application

#### Establishing the Connection


Follow the steps to establish connection to the switcher:

- Step 1.** Connect the receiver to a LAN over Ethernet.
- Step 2.** Open the websocket client (e.g. Simple websocket Client).
- Step 3.** Add the **IP address** of the device (default: DHCP): `ws://<ip>/lw3` or `wss://<ip>/lw3`
- Step 4.** Press the open/connect button.
- Step 5.** Once connected, enter a message and press the Send button.
- Step 6.** Press the Close/Disconnect button to end the session.

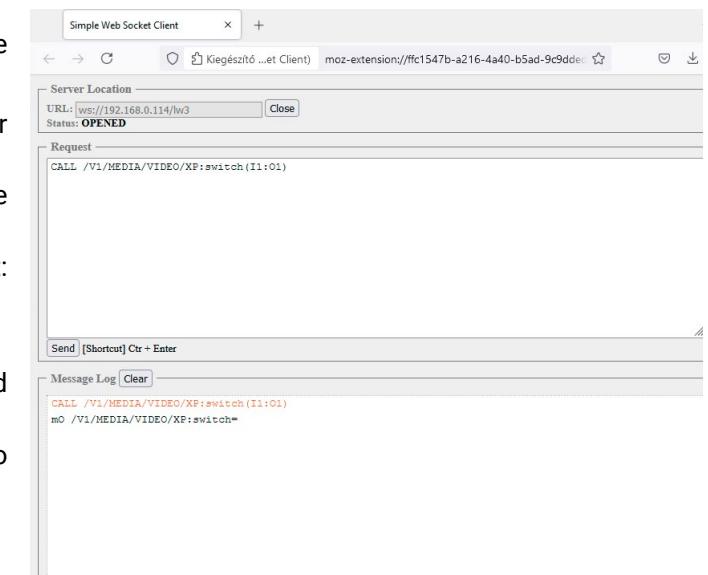

## 7.4. Protocol Rules

### 7.4.1. LW3 Tree Structure and Command Structure (examples)

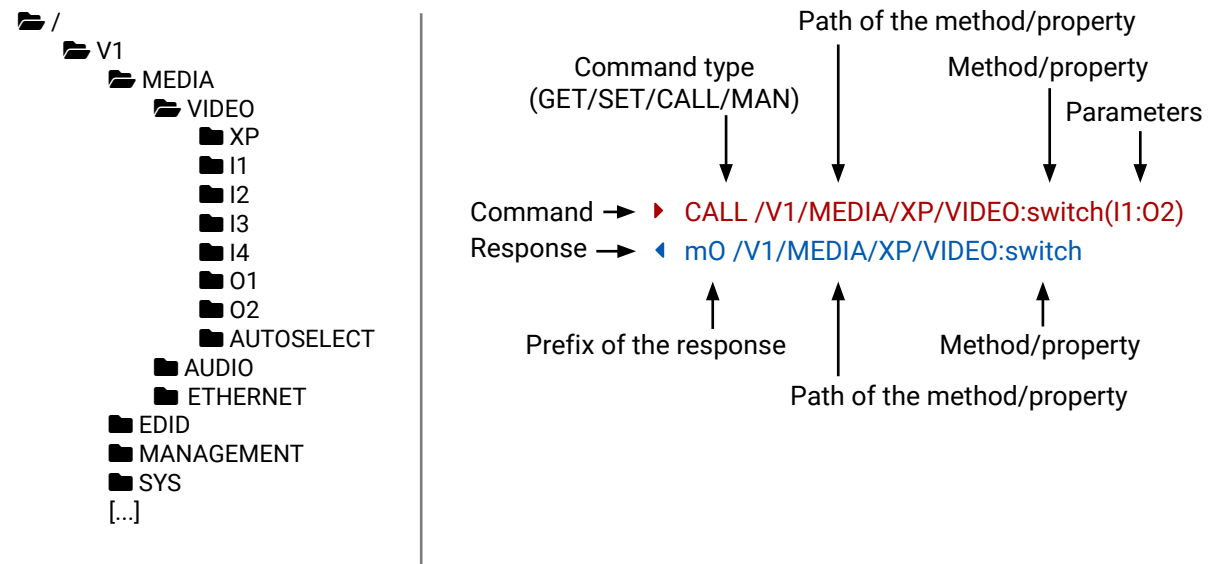

### 7.4.2. General Rules

- Up to FW version v2.9.0, all names and parameters are **case-sensitive**.
- The nodes are separated by a slash ('/') character.
- The node name can contain the elements of the English alphabet and numbers.
- Use the **TCP port no. 6107** when using LW3 protocol over Ethernet.
- The 80 port can be used for WS (instead of HTTP)
- The 443 port can be used for WSS (instead of HTTPS)
- When a command is issued by the device, the received response cannot be processed by the CPU.
- The node paths describe the exact location of the node, listing each parent node up to the root.
- The length of a line (command/response, command type / prefix, path, method/property and parameters together) can be max. 800 bytes.
- The command lines have to be closed by Carriage Return and Line Feed (CrLf)
- It can manage 18 connected clients in total simultaneously for WS (80), WSS (443) and LW3 (6107) ports.

### 7.4.3. Legend for the Control Commands

#### Command and Response – Example

- ▶ GET-/V1/MEDIA/VIDEO/I2.SignalPresent
- ◀ pr-/V1/MEDIA/VIDEO/I2.SignalPresent=<signal\_present>

Format	Description
<in>	Input port number
<out>	Output port number
<port>	Input or output port number
<loc>	Location number
<parameter>	Variable defined and described in the command
<expression>	Batched parameters: the underline means that more expressions or parameters can be placed by using a semicolon, e.g. <b>I2;I4</b> or <b>F27:E1;F47:E2</b>
▶	Sent command
◀	Received response
.	Space character

Further not listed <parameters> are defined at each command.

#### 7.4.4. Command Types

##### GET Command

The **GET** command can be used to get the child nodes, properties and methods of a specific node. It can also be used to get the value of a property. Use the dot character (.) when addressing a property:

- ▶ **GET /.SerialNumber**
- ◀ **pr /.SerialNumber=87654321**

##### GETALL Command

The **GETALL** command can be used to get all child nodes, properties and methods of a node with one command.

- ▶ **GETALL /V1/MEDIA/ETHERNET**
- ◀ **n- /V1/MEDIA/ETHERNET/P1**
- ◀ **n- /V1/MEDIA/ETHERNET/P2**
- ◀ **n- /V1/MEDIA/ETHERNET/P3**
- ◀ **n- /V1/MEDIA/ETHERNET/P4**
- ◀ **n- /V1/MEDIA/ETHERNET/P5**

##### SET Command

The **SET** command can be used to modify the value of a property. Use the dot character (.) when addressing the property:

- ▶ **SET /V1/MEDIA/VIDEO/I2/HDCP.AllowedHdcpVersion=Off**
- ◀ **pw /V1/MEDIA/VIDEO/I2/HDCP.AllowedHdcpVersion=Off**

##### CALL Command

A method can be invoked by the **CALL** command. Use the colon character (:) when addressing the method:

- ▶ **CALL /V1/EDID:switchAll(F49)**
- ◀ **mO /V1/EDID:switchAll**

##### MAN Command

The manual is a human readable text that describes the syntax and provides a hint on how to use the primitives. For every node, property and method in the tree there is a manual, type the MAN command to get the manual:

- ▶ **MAN /V1/MEDIA/VIDEO/O1.Output5VMode**
- ◀ **pm /V1/MEDIA/VIDEO/O1.Output5VMode ["On" | "Auto" | "Off"] Enables/disables power 5V output**

#### 7.4.5. Prefix Summary

**DEFINITION:** The prefix is a 2-character-long code that describes the type of the response.

The following prefixes are defined in the LW3 protocol:

Prefix	Description
n-	a node
nE	an error for a node
nm	a manual for a node
pr	a read-only property
pw	read-write property
pE	an error for the property
pm	a manual for the property
m-	a method
mO	a response after a successful method execution
mF	a response after a failed method execution
mE	an error for a method
mm	a manual for a method

#### 7.4.6. Error Messages

There are several error messages defined in the LW3 protocol, all of them have a unique error number.

- ▶ **CALL /MEDIA/VIDEO/XP:lock(IA)**
- ◀ **mE /MEDIA/VIDEO/XP:lock %E002:Not exist**

#### 7.4.7. Escaping

**DEFINITION:** An escape sequence is a sequence of characters that does not represent itself when used inside a character or string literal, but is translated into another character or a sequence of characters.

Property values and method parameters can contain characters that are used as control characters in the protocol. They must be escaped. The escape character is the backslash ('\') and escaping means injecting a backslash before the character that should be escaped (like in C language).

Control characters are the following: \ { } # % ( ) \r \n \t

### 7.4.8. Signature

**DEFINITION:** The signature is a four-digit-long hexadecimal value that can be optionally placed before every command to keep a command and the corresponding responses together as a group.

Each line is terminated with Carriage Return (Cr, '\r') and Line Feed (Lf, '\n') characters. In several cases the number of the lines in the response cannot be determined in advance, e.g. the client intends to receive for the whole response and also wants to be sure that the received lines belong together and to the same command. In these cases, a special feature, the 'signature' can be used. The response to that particular command will also be preceded by the signature, and the corresponding lines will be between brackets:

```
▶ 1700#GET /V1/EDID.*
◀ {1700
◀ pr /V1/EDID.EdidStatus=F49:E1;F49:E2;F49:E3;F49:E4
◀ m- /V1/EDID:copy
◀ m- /V1/EDID:delete
◀ m- /V1/EDID:reset
◀ m- /V1/EDID:switch
◀ m- /V1/EDID:switchAll
◀ }
```

**INFO:** The lines of the signature are also Cr and Lf terminated.

### 7.4.9. Subscription

**DEFINITION:** Subscription to a node means that the user will get a notification if a property of the node changes.

A user can subscribe to any node. These notifications are asynchronous messages and are useful to keep the client application up to date, without having to periodically poll the node to detect a changed property. When the user does not want to be informed about the changes anymore, he can simply unsubscribe from the node.

**ATTENTION!** The subscriptions are handled separately for connections. Hence, if the connection is terminated, all registered subscriptions are deleted. After reopening a connection all subscribe commands have to be sent in order to get the notifications of the changes on that connection.

#### Subscribe to a Node

```
▶ OPEN /V1/MEDIA/VIDEO
◀ o- /V1/MEDIA/VIDEO
```

#### Get the Active Subscriptions

```
▶ OPEN
◀ o- /V1/MANAGEMENT/LABEL
◀ o- /V1/MEDIA/VIDEO/XP/O1/SWITCHABLE
◀ o- /V1/MEDIA/VIDEO/XP/O2/SWITCHABLE
◀ o- /V1/MEDIA/VIDEO/XP/I5
```

#### Subscribe to Multiple Nodes

```
▶ OPEN /V1/MEDIA/VIDEO/*
◀ o- /V1/MEDIA/VIDEO/*
```

#### Unsubscribe from a Node

```
▶ CLOSE /V1/MEDIA/VIDEO
◀ c- /V1/MEDIA/VIDEO
```

#### Unsubscribe from Multiple Nodes

```
▶ CLOSE /V1/MEDIA/VIDEO/*
◀ c- /V1/MEDIA/VIDEO/*
```

### 7.4.10. Notifications about the Changes of the Properties

When the value of a property is changed, and the user is subscribed to the node that the property belongs to, an asynchronous notification is generated. This notification is called the 'change message'. The format of such a message is very similar to the response for the GET command:

```
◀ CHG /EDID.EdidStatus=F48:E1
```

#### A Short Example of How to Use the Subscription

There are two independent users controlling the device through two independent connections (**Connection #1** and **Connection #2**). The events in the rows occur after each other.

▶ OPEN /V1/MEDIA/AUDIO/O3	
◀ o- /V1/MEDIA/AUDIO/O3	connection #1
▶ GET /V1/MEDIA/AUDIO/O3.VolumePercent	
◀ pm /V1/MEDIA/AUDIO/O3.VolumePercent=100.00	
▶ GET /V1/MEDIA/AUDIO/O3.VolumePercent	
◀ pw /V1/MEDIA/AUDIO/O3.VolumePercent=100.00	connection #2
◀ SET /V1/MEDIA/AUDIO/O3.VolumePercent=50.00	
◀ pw /V1/MEDIA/AUDIO/O3.VolumePercent=50.00	
◀ CHG /V1/MEDIA/AUDIO/O3.VolumePercent=50.00	connection #1

The first user (**Connection #1**) set a subscription to a node. Later the other user (**Connection #2**) made a change, and thanks to the subscription, the first user got a notification about the change.

## 7.5. System Commands

### 7.5.1. Setting the Device Label

**INFO:** The device label can be changed to a custom text in the [Status](#) tab of the LDC software.

**Command and Response** *#devicelabel #label*

- ▶ SET /V1/MANAGEMENT/LABEL.DeviceLabel=<custom\_name>
- ◀ pw /V1/MANAGEMENT/LABEL.DeviceLabel=<custom\_name>

The Device Label can be 49 characters long and ASCII characters are allowed. Longer names are truncated.

#### Example

- ▶ SET /V1/MANAGEMENT/LABEL.DeviceLabel=MMX2\_Conference\_room1
- ◀ pw /V1/MANAGEMENT/LABEL.DeviceLabel=MMX2\_Conference\_room1

### 7.5.2. Resetting the Device

The switcher can be restarted – the current connections will be terminated.

**Command and Response** *#reboot #restart*

- ▶ CALL /V1/SYS:restart()
- ◀ mO /V1/SYS:restart=

#### Example

- ▶ CALL /V1/SYS:restart()
- ◀ mO /V1/SYS:restart=

### 7.5.3. Restoring the Factory Default Settings

**Command and Response**

- ▶ CALL /V1/SYS:factoryDefaults()
- ◀ mO /V1/SYS:factoryDefaults=

#### Example

- ▶ CALL /V1/SYS:factoryDefaults()
- ◀ mO /V1/SYS:factoryDefaults=

The device is restarted, current connections are terminated, and the default settings are restored. See the complete list in the [Factory Default Settings](#) section.

*#factory*

### 7.5.4. Querying the Firmware Package Version

**Command and Response** *#firmwareversion*

- ▶ GET /V1/MANAGEMENT/UID/PACKAGE.Version
- ◀ pr /V1/MANAGEMENT/UID/PACKAGE.Version=<firmware\_version>

#### Example

- ▶ GET V1/MANAGEMENT/UID/PACKAGE.Version
- ◀ pr /V1/MANAGEMENT/UID/PACKAGE.Version=1.3.3b3

### 7.5.5. Control Lock

Enable/disable the operation of the front panel buttons.

**Command and Response** *#lockbutton #buttonlock*

- ▶ SET /V1/MANAGEMENT/UI.ControlLock=<lock\_status>
- ◀ pw /V1/MANAGEMENT/UI.ControlLock=<lock\_status>

#### Parameters

Parameter	Parameter description	Values	Value description
<lock_status>	Front panel button locking status	None	All functions of the front panel button are enabled.
		Locked	The front panel buttons are locked and can be unlocked by button combination ( <a href="#">Control Lock</a> ).
		Force locked	The front panel buttons are locked and cannot be unlocked by button combination, only in LDC (on the <a href="#">Status</a> tab) or using the LW3 command.

#### Example

- ▶ SET /V1/MANAGEMENT/UI.ControlLock=Force locked
- ◀ pw /V1/MANAGEMENT/UI.ControlLock=Force locked

### 7.5.6. Setting the Current Time

**Command and Response** *#time*

- ▶ CALL /V1/MANAGEMENT/DATETIME:setTime(<current\_time>)
- ◀ mO /V1/MANAGEMENT/DATETIME:setTime=

#### Parameters

<current\_time>: The new router time in ISO 8601 date time format.

#### Example

- ▶ CALL /V1/MANAGEMENT/DATETIME:setTime(2020-11-01T04:39:54.000Z)
- ◀ mO /V1/MANAGEMENT/DATETIME:setTime=



### 7.5.7. Identifying the Device

Calling the method makes the status LEDs blink for 10 seconds. The feature helps find the device physically.

#### Command and Response *#identifyme*

- ▶ CALL /V1/MANAGEMENT/UI:identifyMe()
- ◀ m0 /V1/MANAGEMENT/UI:identifyMe=

#### Example

- ▶ CALL /V1/MANAGEMENT/UI:identifyMe()
- ◀ m0 /V1/MANAGEMENT/UI:identifyMe=

### 7.5.8. Toggling the Dark Mode Setting

The LEDs of the device can be switched off if their light could be annoying. In Dark mode, all LEDs are switched off, except for the LEDs of the RJ45 connectors. *#darkmode*

#### Command and Response

- ▶ SET /V1/MANAGEMENT/UI/DARKMODE.Enable=<mode\_state>
- ◀ pw /V1/MANAGEMENT/UI/DARKMODE.Enable=<mode\_state>

#### Parameters

If the <mode\_state> parameter is **true** (or **1**), the Dark mode function is **enabled**, if the parameter is **false** (or **0**), the function is **disabled**.

#### Example

- ▶ SET /V1/MANAGEMENT/UI/DARKMODE.Enable=true
- ◀ pw /V1/MANAGEMENT/UI/DARKMODE.Enable=true

### 7.5.9. Setting the Delay of the Dark Mode Setting

The Dark mode can be enabled right away, or after a certain time. Thus, the mode is enabled if no buttons are pressed for a while. Pressing any button brings back the status info on the LEDs without performing the function of the button itself. The delay time can be set by this command.

#### Command and Response

- ▶ SET /V1/MANAGEMENT/UI/DARKMODE.Delay=<delay\_time>
- ◀ pw /V1/MANAGEMENT/UI/DARKMODE.Delay=<delay\_time>

#### Parameters

The <delay\_time> parameter means seconds, and the default value is 60. If set to 0, no delay is applied, and the Dark mode can be enabled immediately by the **DarkModeEnable** property. This delay affects the **wakeFromDarkMode** method as well.

#### Example

- ▶ SET /V1/MANAGEMENT/UI/DARKMODE.Delay=10
- ◀ pw /V1/MANAGEMENT/UI/DARKMODE.Delay=10

## 7.6. Video Port Settings - General

### 7.6.1. Switching Video Input

#### Command and Response

- ▶ CALL /V1/MEDIA/VIDEO/XP:switch(<in>:<out>)
- ◀ m0 /V1/MEDIA/VIDEO/XP:switch=

#### Examples

- ▶ CALL /V1/MEDIA/VIDEO/XP:switch(I5:O1)
- ◀ m0 /V1/MEDIA/VIDEO/XP:switch=
- ▶ CALL /V1/MEDIA/VIDEO/XP:switch(0:O1)
- ◀ m0 /V1/MEDIA/VIDEO/XP:switch=

INFO: When using the '0' value as an input, the input will be disconnected and no signal will appear on the output.

### 7.6.2. Switching an Input to All Outputs

#### Command and Response

- ▶ CALL /V1/MEDIA/VIDEO/XP:switchAll(<input>)
- ◀ m0 /V1/MEDIA/VIDEO/XP:switchAll=

#### Example

- ▶ CALL /V1/MEDIA/VIDEO/XP:switchAll(I1)
- ◀ m0 /V1/MEDIA/VIDEO/XP:switchAll=

### 7.6.3. Locking the Video Port

#### Command and Response

- ▶ SET /V1/MEDIA/VIDEO/XP/<port>.Lock=<locked\_state>
- ◀ pw /V1/MEDIA/VIDEO/XP/<port>.Lock=<locked\_state>

#### Parameters

Parameter	Parameter description	Values	Value description
<locked_state>	Locked state	<b>true</b>	The port is locked
		<b>false</b>	The port is unlocked

#### Example

- ▶ SET /V1/MEDIA/VIDEO/XP/I2.Lock=false
- ◀ pw /V1/MEDIA/VIDEO/XP/I2.Lock=false

### 7.6.4. Muting the Video Port

#### Command and Response

- ▶ SET /V1/MEDIA/VIDEO/XP/<port>.Mute=<muted\_state>
- ◀ pw /V1/MEDIA/VIDEO/XP/<port>.Mute=<muted\_state>

#### Parameters

Parameter	Parameter description	Values	Value description
<muted_state>	Muted state	<b>true</b>	The port is locked.
		<b>false</b>	The port is unlocked.

#### Example

- ▶ SET /V1/MEDIA/VIDEO/XP/I2.Mute=false
- ◀ pw /V1/MEDIA/VIDEO/XP/I2.Mute=false

### 7.6.5. Setting the Autoselect Policy

#### Command and Response

- ▶ SET /V1/MEDIA/VIDEO/AUTOSELECT/<out>.Policy=<autoselect\_mode>
- ◀ pw /V1/MEDIA/VIDEO/AUTOSELECT/<out>.Policy=<autoselect\_mode>

#### Parameters

Parameter	Parameter description	Values	Value description
<autoselect_mode>	The autoselect policy	<b>Off</b>	The autoselect function is disabled.
		<b>Last Detect</b>	It is always the last attached input that is automatically switched to the output.
		<b>First Detect</b>	The first active video input is selected.

#### Example

- ▶ SET /V1/MEDIA/VIDEO/AUTOSELECT/O2.Policy=First detect
- ◀ pw /V1/MEDIA/VIDEO/AUTOSELECT/O2.Policy=First detect

### 7.6.6. Changing the Autoselect Included Input Ports

#### Command and Response

- ▶ SET /V1/MEDIA/VIDEO/AUTOSELECT/<out>/<in>.Included=<state>
- ◀ pw /V1/MEDIA/VIDEO/AUTOSELECT/<out>/<in>.Included=<state>

#### Parameters

Parameter	Parameter description	Values	Value description
<state>	The chosen input is ignored in the autoselect process or not.	<b>true</b>	The port is included in autoselect.
		<b>false</b>	The autoselect function ignores that port.

#### Example

- ▶ SET /V1/MEDIA/VIDEO/AUTOSELECT/O2/I1.Included=false
- ◀ pw /V1/MEDIA/VIDEO/AUTOSELECT/O2/I1.Included=false

### 7.6.7. Changing the Input Port Priority

#### Command and Response

- ▶ SET /V1/MEDIA/VIDEO/AUTOSELECT/<out>/<in>.Priority=<prio\_num>
- ◀ pw /V1/MEDIA/VIDEO/AUTOSELECT/<out>/<in>.Priority=<prio\_num>

#### Parameters

The <prio> parameter means the priority number from 1 to 100, equal numbers are allowed. Inputs can have different priorities in relation to two or more outputs. Therefore, the output port number is part of the node path of input port priorities.

#### Example

- ▶ SET /V1/MEDIA/VIDEO/AUTOSELECT/O2/I2.Priority=51
- ◀ pw /V1/MEDIA/VIDEO/AUTOSELECT/O2/I2.Priority=51

### 7.6.8. Querying the Connected Source

#### Command and Response

- ▶ GET /V1/MEDIA/VIDEO/XP/<out>.ConnectedSource
- ◀ pw /V1/MEDIA/VIDEO/XP/<out>.ConnectedSource=<in>

#### Example

- ▶ GET /V1/MEDIA/VIDEO/XP/O3.ConnectedSource
- ◀ pw /V1/MEDIA/VIDEO/XP/O3.ConnectedSource=I2

### 7.6.9. Querying the Input Switching Capability

Video crosspoint has a limitation: I1 or I5 ports can not be selected to any output at the same time. **Busy** value of the switchable property refers to the limitation.

#### Command and Response

- ▶ GET /V1/MEDIA/VIDEO/XP/<out>/SWITCHABLE.<in>
- ◀ pr /V1/MEDIA/VIDEO/XP/<out>/SWITCHABLE.<in>=<switchable\_state>

#### Parameters

Parameter	Parameter description	Values	Value description
<switchable_state>	The chosen input can be switched to the output or not.	OK	The connection of the chosen input and output is allowed.
		Busy	The chosen input can not be switched to the output.

#### Example

- ▶ GET /V1/MEDIA/VIDEO/XP/O2/SWITCHABLE.I1
- ◀ pr /V1/MEDIA/VIDEO/XP/O2/SWITCHABLE.I1=Busy

### 7.6.10. Querying the Connected Destinations

#### Command and Response

- ▶ GET /V1/MEDIA/VIDEO/XP/<n>.ConnectedDestinations
- ◀ pr /V1/MEDIA/AUDIO/XP/<in>.ConnectedDestinations=<out>

#### Example

- ▶ GET /V1/MEDIA/VIDEO/XP/I3.ConnectedDestinations
- ◀ pr /V1/MEDIA/VIDEO/XP/I3.ConnectedDestinations=O1;O2

### 7.6.11. Querying the Video Signal Presence

#### Command and Response

- ▶ GET /V1/MEDIA/VIDEO/<port>.SignalPresent
- ◀ pr /V1/MEDIA/VIDEO/<port>.SignalPresent=<state>

#### Parameters

Parameter	Parameter description	Values	Value description
<state>	This property gives a feedback about the current signal presence of the port.	true	The video signal is present.
		false	The video signal is not present.

#### Example

- ▶ GET /V1/MEDIA/VIDEO/I1.SignalPresent
- ◀ pr /V1/MEDIA/VIDEO/I1.SignalPresent=false

### 7.6.12. HDCP Setting (Input Port)

HDCP capability can be set on the input ports, thus non-encrypted content can be seen on a non-HDCP compliant display. See more information in the [HDCP Management](#) section.

**ATTENTION!** HDCP 2.2 signal handling is limited to up to two input ports at the same time.

#### Command and Response #hdcp

- ▶ SET /V1/MEDIA/VIDEO/<in>/HDCP.AllowedHdcpVersion=<allowed\_hdcp>
- ◀ pw /V1/MEDIA/VIDEO/<in>/HDCP.AllowedHdcpVersion=<allowed\_hdcp>

#### Parameters

Parameter	Parameter description	Values	Value description
<allowed_hdcp>	The input port reports the HDCP capability.	HDCP 1.4	The input port reports HDCP 1.4 capability.
		HDCP 2.2	The input port reports HDCP 2.2 capability.
		Off	The input port reports non-HDCP compliance.

#### Example

- ▶ SET /V1/MEDIA/VIDEO/I1/HDCP.AllowedHdcpVersion=HDCP 1.4
- ◀ pw /V1/MEDIA/VIDEO/I1/HDCP.AllowedHdcpVersion=HDCP 1.4

### 7.6.13. HdcpMode

HDCP capability can be set to Auto/Always on the output ports, thus non-encrypted content can be transmitted to a non-HDCP compliant display. See more information in the [HDCP Management](#) section.

#### Command and Response #hdcp

- ▶ SET /V1/MEDIA/VIDEO/<out>.HdcpMode=<hdcp\_mode>
- ◀ pw /V1/MEDIA/VIDEO/<out>.HdcpMode=<hdcp\_mode>

#### Parameters

Parameter	Parameter description	Values	Value description
<hdcp_mode>	HDCP encryption setting on the output port	Auto	The encryption is enabled on the output port if the signal on the input port is encrypted.
		Always	The outgoing signal is HDCP-encrypted.

#### Example

- ▶ SET /V1/MEDIA/VIDEO/O1/HDCP.HdcpMode=Auto
- ◀ pw /V1/MEDIA/VIDEO/O1/HDCP.HdcpMode=Auto

### 7.6.14. OutputSignalType

#### Command and Response *#signaltype*

- ▶ SET /V1/MEDIA/VIDEO/<out>.OutputSignalType=<signal\_type>
- ◀ pw /V1/MEDIA/VIDEO/<out>.OutputSignalType=<signal\_type>

#### Parameters

Parameter	Parameter description	Values	Value description
<signal_type>	Signal type setting	<b>Auto</b>	The outgoing signal type is HDMI.
		<b>DVI</b>	The outgoing signal type is DVI.

#### Example

- ▶ SET /V1/MEDIA/VIDEO/O1.OutputSignalType=Auto
- ◀ pw /V1/MEDIA/VIDEO/O1.OutputSignalType=Auto

### 7.6.15. EmbeddedAudioPresent

- ▶ GET /V1/MEDIA/VIDEO/<port>.EmbeddedAudioPresent
- ◀ pr /V1/MEDIA/VIDEO/<port>.EmbeddedAudioPresent=<embedded\_state>

#### Parameters

Parameter	Parameter description	Values	Value description
<embedded_state>	It shows if the video contains audio or not.	<b>true</b>	There is embedded audio in the video signal.
		<b>false</b>	There is no embedded audio in the video signal.

#### Example

- ▶ GET /V1/MEDIA/VIDEO/I2.EmbeddedAudioPresent
- ◀ pr /V1/MEDIA/VIDEO/I2.EmbeddedAudioPresent=false

### 7.6.16. EmbeddedAudioMute

- ▶ SET /V1/MEDIA/VIDEO/<port>.EmbeddedAudioMute=<mute\_state>
- ◀ pw /V1/MEDIA/VIDEO/<port>.EmbeddedAudioMute=<mute\_state>

#### Parameters

Parameter	Parameter description	Values	Value description
<mute_state>	It shows if the embedded audio is muted or not.	<b>true</b>	The embedded audio is muted.
		<b>false</b>	The embedded audio is unmuted.

#### Example

- ▶ SET /V1/MEDIA/VIDEO/O1.EmbeddedAudioMute=false
- ◀ pw /V1/MEDIA/VIDEO/O1.EmbeddedAudioMute=false

### 7.6.17. Output5VMode

The 5V power towards the sink can be enabled or disabled as follows:

#### Command and Response

- ▶ SET /V1/MEDIA/VIDEO/<out>.Output5VMode=<5V\_pwr>
- ◀ pw /V1/MEDIA/VIDEO/<out>.Output5VMode=<5V\_pwr>

#### Parameters

Parameter	Parameter description	Value	Value description
<5V_pwr>	5V power towards the sink	<b>On</b>	Enable 5V power on HDMI port
		<b>Off</b>	Disable 5V power on HDMI port

#### Example

- ▶ SET /V1/MEDIA/VIDEO/O1.Output5VMode=On
- ◀ pw /V1/MEDIA/VIDEO/O1.Output5VMode=On

### 7.6.18. HDCP Capability (Output Port)

HDCP capability of the connected sink device can be queried at each output port. See more information in the [HDCP Management](#) section.

#### Command and Response *#hdcpc*

- ▶ GET /V1/MEDIA/VIDEO/<out>/HDCP/SinkMaxHdcpVersion=<hdcpc\_ver>
- ◀ pr /V1/MEDIA/VIDEO/<out>/HDCP/SinkMaxHdcpVersion=<hdcpc\_ver>

#### Parameters

Parameter	Parameter description	Values	Value description
<hdcpc_ver>	The HDCP capability is reported from the sink.	<b>N/A</b>	Sink is not connected or the HDCP-capability cannot be determined.
		<b>None</b>	The connected sink is non-HDCP compliant.
		<b>HDCP 1.4</b>	The connected sink supports HDCP 1.4 capability.
		<b>HDCP 2.2</b>	The connected sink supports HDCP 2.2 capability.

#### Example

- ▶ GET /V1/MEDIA/VIDEO/O1/HDCP/SinkMaxHdcpVersion=HDCP 1.4
- ◀ pr /V1/MEDIA/VIDEO/O1/HDCP/SinkMaxHdcpVersion=HDCP 1.4

### 7.6.19. HDCP Setting (Output Port)

The maximum allowed HDCP encryption can be queried at each output port. See more information in the [HDCP Management](#) section.

**ATTENTION!** HDCP 2.2 signal handling is limited when 3 outputs are available: O1 and O2 ports support up to HDCP v2.2, O3 port supports HDCP v1.4.

#### Command and Response *#hdc*

- ▶ GET /V1/MEDIA/VIDEO/<out>/HDCP.AllowedHdcpVersion=<allowed\_hdcp>
- ◀ pr /V1/MEDIA/VIDEO/<out>/HDCP.AllowedHdcpVersion=<allowed\_hdcp>

#### Parameters

Parameter	Parameter description	Values	Value description
<allowed_hdcp>	The maximum allowed HDCP encryption on the output port	<b>HDCP 1.4</b> <b>HDCP 2.2</b>	HDCP 1.4 is supported. HDCP 2.2 and HDC 1.4 are supported.

#### Example

- ▶ GET /V1/MEDIA/VIDEO/O1/HDCP/AllowedHdcpVersion=HDCP 1.4
- ◀ pr /V1/MEDIA/VIDEO/O1/HDCP/AllowedHdcpVersion=HDCP 1.4

## 7.7. CEC Command Sending

The device is able to send Consumer Electronics Control (CEC) commands. This feature is for remote controlling the source or sink device. CEC is a bi-directional communication via the HDMI cable.

**ATTENTION!** To have a successful CEC command processing, the connected HDMI device must support CEC. #cec

### 7.7.1. Simple CEC Code Sending

This command is for sending simple CEC commands to the connected sink device.

The commands can be sent by the following two formats – defined in the header:

- **text/plain:** hexa strings (as seen in the example)
- **application/octet-stream:** binary data that allows sending a file with the desired codes

#### Command and Response

- ▶ CALL /V1/MEDIA/VIDEO/<out>/CEC:send(<command>)
- ◀ mO /V1/MEDIA/VIDEO/<out>/CEC:send=OK

#### Parameters

Parameter	Parameter description	Values	Value description
<port>	Video output port	01-02-03	Video output port number
<command> *	Two-digit-long hexa code to control the sink device	446D	Power on
		446C	Power off
		36	Standby
		446901	Select input 1
		446902	Select input 2
		446903	Select input 3

\* The supported list of <commands> depends on the connected sink device.

INFO: For the full list of commands supported by the UCX-TPX transmitter, please see the next page.

#### Example

- ▶ CALL /V1/MEDIA/VIDEO/02/CEC:send(446D)
- ◀ mO /V1/MEDIA/VIDEO/02/CEC:send=OK

### 7.7.2. Remote Control Code Sending

This command is for sending the so-called 'push-button-commands'. There is a range within the CEC commands for this purpose, e.g. volume up/down. With this method one <command> is put between the 0x44 and 0x45 opcodes in the background.

#### Request and Response

- ▶ CALL /V1/MEDIA/VIDEO/<port>/CEC:sendUserControlClick(<command>)
- ◀ mO /V1/MEDIA/VIDEO/<port>/CEC:sendUserControlClick=OK

#### Parameters

Parameter	Parameter description	Values	Value description
<port>	Video output port	01-02-03	Video output port number
<command> *	A hexa code to control the sink device	446D	Power on
		446C	Power off

\* The supported list of <commands> depends on the connected sink device.

INFO: For the full list of commands supported by the UCX-TPX transmitter, please see the next page.

#### Example

- ▶ CALL /V1/MEDIA/VIDEO/02/CEC:sendUserControlClick(446D)
- ◀ mO /V1/MEDIA/VIDEO/02/CEC:sendUserControlClick=OK

## Command List

Command	Hexa	Binary
Ok	4400	0100010000000000
Up	4401	0100010000000001
Down	4402	0100010000000010
Left	4403	0100010000000011
Right	4404	0100010000000100
Root menu	4409	0100010000001001
Setup menu	440A	0100010000001010
Contents menu	440B	0100010000001011
Favorite menu	440C	0100010000001100
Back	440D	0100010000001101
Media top menu	4410	0100010000010000
Media context menu	4411	0100010000010001
Number 0	4420	0100010000100000
Number 1	4421	0100010000100001
Number 2	4422	0100010000100010
Number 3	4423	0100010000100011
Number 4	4424	0100010000100100
Number 5	4425	0100010000100101
Number 6	4426	0100010000100110
Number 7	4427	0100010000100111
Number 8	4428	0100010000101000
Number 9	4429	0100010000101001
Dot	442A	0100010000101010
Enter	442B	0100010000101011
Clear	442C	0100010000101100
Channel up	4430	0100010000000000
Channel down	4431	0100010000110001
Sound select	4433	0100010000110011
Input select	4434	0100010000110100
Display info	4435	0100010000110101
Page up	4437	0100010000110111
Page down	4438	0100010000111000
Power legacy	4440	0100010001000000
Volume up	4441	0100010001000001
Volume down	4442	0100010001000010
Mute toggle	4443	0100010001000011
Play	4444	0100010001000100
Stop	4445	0100010001000101
Pause	4446	0100010001000110

Command	Hexa	Binary
Record	4447	0100010001000111
Rewind	4448	0100010001001000
Fast forward	4449	0100010001001001
Eject	444A	0100010001001010
Skip forward	444B	0100010001001011
Skip backward	444C	0100010001001100
3D mode	445A	0100010001011010
Stop record	444D	0100010001001101
Play forward	446024	010001000110000000100100
Play reverse	446020	010001000110000000100000
Stop function	4464	0100010001100100
Mute	4465	0100010001100101
Unmute	4466	0100010001100110
Select next media	446800	010001000110100000000000
Select media 1	446801	010001000110100000000001
Select media 2	446802	010001000110100000000010
Select media 3	446803	010001000110100000000011
Select media 4	446804	010001000110100000000100
Select media 5	446805	010001000110100000000101
Select next input	446900	010001000110100100000000
Select input 1	446901	010001000110100100000001
Select input 2	446902	010001000110100100000010
Select input 3	446903	010001000110100100000011
Select input 4	446904	010001000110100100000100
Select input 5	446905	010001000110100100000101
Power toggle	446B	0100010001101011
Power on	446D	0100010001101101
Power off	446C	0100010001101100
Standby	36	00110110
Image view on	04	00000100
Text view on	0D	00001101
F1	4471	0100010001110001
F2	4472	0100010001110010
F3	4473	0100010001110011
F4	4474	0100010001110100
Clear OSD	6480	0110010010000000
Get CEC version	9F	10011111

## 7.8. Audio Port Settings

### 7.8.1. Switching Audio Input

#### Command and Response

- ▶ `CALL /V1/MEDIA/AUDIO/XP:switch(<audio_in>:03)`
- ◀ `mO /V1/MEDIA/AUDIO/XP:switch=`

#### Parameters

Parameter	Parameter description	Values	Value description
<audio_in>	Audio input port	I1-I4	Audio input port number

#### Example

- ▶ `CALL /V1/MEDIA/AUDIO/XP:switch(I2:03)`
- ◀ `mO /V1/MEDIA/AUDIO/XP:switch=`

INFO: When using the '0' value as an input, the input will be disconnected and no signal will appear on the output.

### 7.8.2. Querying the Connected Source

#### Command and Response

- ▶ `GET /V1/MEDIA/AUDIO/XP/O3.ConnectedSource`
- ◀ `pw /V1/MEDIA/AUDIO/XP/O3.ConnectedSource=<audio_in>`

#### Parameters

Parameter	Parameter description	Values	Value description
<audio_in>	Audio input port	I1-I4	Audio input port number

#### Example

- ▶ `GET /V1/MEDIA/AUDIO/XP/O3.ConnectedSource`
- ◀ `pw /V1/MEDIA/AUDIO/XP/O3.ConnectedSource=I2`

### 7.8.3. Querying the Connected Destinations

#### Command and Response

- ▶ `GET /V1/MEDIA/AUDIO/XP/<audio_in>.ConnectedDestinations`
- ◀ `pr /V1/MEDIA/AUDIO/XP/<audio_in>.ConnectedDestinations=`

#### Parameters

Parameter	Parameter description	Values	Value description
<audio_in>	Audio input port	I1-I4	Audio input port number

#### Example

- ▶ `GET /V1/MEDIA/AUDIO/XP/I3.ConnectedDestinations`
- ◀ `pr /V1/MEDIA/AUDIO/XP/I3.ConnectedDestinations=`

### 7.8.4. Setting Autoselect Operation Mode

#### Command and Response

- ▶ `SET /V1/MEDIA/AUDIO/AUTOSELECT/O4.Policy=<op_mode>`
- ◀ `pw /V1/MEDIA/AUDIO/AUTOSELECT/O4.Policy=<op_mode>`

#### Parameters

Parameter	Parameter description	Values	Value description
<op_mode>	Operation mode	Follow video	Follows the video crosspoint state automatically.
		Off	Autoselect function is disabled.

#### Example

- ▶ `SET /V1/MEDIA/AUDIO/AUTOSELECT/O4.Policy=Follow video`
- ◀ `pw /V1/MEDIA/AUDIO/AUTOSELECT/O4.Policy=Follow video`

### 7.8.5. Setting the Followed Video Port to Autoselect

#### Command and Response

- ▶ `SET /V1/MEDIA/AUDIO/AUTOSELECT/O4.VideoFollowPort=<out>`
- ◀ `pw /V1/MEDIA/AUDIO/AUTOSELECT/O4.VideoFollowPort=<out>`

#### Example

- ▶ `SET /V1/MEDIA/AUDIO/AUTOSELECT/O4.VideoFollowPort=O1`
- ◀ `pw /V1/MEDIA/AUDIO/AUTOSELECT/O4.VideoFollowPort=O1`



### 7.8.6. Locking the Audio Port

#### Command and Response

- ▶ SET /V1/MEDIA/AUDIO/XP/<audio\_port>.Lock=<locked\_state>
- ◀ pw /V1/MEDIA/AUDIO/XP/<audio\_port>.Lock=<locked\_state>

#### Parameters

Parameter	Parameter description	Values	Value description
<audio_port>	Audio Port	I1-I4 O4	Audio input port number Audio output port number
<locked_state>	Locked state	true false	The port is locked The port is unlocked

#### Example

- ▶ SET /V1/MEDIA/AUDIO/XP/I2.Lock=false
- ◀ pw /V1/MEDIA/AUDIO/XP/I2.Lock=false

### 7.8.7. Muting the Audio Port 1.

INFO: Suspends the connection of the chosen port (no signal is forwarded).

#### Command and Response

- ▶ SET /V1/MEDIA/AUDIO/XP/<audio\_port>.Mute=<muted\_state>
- ◀ pw /V1/MEDIA/AUDIO/XP/<audio\_port>.Mute=<muted\_state>

#### Parameters

Parameter	Parameter description	Values	Value description
<audio_port>	Audio Port	I1-I4 O4	Audio input port number Audio output port number
<muted_state>	Muted state	true false	The port is muted. The port is unmuted.

#### Example

- ▶ SET /V1/MEDIA/AUDIO/XP/I2.Mute=false
- ◀ pw /V1/MEDIA/AUDIO/XP/I2.Mute=false

INFO: All inputs and analog output ports have a mute property in the audio XP (e.g. /V1/MEDIA/AUDIO/XP/I1.Mute). Outputs have a separate mute function within the port node as well:

- /V1/MEDIA/VIDEO/XP/O1.EmbeddedAudioMute
- /V1/MEDIA/VIDEO/XP/O2.EmbeddedAudioMute
- /V1/MEDIA/AUDIO/O4.Mute

### 7.8.8. Muting the Audio Port 2.

INFO: The volume of the analog audio output is set to low.

#### Command and Response

- ▶ SET /V1/MEDIA/AUDIO/O4.Mute=<muted\_state>
- ◀ pw /V1/MEDIA/AUDIO/O4.Mute=<muted\_state>

#### Parameters

Parameter	Parameter description	Values	Value description
<audio_port>	Audio Port	I1-I4 O4	Audio input port number Audio output port number
<muted_state>	Muted state	true false	The port is muted. The port is unmuted.

#### Example

- ▶ SET /V1/MEDIA/AUDIO/O4.Mute=true
- ◀ pw /V1/MEDIA/AUDIO/O4.Mute=true

### 7.8.9. Querying the Audio Signal Presence

#### Command and Response

- ▶ GET /V1/MEDIA/AUDIO/<audio\_port>.SignalPresent
- ◀ pr /V1/MEDIA/AUDIO/<audio\_port>.SignalPresent=<signal\_state>

#### Parameters

Parameter	Parameter description	Values	Value description
<audio_port>	USB Port	I1-I4 O4	Audio input port number Audio output port number
<signal_state>	Signal presence	true false	The audio signal is present. No audio signal is present.

#### Example

- ▶ GET /V1/MEDIA/AUDIO/I1.SignalPresent
- ◀ pr /V1/MEDIA/AUDIO/I1.SignalPresent=false

### 7.8.10. Analog Audio Output Volume (dB) Setting

**Command and Response** *#analogaudio #volume*

- ▶ SET·/V1/MEDIA/AUDIO/O4.VolumedB=<level>
- ◀ pw·/V1/MEDIA/AUDIO/O4.VolumedB=<level>

#### Parameter

The <level> parameter sets the output volume (attenuation) between -95.62 dB and 0 dB in step of -0.375 dB. The value is rounded up if necessary, to match with the step value.

#### Example

- ▶ SET /V1/MEDIA/AUDIO/O4.VolumedB=-15
- ◀ pw /V1/MEDIA/AUDIO/O4.VolumedB=-15.00

### 7.8.11. Analog Audio Output Volume Percent Setting

**Command and Response**

- ▶ SET·/V1/MEDIA/AUDIO/O4.VolumePercent=<percent>
- ◀ pw·/V1/MEDIA/AUDIO/O4.VolumePercent=<percent>

#### Parameters

The <percent> parameter sets the output volume (attenuation) between 100% and 0%, in step of 1%. The value is rounded up if necessary, to match with the step value.

#### Example

- ▶ SET /V1/MEDIA/AUDIO/O4.VolumePercent=50
- ◀ pw /V1/MEDIA/AUDIO/O4.VolumePercent=50.00

### 7.8.12. Setting the Balance

**Command and Response** *#balance*

- ▶ SET·/V1/MEDIA/AUDIO/O4.Balance=<level>
- ◀ pw·/V1/MEDIA/AUDIO/O4.Balance=<level>

#### Parameters

The <level> parameter sets the balance; -100 means left balance, 100 means right balance, step is 1. Center is 0 (default).

#### Example

- ▶ SET /V1/MEDIA/AUDIO/O4.Balance=0
- ◀ pw /V1/MEDIA/AUDIO/O4.Balance=0

### 7.8.13. Analog Audio Output Level Setting by Steps (dB)

**Command and Response** *#analogaudio #volume*

- ▶ CALL·/V1/MEDIA/AUDIO/O4:stepVolumedB(<step>)
- ◀ m0·/V1/MEDIA/AUDIO/O4:stepVolumedB=

#### Parameters

The volume is increased or decreased with the given <step> value in dB.

#### Example

- ▶ CALL /V1/MEDIA/AUDIO/O4:stepVolumedB(-1)
- ◀ m0 /V1/MEDIA/AUDIO/O4:stepVolumedB=

The volume is decreased with 1 dB, the current volume is -1.95 dB, which means 77.84% in percent.

### 7.8.14. Analog Audio Output Level Setting by Steps in Percent

**Command and Response**

- ▶ CALL·/V1/MEDIA/AUDIO/O4:stepVolumePercent(<step>)
- ◀ m0·/V1/MEDIA/AUDIO/O4:stepVolumePercent=

#### Parameters

The volume is increased or decreased by the given <step> value in percent.

#### Example

- ▶ CALL /V1/MEDIA/AUDIO/O4:stepVolumePercent(5)
- ◀ m0 /V1/MEDIA/AUDIO/O4:stepVolumePercent=

The volume is increased with 5%, the current volume is -1.52 dB, which means 82.84% in percent.

### 7.8.15. Analog Audio Output Balance Setting by Steps

**Command and Response**

- ▶ CALL·/V1/MEDIA/AUDIO/O4:stepBalance(<step>)
- ◀ m0·/V1/MEDIA/AUDIO/O4:stepBalance=

#### Parameters

The volume is increased or decreased by the given <step> value.

#### Example

- ▶ CALL /V1/MEDIA/AUDIO/O4:stepBalance(-5)
- ◀ m0 /V1/MEDIA/AUDIO/O4:stepBalance=

## 7.9. EDID Management

### 7.9.1. Querying the Emulated EDIDs

#### Command and Response #edid

- ▶ GET·/V1/EDID.EdidStatus
- ◀ pr·/V1/EDID.EdidStatus=<source>:E1;<source>:E2; <source>:E3;<source>:E4

#### Parameters

Parameter	Parameter description	Values	Value description
<source>	Source EDID memory place	F1-F120	Factory EDIDs
		U1-U14	User EDIDs
		D1-D2	Dynamic EDIDs

#### Example

- ▶ GET /V1/EDID.EdidStatus
- ◀ pr /V1/EDID.EdidStatus=F89:E1;D1:E2;D1:E3;D1:E4

Emulated EDID memory for input port is listed with the EDID number that is currently emulated on the input.

### 7.9.2. Querying the Validity of a Dynamic EDID

#### Command and Response

- ▶ GET·/V1/EDID/D/D1.Validity
- ◀ pr·/V1/EDID/D/D1.Validity=<validity>

#### Parameters

If the <validity> parameter is **true**, the EDID is valid. If the parameter is **false**, the EDID is invalid.

#### Example

- ▶ GET /V1/EDID/D/D1.Validity
- ◀ pr /V1/EDID/D/D1.Validity=true

The 'Validity' property is true, a valid EDID is stored in the D1 memory place.

### 7.9.3. Querying the Preferred Resolution of a User EDID

#### Command and Response

- ▶ GET·/V1/EDID/U/<user\_edid>.PreferredResolution
- ◀ pr·/V1/EDID/U/<user\_edid>.PreferredResolution=<preferred\_resolution>

#### Example

- ▶ GET /V1/EDID/U/U2.PreferredResolution
- ◀ pr /V1/EDID/U/U2.PreferredResolution=1920x1080p60.00Hz

■ INFO: Use the **Manufacturer** and **MonitorName** properties to query further information.

### 7.9.4. Emulating an EDID to an Input Port

#### Command and Response

- ▶ CALL·/V1/EDID:switch(<source>:<destination>)
- ◀ m0·/V1/EDID:switch

#### Parameters

Parameter	Parameter description	Values	Value description
<source>	Source EDID memory place	F1-F120	Factory EDIDs
		U1-U14	User EDIDs
		D1-D2	Dynamic EDIDs
<destination>	The emulated EDID memory of the desired input port	U1-U14	User EDIDs

#### Example

- ▶ CALL /V1/EDID:switch(F49:E2)
- ◀ m0 /V1/EDID:switch

### 7.9.5. Emulating an EDID to All Input Ports

#### Command and Response

- ▶ CALL·/V1/EDID:switchAll(<source>)
- ◀ m0·/V1/EDID:switchAll

#### Parameters

Parameter	Parameter description	Values	Value description
<source>	Source EDID memory place	F1-F148	Factory EDIDs
		U1-U100	User EDIDs
		D1-D2	Dynamic EDIDs

#### Example

- ▶ CALL /V1/EDID:switchAll(F47)
- ◀ m0 /V1/EDID:switchAll

### 7.9.6. Copying an EDID to User Memory

#### Command and Response

- ▶ CALL /V1/EDID:copy(<source>:<destination>)
- ◀ m0 /V1/EDID:copy

#### Parameters

Parameter	Parameter description	Values	Value description
<source>	Source EDID memory place	F1-F148	Factory EDIDs
		U1-U100	User EDIDs
		D1-D2	Dynamic EDIDs
<destination>	The emulated EDID memory of the desired input port	U1-U100	User EDIDs

#### Example

- ▶ CALL /V1/EDID:copy(F1:U2)
- ◀ m0 /V1/EDID:copy

### 7.9.7. Deleting an EDID from User Memory

#### Command and Response

- ▶ CALL /V1/EDID:delete(<user\_edid>)
- ◀ m0 /V1/EDID:delete

#### Parameters

Parameter	Parameter description	Values	Value description
<user_edid>	The emulated EDID memory of the desired input port.	U1-U14	User EDIDs

#### Example

- ▶ CALL /V1/EDID:delete(U2)
- ◀ m0 /V1/EDID:delete

### 7.9.8. Resetting the Emulated EDIDs

#### Command and Response

- ▶ CALL /V1/EDID:reset()
- ◀ m0 /V1/EDID:reset

#### Parameters

Parameter	Parameter description	Values	Value description
<user_edid>	The emulated EDID memory of the desired input port.	U1-U14	User EDIDs

#### Example

- ▶ CALL /V1/EDID:reset()
- ◀ m0 /V1/EDID:reset

Calling this method switches all emulated EDIDs to a factory default one. See the table in the [Factory EDID List](#) section.

## 7.10. Ethernet Port Configuration

### 7.10.1. Setting the DHCP State

**ATTENTION!** When you change a network property, the new value is stored, but the `applySettings` method must always be called to apply the new settings. When two or more network parameters are changed, the `applySettings` method is enough to be called once as a final step; it will reboot the device.

**Command and Response** `#dhcp #network #ipaddress`

- ▶ SET /V1/MANAGEMENT/NETWORK.DhcpEnabled=<dhcp\_status>
- ◀ pw /V1/MANAGEMENT/NETWORK.DhcpEnabled=<dhcp\_status>

#### Parameters

If the <dhcp\_status> parameter is `true`, the current IP address setting is DHCP, if the parameter is `false`, the current IP address is static.

#### Example

- ▶ SET /V1/MANAGEMENT/NETWORK.DhcpEnabled=true
- ◀ pw /V1/MANAGEMENT/NETWORK.DhcpEnabled=true
- ▶ CALL /V1/MANAGEMENT/NETWORK:applySettings()
- ◀ m0 /V1/MANAGEMENT/NETWORK:applySettings

INFO: The `applySettings` method will save and apply the new value, and will reboot the device.

INFO: The current setting can be queried by using the [GET Command](#).

### 7.10.2. Changing the IP Address (Static)

#### Command and Response

- ▶ SET /V1/MANAGEMENT/NETWORK.StaticIpAddress=<IP\_address>
- ◀ pw /V1/MANAGEMENT/NETWORK.StaticIpAddress=<IP\_address>

#### Example

- ▶ SET /V1/MANAGEMENT/NETWORK.StaticIpAddress=192.168.0.85
- ◀ pw /V1/MANAGEMENT/NETWORK.StaticIpAddress=192.168.0.85
- ▶ CALL /V1/MANAGEMENT/NETWORK:applySettings()
- ◀ m0 /V1/MANAGEMENT/NETWORK:applySettings

INFO: The `applySettings` method will save and apply the new value, and will reboot the device.

INFO: The current setting can be queried by using the [GET Command](#).

### 7.10.3. Changing the Subnet Mask (Static)

#### Command and Response `#ipaddress`

- ▶ SET /V1/MANAGEMENT/NETWORK.StaticNetworkMask=<netmask>
- ◀ pw /V1/MANAGEMENT/NETWORK.StaticNetworkMask=<netmask>

#### Example

- ▶ SET /V1/MANAGEMENT/NETWORK.StaticNetworkMask=255.255.255.0
- ◀ pw /V1/MANAGEMENT/NETWORK.StaticNetworkMask=255.255.255.0
- ▶ CALL /V1/MANAGEMENT/NETWORK:applySettings()
- ◀ m0 /V1/MANAGEMENT/NETWORK:applySettings

INFO: The `applySettings` method will save and apply the new value, and will reboot the device.

INFO: The current setting can be queried by using the [GET Command](#).

### 7.10.4. Changing the Gateway Address (Static)

#### Command and Response

- ▶ SET /V1/MANAGEMENT/NETWORK.StaticGatewayAddress=<gw\_address>
- ◀ pw /V1/MANAGEMENT/NETWORK.StaticGatewayAddress=<gw\_address>

#### Example

- ▶ SET /V1/MANAGEMENT/NETWORK.StaticGatewayAddress=192.168.0.5
- ◀ pw /V1/MANAGEMENT/NETWORK.StaticGatewayAddress=192.168.0.5
- ▶ CALL /V1/MANAGEMENT/NETWORK:applySettings()
- ◀ m0 /V1/MANAGEMENT/NETWORK:applySettings

INFO: The `applySettings` method will save and apply the new value, and will reboot the device.

INFO: The current setting can be queried by using the [GET Command](#).

### 7.10.5. Applying Network Settings

#### Command and Response

- ▶ CALL /V1/MANAGEMENT/NETWORK:applySettings()
- ◀ m0 /V1/MANAGEMENT/NETWORK:applySettings

#### Example

- ▶ CALL /V1/MANAGEMENT/NETWORK:applySettings()
- ◀ m0 /V1/MANAGEMENT/NETWORK:applySettings

All network settings that were changed are applied and the network interface restarts.

### 7.10.6. Setting the Hostname

The host name is a property that can be used instead of the IP address when connecting to the device. It is also suitable for finding the device in the Device Discovery window of the LDC, see more details in the [Add New Favorite Device](#) section. If the IP address of the device is changing, the host name can be used as a fixed property.

Restarting HTTP(S) Services is required after the hostname changed. A new certificate is generated after modifying the hostname.

**DIFFERENCE:** Prior to firmware version v2.2.3b4, a bug may occur if the first character of the host name is a number, which causes the device to revert to factory default settings upon reboot. From firmware version v2.2.3b4, this is fixed.

#### Command and Response

- ▶ SET /V1/MANAGEMENT/NETWORK.HostName=<unique\_name>
- ◀ pw /V1/MANAGEMENT/NETWORK.HostName=<unique\_name>

#### Parameters

The <unique\_name> can be 1-64 character(s) long, and the following are allowed for naming: the elements of the English alphabet and numbers. Hyphen (-) and dot (.) are also accepted, except as last character.

#### Example

- ▶ SET /V1/MANAGEMENT/NETWORK.HostName=room-switcher
- ◀ pw /V1/MANAGEMENT/NETWORK.HostName=room-switcher

## 7.11. Network Security

### 7.11.1. Enabling/Disabling Ethernet Port

#### Command and Response

- ▶ SET /V1/MEDIA/ETHERNET/<ethernet\_port>.Enabled=<status>
- ◀ pw /V1/MEDIA/ETHERNET/<ethernet\_port>.Enabled=<status>

#### Parameters

Identifier	Parameter description	Parameter values
<ethernet_port>	Ethernet port number	P1-P3
<status>	The port is enabled. The port is disabled.	true false

#### Example

- ▶ SET /V1/MEDIA/ETHERNET/P2.Enabled=true
- ◀ pw /V1/MEDIA/ETHERNET/P2.Enabled=true

### 7.11.2. Querying the Service Port Number

#### Command and Response

- ▶ GET /V1/MANAGEMENT/NETWORK/SERVICES/<port>.Port
- ◀ pr /V1/MANAGEMENT/NETWORK/SERVICES/<port>.Port=<port\_num>

#### Parameters

Identifier	Parameter description	Parameter values
<port>	Port type	HTTP HTTPS LW3 UART1 UART2
<port_num>	Port number	80 443 6107 8001 8002

#### Example

- ▶ GET /V1/MANAGEMENT/NETWORK/SERVICES/HTTP.Port
- ◀ pr /V1/MANAGEMENT/NETWORK/SERVICES/HTTP.Port=80

### 7.11.3. Enabling/Disabling Service Port

#### Command and Response *#http #https*

- ▶ SET /V1/MANAGEMENT/NETWORK/SERVICES/<port>.Enabled=<status>
- ◀ pw /V1/MANAGEMENT/NETWORK/SERVICES/<port>.Enabled=<status>

#### Parameters

Identifier	Parameter description	Parameter values
<port>	Port type	HTTP HTTPS
<status>	The port is enabled. The port is disabled.	true false

#### Example

- ▶ SET /V1/MANAGEMENT/NETWORK/SERVICES/HTTP.Enabled=true
- ◀ pw /V1/MANAGEMENT/NETWORK/SERVICES/HTTP.Enabled=true

### 7.11.4. Querying the Username for Authentication

INFO: MMX2 series deal with one user for authentication and the username (admin) can not be changed.

#### Command and Response

- ▶ GET /V1/MANAGEMENT/NETWORK/AUTH/USER1.Name
- ◀ pr /V1/MANAGEMENT/NETWORK/AUTH/USER1.Name=admin

#### Example

- ▶ GET /V1/MANAGEMENT/NETWORK/AUTH/USER1.Name
- ◀ pr /V1/MANAGEMENT/NETWORK/AUTH/USER1.Name=admin

### 7.11.5. Setting a Password for Authentication

**DIFFERENCE:** This command is available from v1.2.0 to v2.1.0 firmware package. From firmware version v2.2.0, password setting is only available through REST API.

INFO: Due to security reasons, the password is not stored in any property, so it can not be queried. No password is set by default, setting a password before authorizing the authentication is necessary.

#### Command and Response *#password*

- ▶ CALL /V1/MANAGEMENT/NETWORK/AUTH/USER1:setPassword(<password>)
- ◀ m0 /V1/MANAGEMENT/NETWORK/AUTH/USER1:setPassword=

#### Parameters

Identifier	Parameter description	Value description
<password>	User defined password for authentication.	max. character length: 100 accepted characters: a-z, A-Z, 0-9

#### Example

- ▶ CALL /V1/MANAGEMENT/NETWORK/AUTH/USER1:setPassword(password)
- ◀ m0 /V1/MANAGEMENT/NETWORK/AUTH/USER1:setPassword=

### 7.11.6. Enabling Authentication

INFO: Set the password before enabling the authentication, because no password is set by default.

#### Command and Response

- ▶ SET /V1/MANAGEMENT/NETWORK/SERVICES/<port>.AuthenticationEnabled=<status>
- ◀ pw /V1/MANAGEMENT/NETWORK/SERVICES/<port>.AuthenticationEnabled=<status>
- ▶ CALL /V1/MANAGEMENT/NETWORK/SERVICES/HTTP:restart()
- ◀ m0 /V1/MANAGEMENT/NETWORK/SERVICES/HTTP:restart=

#### Parameters

Identifier	Parameter description	Parameter values
<port>	Port type	HTTP, HTTPS
<status>	Authentication enabled Authentication disabled	true, false

#### Example

- ▶ SET /V1/MANAGEMENT/NETWORK/SERVICES/HTTP.AuthenticationEnabled=true
- ◀ pw /V1/MANAGEMENT/NETWORK/SERVICES/HTTP.AuthenticationEnabled=true
- ▶ CALL /V1/MANAGEMENT/NETWORK/SERVICES/HTTP:restart()
- ◀ m0 /V1/MANAGEMENT/NETWORK/SERVICES/HTTP:restart=

INFO: Restarting HTTP(S) Services is required after the authentication settings changed.

### 7.11.7. Restarting Network Services

#### Command and Response *#http #https*

- ▶ CALL /V1/MANAGEMENT/NETWORK/SERVICES/<port>:restart()
- ◀ m0 /V1/MANAGEMENT/NETWORK/SERVICES/<port>:restart=

#### Parameters

Identifier	Parameter description	Parameter values
<port>	Port type	HTTP HTTPS

#### Example

- ▶ CALL /V1/MANAGEMENT/NETWORK/SERVICES/HTTP:restart()
- ◀ m0 /V1/MANAGEMENT/NETWORK/SERVICES/HTTP:restart=

## 7.12. Serial Port Configuration

### 7.12.1. BAUD Rate Setting

**Command and Response** *#rs-232 #rs232*

- ▶ SET /V1/MEDIA/SERIAL/<serial\_port>.Baudrate=<baudrate>
- ◀ pw /V1/MEDIA/SERIAL/<serial\_port>.Baudrate=<baudrate>

**Parameters**

Identifier	Parameter description	Parameter values
<serial_port>	Serial port number	P1-P2
<baudrate>	Baud rate value	9600 19200 38400 57600 115200

**Example**

- ▶ SET /V1/MEDIA/SERIAL/P1.Baudrate=19200
- ◀ pw /V1/MEDIA/SERIAL/P1.Baudrate=19200

### 7.12.2. Stop Bits Setting

**Command and Response** *#rs-232 #rs232*

- ▶ SET /V1/MEDIA/SERIAL/<serial\_port>.StopBits=<stopbits>
- ◀ pw /V1/MEDIA/SERIAL/<serial\_port>.StopBits=<stopbits>

**Parameters**

Identifier	Parameter description	Parameter values
<serial_port>	Serial port number	P1-P2*
<stopbits>	Stop bit value	1 2

\*The MMX2-2x1-HC30 model has one serial port (P1).

**Example**

- ▶ SET /V1/MEDIA/SERIAL/P1.StopBits=1
- ◀ pw /V1/MEDIA/SERIAL/P1.StopBits=1

### 7.12.3. Querying Data Bits

**Command and Response** *#rs-232 #rs232*

- ▶ GET /V1/MEDIA/SERIAL/<serial\_port>.DataBits
- ◀ pr /V1/MEDIA/SERIAL/<serial\_port>.DataBits=<databits>

**Parameters**

Identifier	Parameter description	Parameter values
<serial_port>	Serial port number	P1-P2
<databits>	DataBits value	8 9

**Example**

- ▶ GET /V1/MEDIA/SERIAL/P1.DataBits
- ◀ pr /V1/MEDIA/SERIAL/P1.DataBits=8

### 7.12.4. Parity Setting

**Command and Response** *#rs-232 #rs232*

- ▶ SET /V1/MEDIA/SERIAL/<serial\_port>.Parity=<parity>
- ◀ pw /V1/MEDIA/SERIAL/<serial\_port>.Parity=<parity>

**Parameters**

Identifier	Parameter description	Parameter values
<serial_port>	Serial port number	P1-P2
<parity>	Parity value	None Odd Even

**Example**

- ▶ SET /V1/MEDIA/SERIAL/P1.Parity=None
- ◀ pw /V1/MEDIA/SERIAL/P1.Parity=None

## 7.13. Sending a Message via RS-232

**ATTENTION!** Serial message sending is implemented only via Lightware REST API. This function is not available with an LW3 protocol command. For more details, see [Serial Port Messaging](#).



## 7.14. GPIO Port Configuration

### 7.14.1. Querying the Direction of a GPIO Pin

#### Command and Response #gpio

- ▶ GET /V1/MEDIA/GPIO/<pin>.Direction
- ◀ pw /V1/MEDIA/GPIO/<pin>.Direction(<dir>)

#### Parameters

Parameter	Parameter description	Value	Value description
<dir>	The direction of the GPIO pin.	Input	input
		Output	output

#### Example

- ▶ GET /V1/MEDIA/GPIO/P1.Direction
- ◀ pw /V1/MEDIA/GPIO/P1.Direction=Input

### 7.14.2. Setting the Direction of a GPIO Pin

#### Command and Response

- ▶ SET /V1/MEDIA/GPIO/<pin>.Direction(<dir>)
- ◀ pw /V1/MEDIA/GPIO/<pin>.Direction(<dir>)

#### Parameters

See the previous section.

#### Example

- ▶ SET /V1/MEDIA/GPIO/P1.Direction=Input
- ◀ pw /V1/MEDIA/GPIO/P1.Direction=Input

### 7.14.3. Querying the Output Level of a GPIO Pin

#### Command and Response

- ▶ GET /V1/MEDIA/GPIO/<pin>.Output
- ◀ pw /V1/MEDIA/GPIO/<pin>.Output(<value>)

#### Parameters

Parameter	Parameter description	Value	Value description
<value>	The output value of the GPIO pin.	High	high level
		Low	low level

#### Example

- ▶ GET /V1/MEDIA/GPIO/P1.Output
- ◀ pw /V1/MEDIA/GPIO/P1.Output=Low

### 7.14.4. Setting the Output Level of a GPIO Pin

#### Command and Response

- ▶ SET /V1/MEDIA/GPIO/<pin>.Output(<value>)
- ◀ pw /V1/MEDIA/GPIO/<pin>.Output(<value>)

#### Parameters

See the previous section.

#### Example

- ▶ SET /V1/MEDIA/GPIO/P1.Output=High
- ◀ pw /V1/MEDIA/GPIO/P1.Output=High

### 7.14.5. Setting the Output Level for a Specified Time

#### Command and Response

- ▶ CALL /V1/MEDIA/GPIO/<pin>.interval(<value>;<time>)
- ◀ m0 /V1/MEDIA/GPIO/<pin>.interval=

#### Parameters

Parameter	Parameter description	Value	Value description
<value>	The output value of the GPIO pin.	High	high level
		Low	low level
<time>	Duration of the desired value in seconds.	1-120	seconds

#### Example

- ▶ CALL /V1/MEDIA/GPIO/P1.interval(Low;1)
- ◀ m0 /V1/MEDIA/GPIO/P1.interval=

### 7.14.6. Toggling the Level of a GPIO Pin

The output level can be changed from high to low and from low to high by the command below.

#### Command and Response

- ▶ CALL /V1/MEDIA/GPIO/<pin>.toggle()
- ◀ m0 /V1/MEDIA/GPIO/<pin>.toggle

#### Example

- ▶ CALL /V1/MEDIA/GPIO/P1.toggle()
- ◀ m0 /V1/MEDIA/GPIO/P1.toggle

## 7.15. OCS Port Configuration

**DIFFERENCE:** Occupancy sensor-related commands are available only from FW package 1.1.0b7.

### 7.15.1. Querying the Input Level of an OCS Pin

#### Command and Response #ocs

- ▶ GET /V1/MEDIA/OCS/P1.InputLevel
- ◀ pr /V1/MEDIA/OCS/P1.InputLevel=<value>

#### Parameters

Parameter	Parameter description	Value	Value description
<value>	The input value of the OCS pin.	High	high level
		Low	low level

#### Example

- ▶ GET /V1/MEDIA/OCS/P1.InputLevel
- ◀ pr /V1/MEDIA/OCS/P1.InputLevel=Low

### 7.15.2. Setting the Sensor Type

#### Command and Response

- ▶ SET /V1/MEDIA/OCS/P1.SensorType=<sensor\_type>
- ◀ pw /V1/MEDIA/OCS/P1.SensorType=<sensor\_type>

#### Parameters

Parameter	Parameter description	Value	Value description
<sensor_type>	It defines whether the low or high input level means the occupancy.	Active low	Occupancy status is 'Occupied' when the input level is low.
		Active high	Occupancy status is 'Occupied' when the input level is high (default value).

#### Example

- ▶ SET /V1/MEDIA/OCS/P1.SensorType=Active low
- ◀ pw /V1/MEDIA/OCS/P1.SensorType=Active low

### 7.15.3. Querying the Reported OCS State

#### Command and Response

- ▶ GET /V1/MEDIA/OCS/P1.State
- ◀ pr /V1/MEDIA/OCS/P1.State=<status>

#### Parameters

Parameter	Parameter description	Value	Value description
<status>	It reports the occupancy state of the room depending on the sensor type.	Free	When the SensorType=Active high and the Inputlevel=Low or when SensorType=Active low and Inputlevel=High
		Occupied	When the SensorType=Active high and the Inputlevel=High or when SensorType=Active low and Inputlevel=Low

#### Example

- ▶ GET /V1/MEDIA/OCS/P1.State
- ◀ pr /V1/MEDIA/OCS/P1.State=Free

## 7.16. LW3 Commands - Quick Summary

### System Commands

#### Setting the Device Label

- ▶ SET·/V1/MANAGEMENT/LABEL.DeviceLabel=<custom\_name>

#### Resetting the Device

- ▶ CALL·/V1/SYS:restart()

#### Restoring the Factory Default Settings

- ▶ CALL·/V1/SYS:factoryDefaults()

#### Querying the Firmware Package Version

- ▶ GET·/V1/MANAGEMENT/UID/PACKAGE.Version

#### Control Lock

- ▶ SET·/V1/MANAGEMENT/UI.ControlLock=<lock\_status>

#### Setting the Current Time

- ▶ CALL·/V1/MANAGEMENT/DATETIME:setTime(<current\_time>)

#### Identifying the Device

- ▶ CALL /V1/MANAGEMENT/UI:identifyMe()

#### Toggling the Dark Mode Setting

- ▶ SET·/V1/MANAGEMENT/UI/DARKMODE.Enable=<mode\_state>

#### Setting the Delay of the Dark Mode Setting

- ▶ SET·/V1/MANAGEMENT/UI/DARKMODE.Delay=<delay\_time>

### Video Port Settings - General

#### Switching Video Input

- ▶ CALL·/V1/MEDIA/VIDEO/XP:switch(<in>:<out>)

#### Switching an Input to All Outputs

- ▶ CALL·/V1/MEDIA/VIDEO/XP:switchAll(<input>)

#### Locking the Video Port

- ▶ SET·/V1/MEDIA/VIDEO/XP/<port>.Lock=<locked\_state>

#### Muting the Video Port

- ▶ SET·/V1/MEDIA/VIDEO/XP/<port>.Mute=<muted\_state>

#### Setting the Autoselect Policy

- ▶ SET·/V1/MEDIA/VIDEO/AUTOSELECT/<out>.Policy=<autoselect\_mode>

#### Changing the Autoselect Included Input Ports

- ▶ SET·/V1/MEDIA/VIDEO/AUTOSELECT/<out>/<in>.Included=<state>

#### Changing the Input Port Priority

- ▶ SET·/V1/MEDIA/VIDEO/AUTOSELECT/<out>/<in>.Priority=<prio\_num>

#### Querying the Connected Source

- ▶ GET·/V1/MEDIA/VIDEO/XP/<out>.ConnectedSource

#### Querying the Input Switching Capability

- ▶ GET·/V1/MEDIA/VIDEO/XP/<out>/SWITCHABLE.<in>

#### Querying the Connected Destinations

- ▶ GET·/V1/MEDIA/VIDEO/XP/<n>.ConnectedDestinations

#### Querying the Video Signal Presence

- ▶ GET·/V1/MEDIA/VIDEO/<port>.SignalPresent

#### HDCP Setting (Input Port)

- ▶ SET·/V1/MEDIA/VIDEO/<in>/HDCP.AllowedHdcpVersion=<allowed\_hdcp>

#### HdcpMode

- ▶ SET·/V1/MEDIA/VIDEO/<out>.HdcpMode=<hdcp\_mode>

#### OutputSignalType

- ▶ SET·/V1/MEDIA/VIDEO/<out>.OutputSignalType=<signal\_type>

#### EmbeddedAudioPresent

- ▶ GET·/V1/MEDIA/VIDEO/<port>.EmbeddedAudioPresent

#### EmbeddedAudioMute

- ▶ SET·/V1/MEDIA/VIDEO/<port>.EmbeddedAudioMute=<mute\_state>

#### Output5VMode

- ▶ SET·/V1/MEDIA/VIDEO/<out>.Output5VMode=<5V\_pwr>

#### HDCP Capability (Output Port)

- ▶ SET·/V1/MEDIA/VIDEO/<out>/HDCP/SinkMaxHdcpVersion=<hdcp\_ver>

#### HDCP Setting (Output Port)

- ▶ SET·/V1/MEDIA/VIDEO/<out>/HDCP.AllowedHdcpVersion=<allowed\_hdcp>

**Audio Port Settings****Switching Audio Input**

- ▶ `CALL·/V1/MEDIA/AUDIO/XP:switch(<audio_in>:O3)`

**Querying the Connected Source**

- ▶ `GET·/V1/MEDIA/AUDIO/XP/O3.ConnectedSource`

**Querying the Connected Destinations**

- ▶ `GET·/V1/MEDIA/AUDIO/XP/<audio_in>.ConnectedDestinations`

**Setting Autoselect Operation Mode**

- ▶ `SET·/V1/MEDIA/AUDIO/AUTOSELECT/O4.Policy=<op_mode>`

**Setting the Followed Video Port to Autoselect**

- ▶ `SET·/V1/MEDIA/AUDIO/AUTOSELECT/O4.VideoFollowPort=<out>`

**Locking the Audio Port**

- ▶ `SET·/V1/MEDIA/AUDIO/XP/<audio_port>.Lock=<locked_state>`

**Muting the Audio Port 1.**

- ▶ `SET·/V1/MEDIA/AUDIO/XP/<audio_port>.Mute=<muted_state>`

**Muting the Audio Port 2.**

- ▶ `SET·/V1/MEDIA/AUDIO/O4.Mute=<muted_state>`

**Querying the Audio Signal Presence**

- ▶ `GET·/V1/MEDIA/AUDIO/<audio_port>.SignalPresent`

**Analog Audio Output Volume (dB) Setting**

- ▶ `SET·/V1/MEDIA/AUDIO/O4.VolumedB=<level>`

**Analog Audio Output Volume Percent Setting**

- ▶ `SET·/V1/MEDIA/AUDIO/O4.VolumePercent=<percent>`

**Setting the Balance**

- ▶ `SET·/V1/MEDIA/AUDIO/O4.Balance=<level>`

**Analog Audio Output Level Setting by Steps (dB)**

- ▶ `CALL·/V1/MEDIA/AUDIO/O4:stepVolumedB(<step>)`

**Analog Audio Output Level Setting by Steps in Percent**

- ▶ `CALL·/V1/MEDIA/AUDIO/O4:stepVolumePercent(<step>)`

**Analog Audio Output Balance Setting by Steps**

- ▶ `CALL·/V1/MEDIA/AUDIO/O4:stepBalance(<step>)`

**EDID Management****Querying the Emulated EDIDs**

- ▶ `GET·/V1/EDID.EdidStatus`

**Querying the Validity of a Dynamic EDID**

- ▶ `GET·/V1/EDID/D/D1.Validity`

**Querying the Preferred Resolution of a User EDID**

- ▶ `GET·/V1/EDID/U/<user_edid>.PreferredResolution`

**Emulating an EDID to an Input Port**

- ▶ `CALL·/V1/EDID:switch(<source>:<destination>)`

**Emulating an EDID to All Input Ports**

- ▶ `CALL·/V1/EDID:switchAll(<source>)`

**Copying an EDID to User Memory**

- ▶ `CALL·/V1/EDID:copy(<source>:<destination>)`

**Deleting an EDID from User Memory**

- ▶ `CALL·/V1/EDID:delete(<user_edid>)`

**Resetting the Emulated EDIDs**

- ▶ `CALL·/V1/EDID:reset()`

**Ethernet Port Configuration****Setting the DHCP State**

- ▶ `SET·/V1/MANAGEMENT/NETWORK.DhcpEnabled=<dhcp_status>`

**Changing the IP Address (Static)**

- ▶ `SET·/V1/MANAGEMENT/NETWORK.StaticIpAddress=<IP_address>`

**Changing the Subnet Mask (Static)**

- ▶ `SET·/V1/MANAGEMENT/NETWORK.StaticNetworkMask=<netmask>`

**Changing the Gateway Address (Static)**

- ▶ `SET·/V1/MANAGEMENT/NETWORK.StaticGatewayAddress=<gw_address>`

**Applying Network Settings**

- ▶ `CALL·/V1/MANAGEMENT/NETWORK:applySettings()`

**Setting the Hostname**

- ▶ `SET·/V1/MANAGEMENT/NETWORK.HostName=<unique_name>`

**Network Security****Enabling/Disabling Ethernet Port**

- ▶ SET·/V1/MEDIA/ETHERNET/<ethernet\_port>.Enabled=<status>

**Querying the Service Port Number**

- ▶ GET·/V1/MANAGEMENT/NETWORK/SERVICES/<port>.Port

**Enabling/Disabling Service Port**

- ▶ GET·/V1/MANAGEMENT/NETWORK/SERVICES/<port>.Enabled=<status>

**Querying the Username for Authentication**

- ▶ GET·/V1/MANAGEMENT/NETWORK/AUTH/USER1.Name

**Setting a Password for Authentication**

- ▶ CALL·/V1/MANAGEMENT/NETWORK/AUTH/USER1:setPassword(<password>)

**Enabling Authentication**

- ▶ SET·/V1/MANAGEMENT/NETWORK/SERVICES/<port>.AuthenticationEnabled=<status>
- ▶ CALL /V1/MANAGEMENT/NETWORK/SERVICES/HTTP:restart()

**Restarting Network Services**

- ▶ CALL·/V1/MANAGEMENT/NETWORK/SERVICES/<port>:restart()

**Serial Port Configuration****BAUD Rate Setting**

- ▶ SET·/V1/MEDIA/SERIAL/<serial\_port>.Baudrate=<baudrate>

**Stop Bits Setting**

- ▶ SET·/V1/MEDIA/SERIAL/<serial\_port>.StopBits=<stopbits>

**Querying Data Bits**

- ▶ GET·/V1/MEDIA/SERIAL/<serial\_port>.DataBits

**Parity Setting**

- ▶ SET·/V1/MEDIA/SERIAL/<serial\_port>.Parity=<parity>

**GPIO Port Configuration****Querying the Direction of a GPIO Pin**

- ▶ GET·/V1/MEDIA/GPIO/<pin>.Direction

**Setting the Direction of a GPIO Pin**

- ▶ SET·/V1/MEDIA/GPIO/<pin>.Direction(<dir>)

**Querying the Output Level of a GPIO Pin**

- ▶ GET·/V1/MEDIA/GPIO/<pin>.Output

**Setting the Output Level of a GPIO Pin**

- ▶ SET·/V1/MEDIA/GPIO/<pin>.Output(<value>)

**Setting the Output Level for a Specified Time**

- ▶ CALL·/V1/MEDIA/GPIO/<pin>:interval(<value>;<time>)

**Toggling the Level of a GPIO Pin**

- ▶ CALL·/V1/MEDIA/GPIO/<pin>:toggle()

**OCS Port Configuration****Querying the Input Level of an OCS Pin**

- ▶ GET·/V1/MEDIA/OCS/P1.InputLevel

**Setting the Sensor Type**

- ▶ SET·/V1/MEDIA/OCS/P1.SensorType=<sensor\_type>

**Querying the Reported OCS State**

- ▶ GET·/V1/MEDIA/OCS/P1.State

# 8

## Firmware Update

This chapter is meant to help customers perform firmware updates on our products by giving a few tips on how to start and by explaining the features of the Lightware Device Updater v2 (LDU2) software. The latest software and firmware pack can be downloaded from [www.lightware.com](http://www.lightware.com).

- ▶ INTRODUCTION
- ▶ PREPARATION
- ▶ RUNNING THE SOFTWARE
- ▶ UPDATING VIA GUI
- ▶ COMMAND LINE INTERFACE (CLI)
- ▶ CLI COMMANDS
- ▶ UPDATING VIA REST API
- ▶ IF THE UPDATE IS NOT SUCCESSFUL

**ATTENTION!** While the firmware is being updated, the normal operation mode is suspended, as the transmitter is switched to bootload mode. Signal processing is not performed. Do not interrupt the firmware update. If any problem occurs, reboot the device and restart the process.

## 8.1. Introduction

Lightware Device Updater v2 (LDU2) software is the second generation of the LFP-based (Lightware Firmware Package) firmware update process.



LDU2

## 8.2. Preparation

Most Lightware devices can be controlled over several interfaces (e.g. Ethernet, USB, RS-232). But the firmware can be updated usually over one dedicated interface, which is the Ethernet in most cases.

If you want to update the firmware of one or more devices, you need the following:

- **LFP2 file,**
- **LDU2 software** installed on your PC or Mac.

Both can be downloaded from [www.lightware.com/downloads](http://www.lightware.com/downloads).

Optionally, you can download the **release notes** file in HTML format.

### 8.2.1. About the Firmware Package (LFP2 File)

All the necessary tools and binary files are packed into the LFP2 package file. You only need this file to do the update on your device.

- This allows the use of the same LFP2 package for different devices.
- The package contains all the necessary components, binary, and other files.
- The release notes is included in the LFP2 file, and is displayed in the window where you select the firmware package file in LDU2.

**INFO:** The size of the LFP2 file is more than 200 MB due to the components of the package. That is not a fault: the Device runs an embedded Linux inside that is necessary for the complex functions and features of the device.

### 8.2.2. LDU2 Installation

**ATTENTION!** Minimum system requirement: 2 GB RAM. The minimum display resolution is 1600x900.

**INFO:** The Windows and the Mac applications have the same look and functionality.

Download the software from [www.lightware.com/downloads](http://www.lightware.com/downloads).

#### Installation in case of Windows OS

Run the installer. If the User Account Control displays a pop-up message, click **Yes**.



#### Installation Modes

Normal install	Snapshot install
Available for Windows, MacOS and Linux	Available for Windows
The installer can update only this instance	Cannot be updated
One updateable instance may exist for all users	Many different versions can be installed for all users

**ATTENTION!** Using the default Normal install is highly recommended.

**INFO:** If you have a previously installed version, you will be prompted to remove the old version before installing the new one.

#### Installation in case of macOS

Mount the DMG file by double clicking on it, and drag the LDU2 icon over the Applications icon to copy the program into the Applications folder. If you want to copy LDU2 into another location, just drag the icon over the desired folder.

**ATTENTION!** Please check the firewall settings on the macOS device. LDC needs to be added to the exceptions of the blocked softwares for the proper operation.

**INFO:** This type of installer is equal with the **Normal install** of Windows.



#### Installation in case of Linux

**Step 1.** Download the **archive file** (tar.gz) from [www.lightware.com](http://www.lightware.com) and unpack it to a temp folder.

**Step 2.** Run the **install\_ldu2.sh** file in the temp folder. The script will install LDU2 into the following folder: HOME/.local/share/lightware/ldu2.

**Step 3.** The folder above will contain this file: **LightwareDeviceUpdaterV2.sh**, which can be used to start LDU2.




### 8.3. Running the Software

You have two options:

- **Starting the LDU2** by double-clicking on the shortcut/program file, or
- Double-clicking on an **LFP2 file**.

#### LDU2 Auto-Update


At startup, the software checks if a newer version is available on the web.

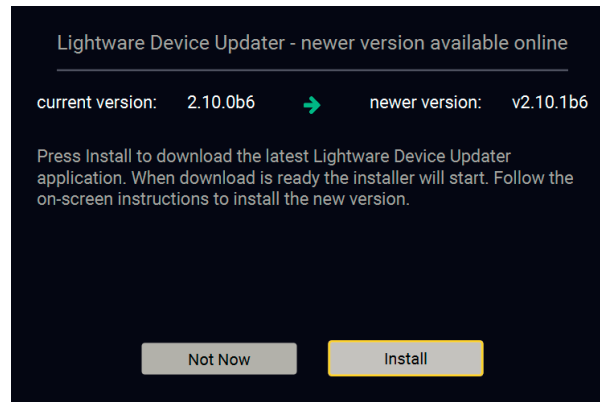

#### Main Screen

When the software is started by the shortcut, the device discovery screen appears. Press the **Discover devices** button to start finding the Lightware devices:

DISCOVER DEVICES

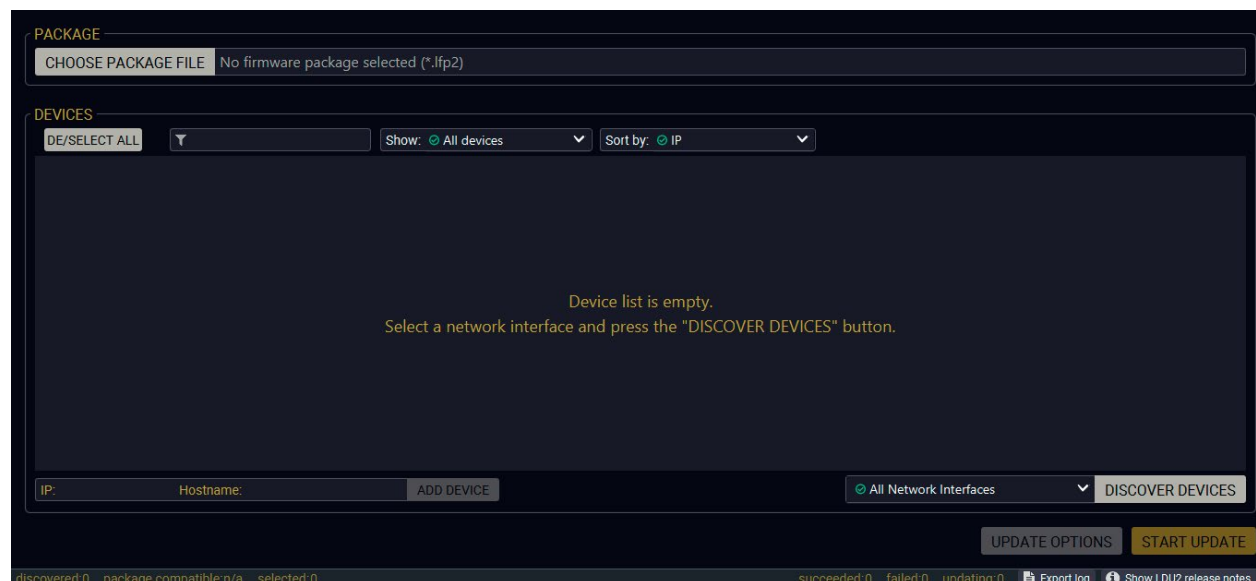


If you start the software by double-clicking on the LFP2 file, the firmware will be loaded. Press the **Search for devices** button; all the devices will be listed that are compatible with the selected firmware pack.






INFO: If you press the **Choose package file** button, the release notes of the LFP2 file will be displayed in the right panel; see the [Step 1. Select the Firmware Package](#) section.
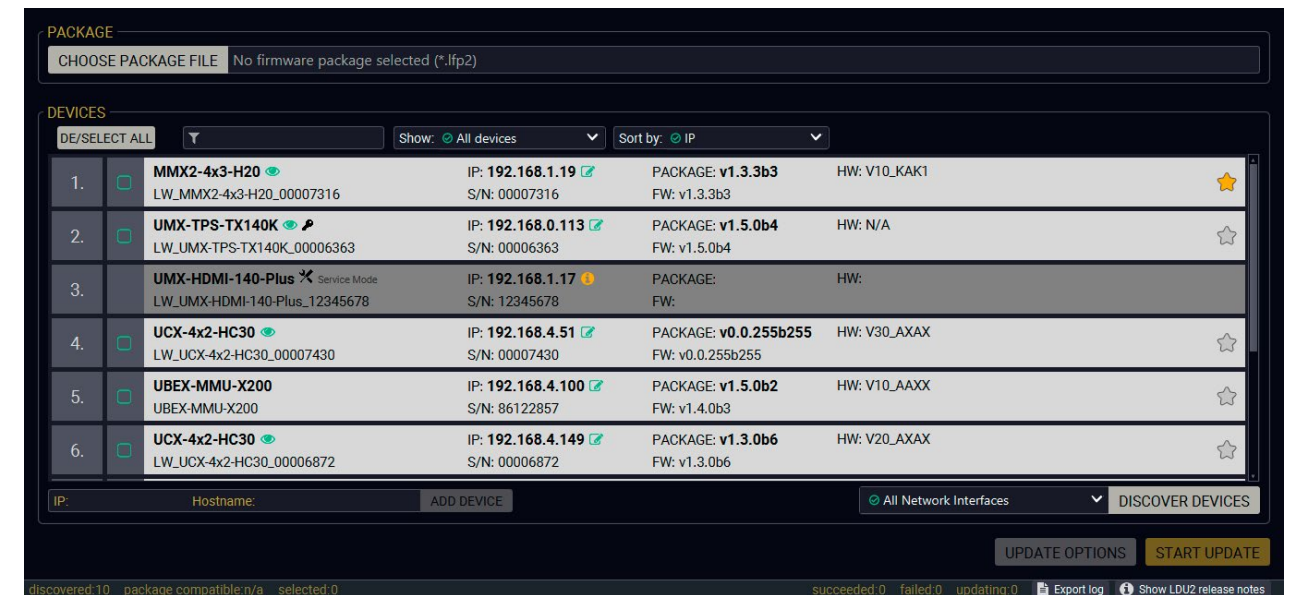
#### Device List

When the discovery has completed, the devices available on the network are listed in the application.



#### Legend of the Icons

-  **IP address editor** The IP address of the device can be changed in the pop-up window.
-  **Identify me** Clicking on the icon makes the front panel LEDs blink for 10 seconds, which helps identify the device physically.
-  **Authentication required** The password-protection is enabled. You have to enter the password to perform the firmware update in the pop-up window at the beginning of the update.
-  **Favorite device** The device has been marked, thus the IP address is stored. When a device is connected with that IP address, the star will be highlighted in that line.
-  **Further information available** Device is unreachable. Change the IP address using the front panel LCD menu or the IP address editor of the LDU2.



## 8.4. Updating Via GUI

To update the desired device(s) via the Graphical User Interface, follow these steps.

**ATTENTION!** The computer that runs LDU2 and the target device (that will be updated) must be in the same subnet. The update cannot be performed from behind a firewall or gateway.

**ATTENTION!** Updating with firmware version 2.1 or earlier will call factory reset on the device and all user settings will be lost. Upwards of firmware package v2.1, device configuration can be kept.


**ATTENTION!** While the firmware is being updated, the normal operation mode is suspended, as the device is switched to bootload mode. Signal processing is not performed. Do not interrupt the firmware update. If any problem occurs, reboot the unit and restart the process.

[Device Cloning – Configuration Backup and Restore](#) feature supports copying all the settings from one device to another, but cloning is only possible between devices using the same firmware. Uploading of the firmware package happens on http (80) and https (443) ports, so one of them has to be enabled.


### Step 1. Select the Firmware Package.

Click on the **Choose package file** button and navigate to the location where the LFP2 file was saved. When you click on the name of package, the preview of the release notes is displayed in the right panel.

CHOOSE PACKAGE FILE

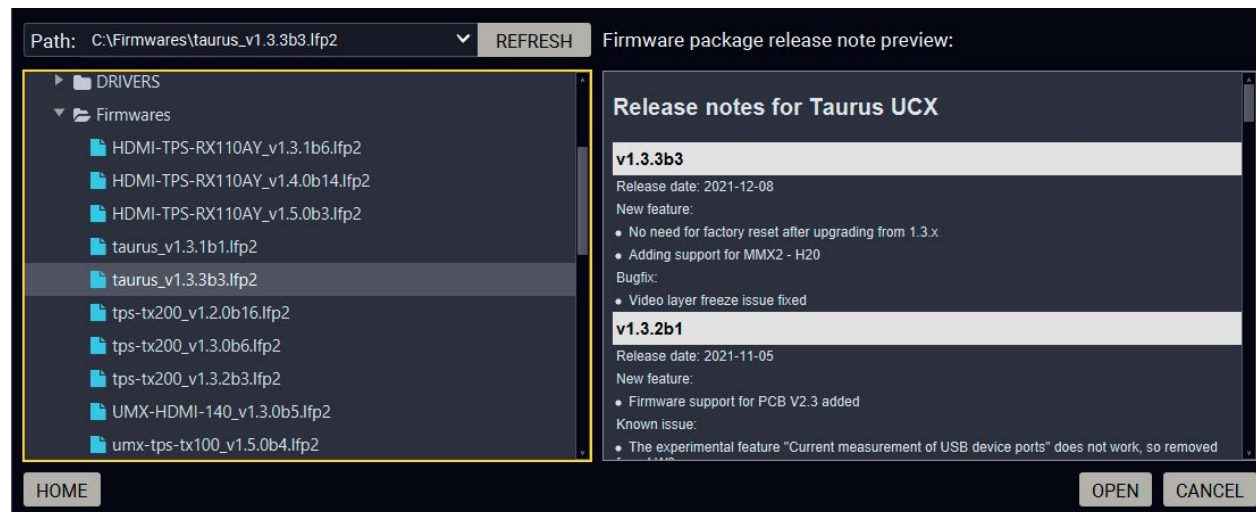

After the package file is loaded, the list is filtered to show the compatible devices only. The current firmware version of the device is highlighted in orange if it is different from the version of the package loaded.

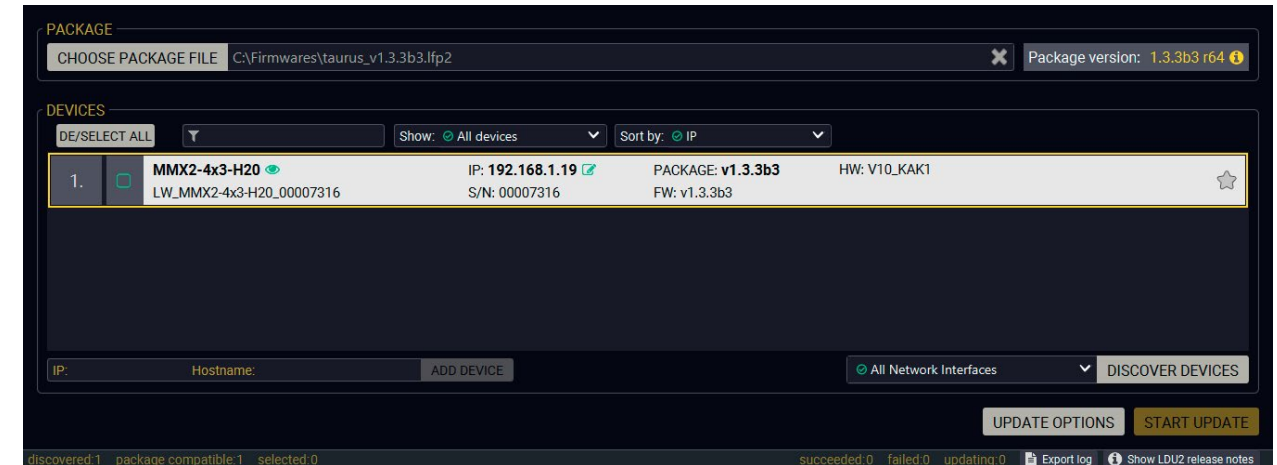


Devices may also be added manually by typing the IP address in the box near the bottom of the screen. From LDU2 version v2.16.1, manual addition of devices can also be done using the hostname.

**ATTENTION!** If the device cannot be added by the hostname, please use the IP address.

If you start the update by double-clicking on the LFP file, the screen above will be loaded right away.

### The Meaning of the Symbols

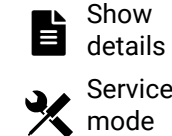


The log about the updating process of the device can be displayed in a new window.

The device is in bootload mode. Backup and restore cannot be performed in this case.


**Step 2. Select the desired devices for updating.**

Select the devices for updating; the selected line will be highlighted in green.

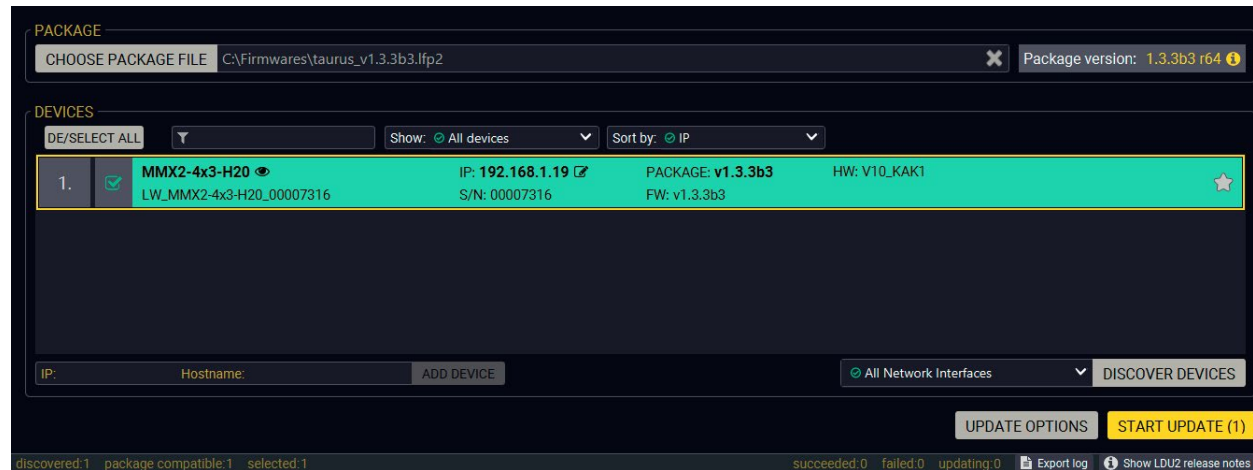
**Step 3. Start the update.**

Click on the **Start Update** button to start the procedure. The status is shown in percent in the right side of the device line and the overall process in the bottom progress bar. The device might reboot during the firmware update procedure.

START UPDATE

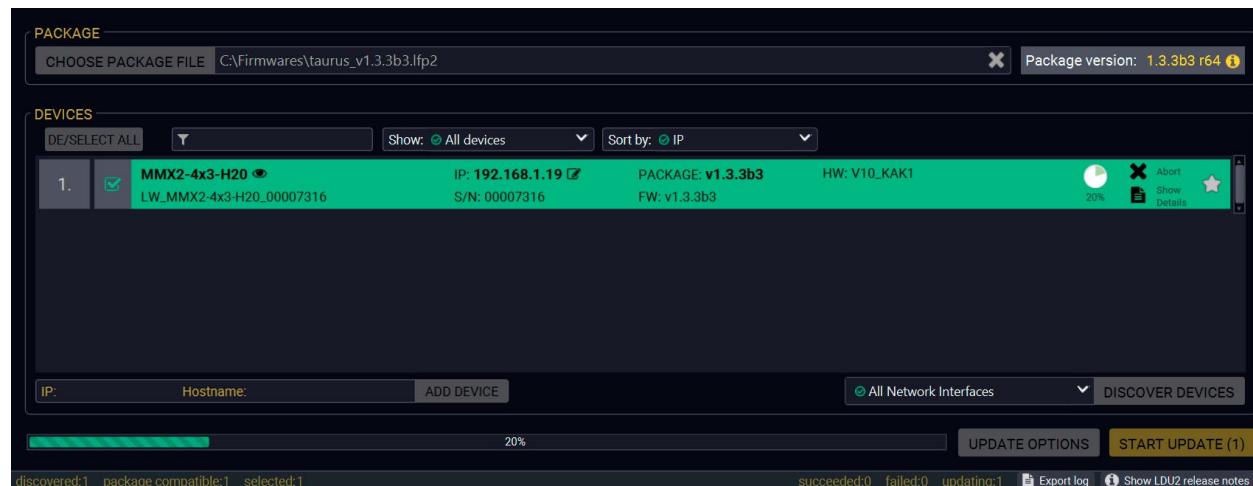

LDU2 uploads the firmware package into the device and the update will be executed internally. After that, LDU2 will disconnect from the device; you can close LDU2.

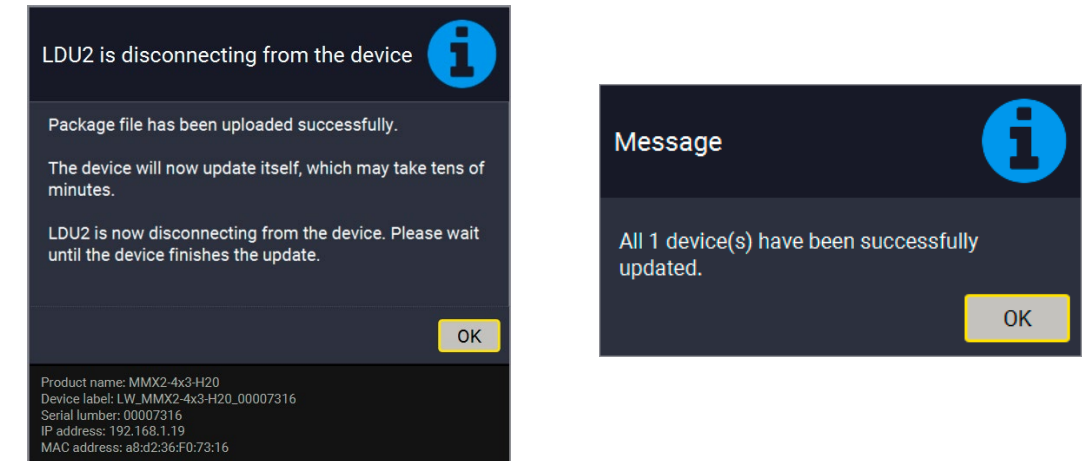**Step 4. Wait until the unit reboots with the new firmware.**

Once the firmware update procedure is completed, the device is rebooted with the new firmware. Shutting down and restarting the device is recommended.

## 8.5. Command Line Interface (CLI)

**DIFFERENCE:** The Command Line Interface is available from LDU2 v2.9.0b9.

The CLI of the LDU2 software is a simple tool for creating scriptable device updates without the need of human interactions. It allows batch updating just like in case of GUI usage.

### 8.5.1. How to Run

#### Running under Windows® OS

The installer of LDU2 puts the following file into the installation folder:


LightwareDeviceUpdaterV2\_CLI.cmd

CLI is available via this file, the exe is not suitable for that purpose. Open a command line window to execute or test the features directly.

**Step 1.** Open an Explorer window where the cmd file is located, the default is:

```
c:\Program Files (x86)\Lightware\Lightware Device Updater V2\
LightwareDeviceUpdaterV2_CLI.cmd.
```

**Step 2.** Click on the address line (highlighted in blue in the picture), type **cmd.exe** and press enter. The command interpreter window of Windows is opened at the path of the LDU2 install folder.

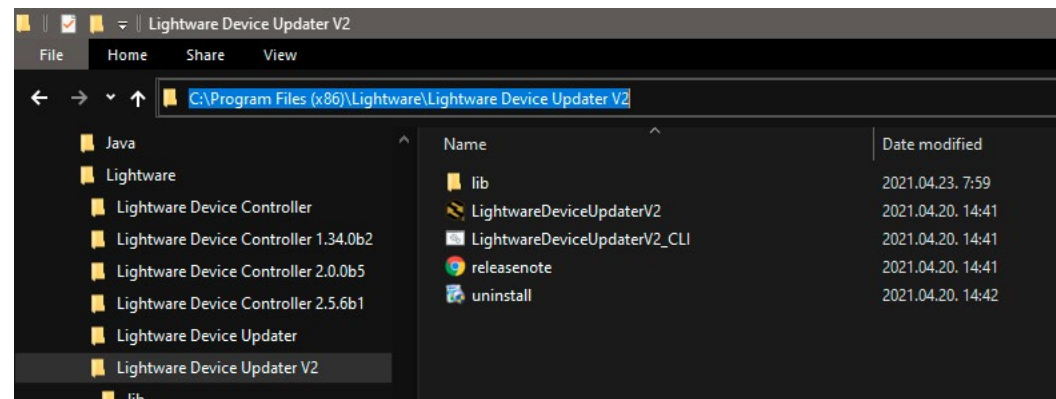

**Step 3.** Now you can use the LightwareDeviceUpdaterV2\_CLI.cmd file with the commands and options, which are described in the coming sections:

#### Running under Linux

The Command Line Interface under Linux Operating Systems can be run by the following:

LightwareDeviceUpdaterV2.sh.

Running an update:

```
bash LightwareDeviceUpdaterV2.sh update --ip 172.24.5.27 --package ~/
Downloads/taurus_v1.3.3b3.lfp2
```

The commands and options are the same under Windows® and Linux, too. The following sections contain examples with LightwareDeviceUpdaterV2\_CLI.cmd.

### 8.5.2. How to Use

#### Command Structure

The commands can be run over CLI in the following way:

```
LightwareDeviceUpdaterV2_CLI.cmd [command] [options]
```

[Command]: a certain command described in the coming sections; only one command can be run at a time

[Options]: mandatory and/or optional parameters of the command, if any. Optional parameters have a default value, which can be found at each affected command. You only have to define the parameter if you want to apply a different value. The **order of the options** is arbitrary.

#### Important Notes

- CLI is **case-sensitive** (including commands, options and other parameters).
- There is **no limit** regarding the number of the devices to update. At most 20 devices are updated simultaneously, when one of them is finished, the following (21st) will be started automatically.
- If an update is failed, the IP address of the affected device(s) are listed at the end.

## 8.6. CLI Commands

**INFO:** The commands and options described in the following sections are the same under Windows® and Linux, too. The examples contain LightwareDeviceUpdaterV2\_CLI.cmd.

#### About the Examples

- Sent command is in **blue**, response is in **grey**.
- If the response in practice is **longer than listed** in the example, this symbol can be seen: [...].

### 8.6.1. Help

The defined commands and options can be listed by the **help** command.

#### Command

```
LightwareDeviceUpdaterV2_CLI.cmd help
```

#### Example

```
C:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd
help

C:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\
ldu2.jar help
Command line usage:
Win: LightwareDeviceUpdaterV2_CLI.cmd [command] [options]
Linux: LightwareDeviceUpdaterV2.sh [command] [options]

Commands:
* help
* version
* update
* deviceInfo
* restore
* packageOptions

[...]
```

### 8.6.2. LDU2 Version

The response shows the version of the LDU2 and the version of the Script API (the Application Programming Interface that is used by the LDU2 and the script).

#### Command

```
LightwareDeviceUpdaterV2_CLI.cmd version
```

#### Example

```
C:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd
version

C:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\
ldu2.jar version
LDU2 version: 2.10.0b6
Script API version: 1.3.10
```

### 8.6.3. Check For New LDU2 Version

The following command can be used to check if an update of LDU2 is available. This is just a request, since the CLI is not suitable for handling the complete installer of the software.

#### Command

```
LightwareDeviceUpdaterV2_CLI.cmd checkForUpdates
```

#### Example 1

```
c:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd
checkForUpdates

c:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\
ldu2.jar checkForUpdates
Current LDU2 version: 2.10.0b6
LDU2 is up-to-date
```

#### Example 2

```
c:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd
checkForUpdates

c:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\
ldu2.jar checkForUpdates
Current LDU2 version: 2.9.1b1
New version is available online: 2.10.0b6
Download URL: http://update.lightware.hu/ldu2/lwr/v2.10.0b6/install_LDU2_v2.10.0b6.exe
```

### 8.6.4. Device Info

The most important information about the selected device is displayed; see the example for more details.

#### Command

```
LightwareDeviceUpdaterV2_CLI.cmd deviceInfo [options]
```

#### Options

Option	Description	Required?
-i or --ip	List of IP addresses of devices to be updated	one of them is mandatory
-n or --hostName	List of host names of devices to be updated	mandatory
-v or --packageVersion	Shows installed package version only	optional

#### Example 1

```
C:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd
deviceInfo --ip 192.168.0.100

C:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\
ldu2.jar deviceInfo --ip 192.168.0.100
Product name: MMX2-4x3-H20
IP address: 192.168.1.19
Serial number: 00007316
MAC address: a8:d2:36:F0:73:16
Part number: 91310078
Device label: LW_MMX2-4x3-H20_00007316
Package version: v1.3.3b3
CPU FW version: v1.3.3b3
HW version: V10_KAK1
Operation mode: Application mode
```

#### Example 2

```
C:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd
deviceInfo --ip 192.168.1.7 --packageVersion

C:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\
ldu2.jar deviceInfo --ip 192.168.0.100 --packageVersion
v1.3.3b3
```

### 8.6.5. Update

This command can be used to update the firmware of the devices.

#### Command

```
LightwareDeviceUpdaterV2_CLI.cmd update [options]
```

#### Options

Option	Description	Required?
-p or --package	The path of the firmware package file	yes
-i or --ip	List of IP addresses of devices to be updated	one of them is mandatory
-n or --hostName	List of host names of devices to be updated	
-r or --reportProgress	Report update progress in percentage form. Default: false	optional
Package-specific options	Certain LFP2 packages have features that can be applied at this command; see the <a href="#">Package Options</a> section.	optional

**ATTENTION!** The configuration is restored automatically if the factory default option is not applied in the update command. In that case, there is no need to run the **restore** command after the update.

#### Example

```
C:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd
update --ip 192.168.1.19 --package C:\Firmwares\taurus_v1.3.3b3.lfp2 --reportProgress

C:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\ldu2.
jar update --ip 192.168.1.19 --package C:\Firmwares\taurus_v1.3.3b3.lfp2 --reportProgress
[2022-02-11 11:22:52.820] [ INFO] [      main] - Device IPs: [192.168.1.19]
[2022-02-11 11:22:58.317] [ INFO] [      main] - All selected devices are available over
the network.
[2022-02-11 11:23:01.308] [ INFO] [      main] - All the selected devices are compatible
with the specified package.
[2022-02-11 11:23:04.356] [ INFO] [ 192.168.1.19] - Taurus UCX update process started
[2022-02-11 11:23:04.496] [ INFO] [ 192.168.1.19] - Update API version: 1.0
[2022-02-11 11:23:04.525] [ INFO] [ 192.168.1.19] - Update parameters: deviceIp:
192.168.1.19, factoryDefault: false
[2022-02-11 11:23:04.556] [ INFO] [ 192.168.1.19] - Update protocol: http://
[2022-02-11 11:23:04.558] [ INFO] [ 192.168.1.19] - Authentication type: NONE
[2022-02-11 11:23:04.737] [ INFO] [ 192.168.1.19] - Device info: Product name: MMX2-4x3-H20,
Device label: LW MMX2-4x3-H20 00007316, Serial number: 00007316, Mac address: a8:d2:36:F0:73:16,
Ip address: 192.168.1.19, Host name: , Package version: v1.3.3b3, Part number: 91310078, Hw
version: V10_KAK1
[2022-02-11 11:23:04.753] [ INFO] [ 192.168.1.19] - Uploading firmware package.
[2022-02-11 11:32:54.050] [ INFO] [ProgressReporter] - Progress: 13%
[2022-02-11 11:32:59.056] [ INFO] [ProgressReporter] - Progress: 19%
[2022-02-11 11:33:04.060] [ INFO] [ProgressReporter] - Progress: 25%
[2022-02-11 11:33:09.067] [ INFO] [ProgressReporter] - Progress: 32%
[2022-02-11 11:33:14.079] [ INFO] [ProgressReporter] - Progress: 38%
[2022-02-11 11:33:19.091] [ INFO] [ProgressReporter] - Progress: 40%
[2022-02-11 11:33:24.098] [ INFO] [ProgressReporter] - Progress: 43%
[2022-02-11 11:33:29.112] [ INFO] [ProgressReporter] - Progress: 46%
[2022-02-11 11:33:34.122] [ INFO] [ProgressReporter] - Progress: 49%
```

```
[2022-02-11 11:33:39.133] [ INFO] [ProgressReporter] - Progress: 52%
[2022-02-11 11:33:44.135] [ INFO] [ProgressReporter] - Progress: 55%
[2022-02-11 11:33:49.138] [ INFO] [ProgressReporter] - Progress: 58%
[2022-02-11 11:33:54.144] [ INFO] [ProgressReporter] - Progress: 61%
[2022-02-11 11:33:59.154] [ INFO] [ProgressReporter] - Progress: 64%
[2022-02-11 11:34:04.168] [ INFO] [ProgressReporter] - Progress: 67%
[2022-02-11 11:34:09.169] [ INFO] [ProgressReporter] - Progress: 70%
[2022-02-11 11:25:01.556] [ INFO] [ 192.168.1.19] - Package upload finished.
[2022-02-11 11:25:01.611] [ INFO] [ 192.168.1.19] - Starting internal update process. Device
is about to reboot.
[2022-02-11 11:25:01.645] [ INFO] [ 192.168.1.19] - Package file has been uploaded
successfully.

The device will now update itself, which may take tens of minutes.

LDU2 is now disconnecting from the device. Please wait until the device finishes the update.
[2022-02-11 11:25:01.646] [ INFO] [ 192.168.1.19] - Done

All 1 update(s) finished successfully.
```

The lines containing "ProgressReporter" can be enabled optionally. If it is enabled, the current state is displayed every 5 seconds.

**ATTENTION!** As the example shows the firmware update progress is not finished at the "Done" line, but the firmware package is uploaded into the device. The switcher will run the update progress internally.

### 8.6.6. Package Options

Shows package-specific update options.

#### Command

```
LightwareDeviceUpdaterV2_CLI.cmd packageOptions [options]
```

#### Options

Option	Description	Required?
-p or --package	The path of the firmware package file	yes

#### Example

```
c:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd
packageOptions --package f:\!!!LIGHTWARE\firmware\taurus_v1.3.3b3.lfp2

Login options:
--user : HTTP(s) basic authentication user (Default: empty string)
--pw : HTTP(s) basic authentication password (Default: empty string)
```

A package option example can be seen in the following section.

### 8.6.7. Complex Example

The following options applied:

- Firmware is updated
- Authentication enabled

```
C:\Program Files (x86)\Lightware\Lightware Device Updater V2>LightwareDeviceUpdaterV2_CLI.cmd
update --ip 192.168.1.19 --package C:\Firmwares\taurus_v1.3.3b3.lfp2 --user admin --pw 12345
--reportProgress

C:\Program Files (x86)\Lightware\Lightware Device Updater V2>lib\jre\bin\java.exe -jar lib\
ldu2.jar update --ip 192.168.1.19 --package C:\Firmwares\taurus_v1.3.3b3.lfp2 --user admin --pw
12345 --reportProgress
[2022-02-11 11:32:40.831] [ INFO] [          main] - Device IPs: [192.168.1.19]
[2022-02-11 11:32:46.096] [ INFO] [          main] - All selected devices are available over
the network.
[2022-02-11 11:32:49.035] [ INFO] [          main] - All the selected devices are compatible
with the specified package.
[2022-02-11 11:32:51.994] [ INFO] [ 192.168.1.19] - Taurus UCX update process started
[2022-02-11 11:32:52.087] [ INFO] [ 192.168.1.19] - Update API version: 1.0
[2022-02-11 11:32:52.138] [ INFO] [ 192.168.1.19] - Update parameters: deviceIp:
192.168.1.19, factoryDefault: false
[2022-02-11 11:32:52.189] [ INFO] [ 192.168.1.19] - Update protocol: http://
[2022-02-11 11:32:52.189] [ INFO] [ 192.168.1.19] - Authentication type: BASIC
[2022-02-11 11:32:52.359] [ INFO] [ 192.168.1.19] - Device info: Product name: MMX2-4x3-H20,
Device label: LW MMX2-4x3-H20_00007316, Serial number: 00007316, Mac address: a8:d2:36:F0:73:16,
Ip address: 192.168.1.19, Host name: , Package version: v1.3.3b3, Part number: 91310078, Hw
version: V10_KAK1
[2022-02-11 11:32:52.374] [ INFO] [ 192.168.1.19] - Uploading firmware package.
[2022-02-11 11:32:54.050] [ INFO] [ProgressReporter] - Progress: 13%
[2022-02-11 11:32:59.056] [ INFO] [ProgressReporter] - Progress: 19%
[2022-02-11 11:33:04.060] [ INFO] [ProgressReporter] - Progress: 25%
[2022-02-11 11:33:09.067] [ INFO] [ProgressReporter] - Progress: 32%
[2022-02-11 11:33:14.079] [ INFO] [ProgressReporter] - Progress: 38%
[2022-02-11 11:33:19.091] [ INFO] [ProgressReporter] - Progress: 40%
[2022-02-11 11:33:24.098] [ INFO] [ProgressReporter] - Progress: 43%
[2022-02-11 11:33:29.112] [ INFO] [ProgressReporter] - Progress: 46%
[2022-02-11 11:33:34.122] [ INFO] [ProgressReporter] - Progress: 49%
[2022-02-11 11:33:39.133] [ INFO] [ProgressReporter] - Progress: 52%
[2022-02-11 11:33:44.135] [ INFO] [ProgressReporter] - Progress: 55%
[2022-02-11 11:33:49.138] [ INFO] [ProgressReporter] - Progress: 58%
[2022-02-11 11:33:54.144] [ INFO] [ProgressReporter] - Progress: 61%
[2022-02-11 11:33:59.154] [ INFO] [ProgressReporter] - Progress: 64%
[2022-02-11 11:34:04.168] [ INFO] [ProgressReporter] - Progress: 67%
[2022-02-11 11:34:09.169] [ INFO] [ProgressReporter] - Progress: 70%
[2022-02-11 11:34:52.599] [ INFO] [ 192.168.1.19] - Package upload finished.
[2022-02-11 11:34:52.683] [ INFO] [ 192.168.1.19] - Starting internal update process. Device
is about to reboot.
[2022-02-11 11:34:52.710] [ INFO] [ 192.168.1.19] - Package file has been uploaded
successfully.

The device will now update itself, which may take tens of minutes.

LDU2 is now disconnecting from the device. Please wait until the device finishes the update.
[2022-02-11 11:34:52.712] [ INFO] [ 192.168.1.19] - Done

All 1 update(s) finished successfully.
```

### 8.6.8. Exit Codes

There is a return value in all cases when a command run is finished. Currently, three codes are defined:

Code	Displayed text	Description
0	N/A	The update performed successfully
1	Update error (ErrorCode:1)	The error happened during the update
2	CLI error (ErrorCode:2)	The error happened before starting the update

The error line contains further information about the error.

#### Querying the Exit Code under Windows®

```
c:\Program Files (x86)\Lightware\Lightware Device Updater V2\echo
%errorlevel%
0
```

#### Querying the Exit Code under Linux

```
echo $?
0
```

If this value is queried after the update and it is 0, the update performed successfully.

## 8.7. Updating via REST API

The **Update REST API (REpresentational State Transfer Application Public Interface)** is developed to have a standardized update interface between the Lightware device and a third-party software tool (e.g. external controller). The update means – generally – to install a new Lightware Firmware Package (LFP2) to the Lightware device. The Update REST API is part of the entire **Lightware REST API** software architecture.

The Update REST API is available over **HTTPS** and with **basic authentication** (with setting a password for the user **admin**).

For more information on updating with REST API, see the [Updating the Device via REST API](#) section.

## 8.8. If the Update is not successful

- Restart the process and try the update again.
- If the device cannot be switched to bootload (firmware update) mode, you can do that manually as written in the User's manual of the device. Please note that backup and restore cannot be performed in this case.
- If the backup cannot be created for some reason, you will get a message whether to continue the process without backup or stop the update. A root cause can be that the desired device is already in bootload (firmware update) mode, thus the normal operation mode is suspended and backup cannot be made.

If an update is not successful, the **Export log** button becomes red. If you press the button, you can download the log file as a ZIP package, which can be sent to Lightware Support if needed. The log files contain useful information about the circumstances to find the root cause. `#bootload`





# 9

## Troubleshooting

Usually, if the system seems not to transport the signal as expected, the best strategy for troubleshooting is to check signal integrity through the whole signal chain starting from source side and moving forward to receiver end.














First, check the front panel LEDs and take the necessary steps according to their states. For more information about front panel LEDs of the switcher, see the [Front View](#) section.

### Pictogram Legend

-  Section to connections/cabling.
-  Section to front panel operation.
-  Section to LDC software.
-  Section to LW3 protocol commands.


- ▶ [USE CASES](#)
- ▶ [HOW TO SPEED UP THE TROUBLESHOOTING PROCESS?](#)

### 9.1. Use Cases

Symptom	Root cause	Action	Refer to	
<b>Video layer</b>				
<b>No picture on the video output</b>	Device(s) not powered properly	Check the switcher and the other devices if they are properly powered; try to unplug and reconnect them.		3.3
	Cable connection problem	Cables must fit very well, check all the connectors.		3.3
	No incoming signal	No video signal is present on the HDMI input ports. Check the source device and the HDMI cables.		3.3
	Not the proper video port is the active one	Check the video crosspoint settings.		2.3.1
				5.7
				7.6.1
	Not the proper interface is the active one	If the source/display has more connectors, check if the proper interface is selected.		
	Output port is muted	Check the mute state of output ports.		5.7.1
Display is not able to receive the video format	Check the emulated EDID and select another (e.g. emulate the display's EDID on the input port).		5.10.1	
			7.9.4	
HDCP is disabled	Enable HDCP on the input port(s) of the switcher.		5.8	
			7.6.12	
<b>No picture on the video output + signal error rate is high, HDMI2.0 scrambling is disabled, clock rate is set 1:10</b>	The source sends 4K signals, but the emulated EDID does not support this resolution.		5.10.1	
			7.9.4	

### 9.2. How to Speed Up the Troubleshooting Process?

Lightware's technical support team is always working hard to provide the fastest support possible. Our team's response time is one of the best in the industry, and in the toughest of cases we can directly consult with the hardware or software engineer who designed the product to get the information from the most reliable source.

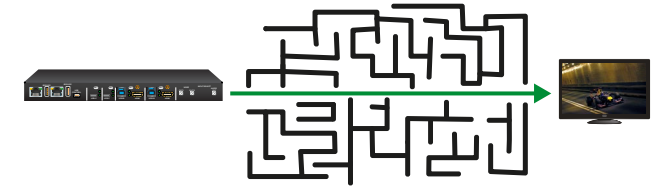

However, the troubleshooting process can be even faster... with your help.

There are certain pieces of information that push us in the right direction to find the root cause of the problem. If we receive most of this information in the first e-mail, or it is gathered at the time when you call us, then there is a pretty high chance that we will be able to respond with the final solution right away.

**This information is the following:**

- Schematic (a pdf version is preferred, but a hand drawing is sufficient).
- Serial number(s) of the device(s) (it is either printed somewhere on the box or you can query it in the Device Controller software or on the built-in website).
- Firmware versions of the devices (please note that there may be multiple CPUs or controllers in the device and we need to know all of their firmware versions, a screenshot is the best option).
- Cable lengths and types (in our experience, it's usually the cable).
- Patch panels, gender changers or anything else in the signal path that can affect the transmission.
- Signal type (resolution, refresh rate, color space, deep color).
- Emulated EDID(s) (please save them as a file and send it to us).
- Actions to take in order to re-create the problem (if we cannot reproduce the problem, it is hard for us to find the cause).
- Photo or video about the problem ('image noise' can mean many different things, it's better if we see it too).
- Error logs from the Device Controller software.
- In the case of an Event Manager issue, the event file and/or backup file from the Device Controller software.

The more of the information above you can give us, the better. Please send this information to the Lightware Support Team ([support@lightware.com](mailto:support@lightware.com)) to speed up the troubleshooting process.



# 10

## Technologies

The following sections contain descriptions and useful technical information on how the devices work in the background. The content is based on experiences and cases we met in the practice. These sections help understand features and technical standards like the following:


- ▶ [EDID MANAGEMENT](#)
- ▶ [HDCP MANAGEMENT](#)
- ▶ [PIXEL ACCURATE RECLOCKING](#)

## 10.1. EDID Management

### 10.1.1. Understanding the EDID

The Extended Display Identification Data (EDID) is the passport of display devices (monitors, TV sets, projectors). It contains information about the capabilities of the display, such as supported resolutions, refresh rates (these are called Detailed Timings), the type and manufacturer of the display device, etc.

After connecting a source to a display (DVI, HDMI, DP), the source reads out the EDID to determine the resolution and refresh rate of the image to be transmitted.

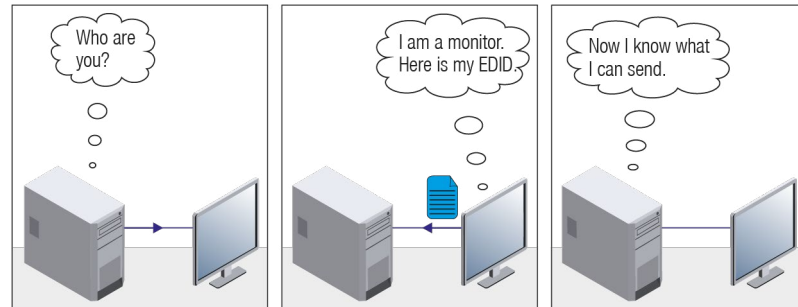

**EDID Communication**

Most DVI computer displays have a 128-byte-long EDID structure. However, Digital Televisions and HDMI capable displays may have another 128 bytes, which is called E-EDID and is defined by CEA (Consumer Electronics Association). This extension contains information about additional Detailed Timings, audio capabilities, speaker allocation and HDMI capabilities. It is important to know that all HDMI capable devices must have CEA extension, but not all devices with CEA extension are HDMI capable.

#### Common Problems Related to EDID

- Problem:** “My system consists of the following: a computer, a Lightware device, a WUXGA (1920x1200) LCD monitor, and an SXGA (1280x1024) projector. I would like to see the same image on the monitor and the projector. What EDID should I choose on the Lightware device?”
- Solution:** If you want to see the image on both displays, you need to select the resolution of the smaller display (in this case SXGA), otherwise the smaller display may not show the higher resolution image.
- Problem:** “I have changed to a different EDID on an input port of the Lightware device to have a different resolution, but nothing happens.”
- Solution:** Some graphics cards and video sources read out the EDID only after power-up and later they do not sense that the EDID has been changed. You need to restart your source to make it read out the EDID again.

### 10.1.2. Advanced EDID Management

Each DVI sink (e.g. monitors, projectors, plasma displays, etc...) must support the EDID data structure. Source BIOS and operating systems are likely to query the sink using DDC2B protocol to determine what pixel formats and interface are supported. DVI standard uses EDID data structure to identify the monitor type and capabilities. Most DVI sources (VGA cards, set top boxes, etc.) will output DVI signal after accepting the connected sink's EDID information. In the case of EDID readout failure or missing EDID, the source will not output DVI video signal.

Lightware devices provide the Advanced EDID Management function that helps system integration. The built-in EDID Router can store and emulate factory pre-programmed- and User programmable EDIDs. The EDID of the attached monitors or projectors for each output are stored in a non-volatile memory. This way the EDID of a monitor is available when the monitor is unplugged or switched off.

Any EDID can be emulated on any input. An emulated EDID can be copied from the EDID router's memory (static EDID emulation), or from the last attached monitor's memory (dynamic EDID emulation). For example, the Lightware device can be set up to emulate a sink device that is connected to one of the outputs. In this case, the EDID automatically changes if the monitor is replaced with another display device (as long as it has a valid EDID).

The EDID is independently programmable for all inputs without affecting each other. All inputs have their own EDID circuit.

**INFO:** The user is not required to disconnect the video cable to change an EDID as opposed to other manufacturer's products. The EDID can be changed even if a source is connected to the input and powered ON.

**INFO:** When the EDID has been changed, the router toggles the HOTPLUG signal for 2 seconds. Some sources do not sense this signal. In such cases, the source device must be restarted or powered OFF and ON again.

## 10.2. HDCP Management

Lightware Visual Engineering is a legal HDCP adopter. Several functions have been developed that help solve HDCP related problems. Complex AV systems often have both HDCP and non-HDCP components. The switcher allows transmitting HDCP encrypted and unencrypted signals. The devices will be still HDCP compliant, as they will never output an encrypted signal to a non-HDCP compliant display device. If an encrypted signal is switched to a non-compliant output, a red screen alert or muted screen will appear.

### 10.2.1. Protected and Unprotected Content

Many video sources send HDCP protected signal if they detect that the sink is HDCP capable – even if the content is not copyrighted. This can cause trouble if an HDCP capable device is connected between the source and the display. In this case, the content cannot be viewed on non-HDCP capable displays and interfaces like event controllers. Rental and staging technicians often complain about certain laptops that always send HDCP encrypted signals if the receiver device (display, matrix router, etc.) reports HDCP compliancy. Even though HDCP encryption is not required all the time (e.g. computer desktop image), certain laptops still do that.

To avoid unnecessary HDCP encryption, Lightware introduced the HDCP enabling/disabling function: the HDCP capability can be disabled in the Lightware device. If HDCP is disabled, the connected source will detect that the sink is not HDCP capable, and turn off authentication.

### 10.2.2. Disable Unnecessary Encryption

#### HDCP Compliant Sink

All the devices are HDCP-compliant, no manual setting is required, both protected and unprotected content is transmitted and displayed on the sink.



#### Not HDCP-compliant Sink 1.

Not-HDCP compliant sink is connected to the switcher. Some sources (e.g. computers) always send HDCP encrypted signals if the receiver device reports HDCP compliancy, however, HDCP encryption is not required all the time (e.g. computer desktop image). If HDCP is enabled in the switcher, the image will not be displayed on the sink.



Setting the HDCP parameter to Auto on the output port and disable HDCP on the input port, the transmitted signal will not be encrypted if the content is not protected. Thus, non-HDCP compliant sinks will display non-encrypted signal.

#### Not HDCP-compliant Sink 2.

The layout is the same as in the previous case: non-HDCP compliant display device is connected to the switcher but the source would send protected content with encryption. If HDCP is enabled on the input port of the switcher, the source will send encrypted signal.



The sink is not HDCP compliant, thus it will not display the video signal. If HDCP is disabled on the input port of the switcher, the source will not send the video signal. The solution is to replace the display device with an HDCP-capable one.

### 10.2.3. HDCP v2.2

HDCP v2.2 is the latest evolution of copy protection. It is designed to create a secure connection between a source and a display. The 2.x version of HDCP is not a continuation of HDCPv1, and is rather a completely different link protection. One of the main differences is the number of the allowed devices within a closed A/V system: HDCP v2.2 allows 32 devices (HDCP v1.4 allows 128 devices). A further limit is that up to four level is allowed, which means the protected signal can be transmitted over at most four repeater/matrix/switcher device. HDCP content protection is activated only if an active video stream is transmitted from the source to the display. The encryption is not activated without a video signal.

HDCP v2.2 standard allows the application of a previous version of HDCP (e.g. HDCP v1.4) between the source and the display if the source device allows it. According to the standard, if the image content is protected with HDCP, the highest supported content protection level needs to be applied. However, if the highest level of protection is not justified by the source content, the level may be decreased to avoid compatibility problems; this case is determined by the source.

#### HDCP v2.2 Source and HDCP v1.4 Sink

In this case the signal of an HDCP v2.2 compliant source is switched to an HDCP v1.4 compliant sink device. The signal is encrypted with HDCP v2.2 on the input and encrypted with HDCP v1.4 on the output of the Lightware device. A lower level of encryption may be applied only if the source device/content allows it - according to the HDCP standard. In this case the HDCP setting on the input port has to be set to HDCP 1.4 and Depends on input on the output port.



#### HDCP v1.4 Source and HDCP v2.2 Sink

The example below is the reversal of the previous case. An HDCP v1.4 compliant source sends a signal with HDCP v1.4 encryption. The signal is switched to an HDCP v2.2 compliant sink device. In this case the outgoing signal needs to be encrypted with the highest supported encryption level towards the sink, as the Lightware device and the sink are both HDCP v2.2 compliant. The HDCP v2.2 standard does not allow keeping the original HDCP v1.4 encryption level on the output.



#### What Kind of Signal Will be on the Output of the Lightware Device?

See below table that summarizes the possible cases:

Incoming Signal	HDCP v1.4 Compatible Sink on the Output	HDCP v2.2. Compatible Sink on the Output
HDCP v1.4	HDCP v1.4	HDCP v2.2
HDCP v2.2 (convertable)*	HDCP v1.4	HDCP v2.2
HDCP v2.2 (not convertable)*	Red screen	HDCP v2.2

\* Stream type 0: the video stream allows the conversion of the signal to apply a lower level of encryption.

\*\* Stream type 1: the video stream does not allow the conversion of the signal.


### 10.3. Pixel Accurate Reclocking

Signal reclocking is an essential procedure in digital signal transmission. After passing the reclocking circuit, the signal becomes stable, jitter-free, and can be transmitted over more equipment like processors, or event controllers. Without reclocking, sparkles, noise, and jaggies appear on the image.

Lightware's sophisticated Pixel Accurate Reclocking technology fixes more problems than general TMDS reclocking. It removes not only intra-pair skew, but inter-pair skew as well. The Pixel Accurate Reclocking circuit eliminates the following errors:


#### Intra-pair skew

Skew between the + and - wires within a differential wire pair (e.g. Data2- and Data2+). It's caused by different wire lengths or slightly different wire construction (impedance mismatch) in the DVI cable. It results in jitter.

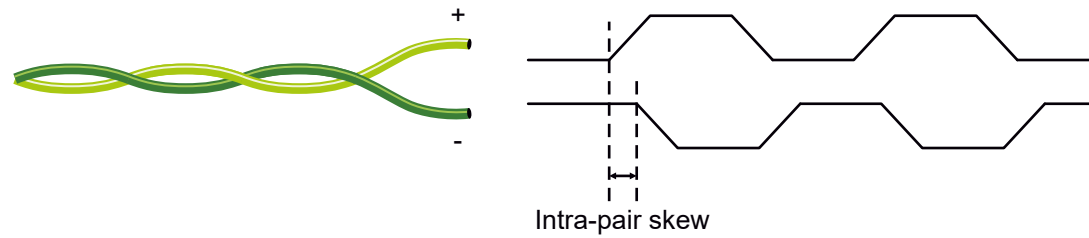


#### Inter-pair skew

Skew between two differential wire pairs in a cable. It is caused by different wire pair lengths or different number of twists in the DVI cable. Too much inter-pair skew results in color shift in the picture or sync loss.

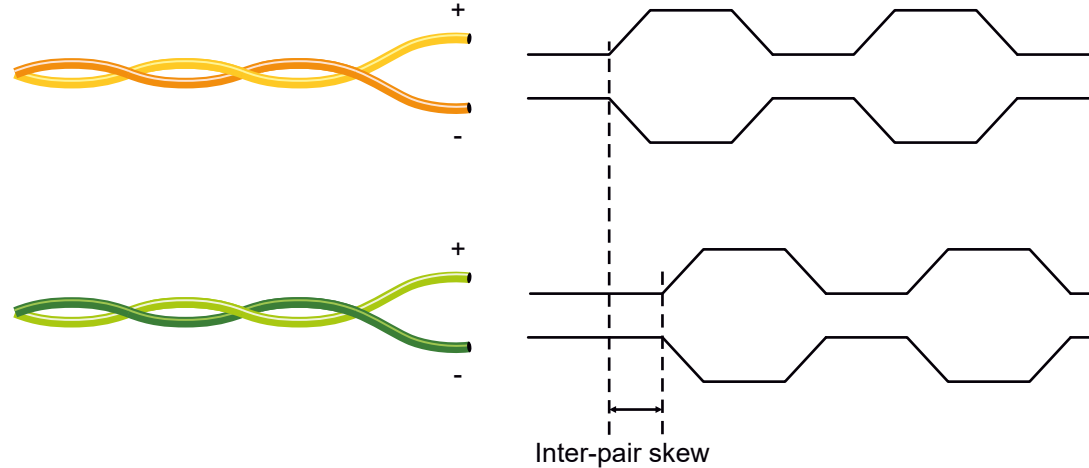


#### Jitter

Signal instability in the time domain. The time difference between two signal transitions should be a fixed value, but noise and other effects cause variations.

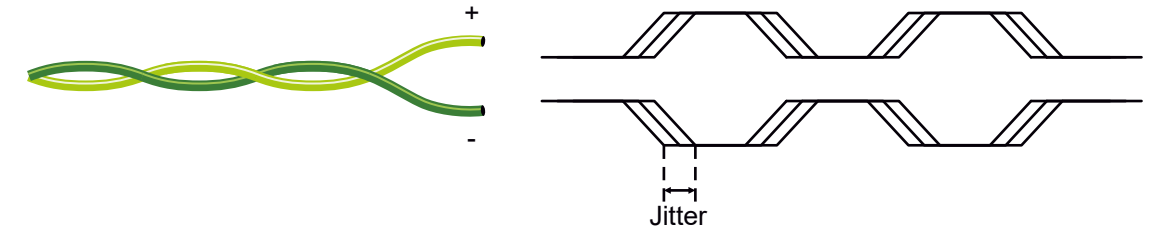

#### Noise

Electromagnetic interference between other electronic devices such as mobile phones, motors, etc. and the DVI cable are coupled onto the signal. Too much noise results in increased jitter.

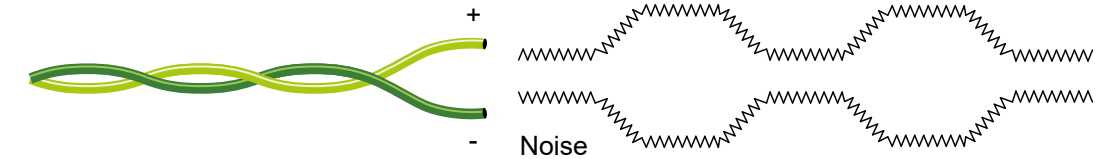

**INFO:** The colors of the wire pairs in the pictures are for illustration and do not represent the color of the actual wires inside the cable.

# 11

## Appendix

Tables, drawings, guides, technical details and hashtag keyword list as follows:

- ▶ [SPECIFICATIONS](#)
- ▶ [PORT NUMBERING](#)
- ▶ [APPLIED PORTS \(NETWORK SETTINGS\)](#)
- ▶ [FACTORY EDID LIST](#)
- ▶ [CABLE WIRING GUIDE](#)
- ▶ [MECHANICAL DRAWINGS](#)
- ▶ [CONTENT OF THE BACKUP FILE](#)
- ▶ [FACTORY DEFAULT SETTINGS](#)
- ▶ [FIRMWARE RELEASE NOTES](#)
- ▶ [HASHTAG KEYWORD LIST](#)
- ▶ [FURTHER INFORMATION](#)

## 11.1. Specifications

### General

Compliance	CE, UKCA
Electrical safety	EN 62368-1:2020
EMC (emission)	EN 55032:2015+A1:2020
EMC (immunity)	EN 55035:2017+A11:2020
RoHS	EN 63000:2018
Warranty	3 years
Operating temperature	0° to +50°C (+32° to +122°F)
Operating humidity	10% to 90%, non-condensing
Cooling	Passive

### Power

Power supply option	Power adaptor
Supported power source	100-240 V AC; 50/60 Hz
Supplied power	5V DC, 3A
AC power plug	Interchangeable (EU, UK, JP/US, AUS/NZ)
DC power plug	2-pole Phoenix® plug

### MMX2-4x3-H20

Power consumption (max)	12.8 W
Heat dissipation (max)	44 BTU/h

### MMX2-4x1-H20

Power consumption (max)	7.5 W
Heat dissipation (max)	26 BTU/h

### Enclosure

#### MMX2-4x1-H20

Enclosure material	1 mm steel
Dimensions in mm	221 W x 68.3 D x 26 H
Dimensions in inch	8.7 W x 2.7 D x 1.02 H
Weight	455 g

#### MMX2-4x3-H20

Enclosure material	1 mm steel
Dimensions in mm	221 W x 68.3 D x 26 H
Dimensions in inch	8.7 W x 2.7 D x 1.02 H
Weight	465 g

### Video Inputs

#### HDMI input

Connector type	19-pole HDMI Type A receptacle (with screw locking option)
AV standard	DVI 1.0, HDMI 1.4, HDMI 2.0
Maximum data rate	18Gbps
Maximum pixel clock	597MHz
HDCP compliance	HDCP 1.4, HDCP 2.2
Color space	RGB, YCbCr
Video delay	0 frame
Max. video resolution	4096x2160@60Hz RGB 4:4:4 (up to 600MHz pixel clock); 1920x1080@120 Hz, 36 bit
Max. input HDMI cable length (with premium certified cable) at 3840x2160@60Hz 4:4:4	5m
Reclocking	Pixel Accurate Reclocking
3D support	yes
Audio mode	Simultaneous pass-through and de-embedding to the Audio layer
Supported audio formats for pass-through	All HDMI2.0 audio formats
Supported audio formats for de-embedding	Uncompressed; LPCM (up to 8 channels, 192 kHz, 24 bits per sample)
Compressed	Dolby Digital, DTS; Compressed HBR; Dolby TrueHD, DTS-HD

### Video Outputs

#### HDMI output

Connector type	19-pole HDMI Type A receptacle
AV standard	DVI 1.0, HDMI 1.4, HDMI 2.0
HDCP compliance	HDCP 1.4, HDCP 2.2
Color space	RGB, YCbCr

Supported resolutions at 8 bits/color *	up to 4096x2048@30Hz (4:4:4) or 4096x2048@60Hz (4:2:0); up to 3840x2160@30Hz (4:4:4) or 3840x2160@60Hz (4:2:0); 1920x1080@60Hz (4:4:4) up to 12 bits/color
Audio formats	8 channel PCM, Dolby TrueHD; DTS-HD Master Audio 7.1

\* All standard VESA and CEA resolutions up to 300MHz (HDMI1.4) and other custom resolutions up to 300Mhz are supported.

### Audio Ports

#### Analog audio output

Connector type	5-pole Phoenix connector
Audio formats	2-ch PCM
Sampling frequency	48 kHz
Volume	-95.62 dB - 0 dB
Balance	-100 - +100 (0 = center)

### Control Ports

#### Ethernet port

Connector type	RJ45 female connector
Ethernet data rate	10/100Base-T, full duplex with autodetect
Power over Ethernet (PoE)	Not supported

#### GPIO port

Connector type	8-pole Phoenix
Function (pin 1-6)	Configurable (input/output)
Function (pin 7)	5V output
Function (pin 8)	Ground

#### OCS port

Connector type	3-pole Reversed Gender Plug Phoenix connector
Number of configurable pins	1
Port direction	Input

#### USB port (reserved for future developments)

Connector type	A-type and B-type receptacles
----------------	-------------------------------

### RS-232 port

Connector type	3-pole Phoenix connector
Baud rates	between 9600 and 115200 baud
Data bits	8
Parity	None / Odd / Even
Stop bits	1 / 2
Output voltage: Low level	3 - 15V
Output voltage: High level	-15V - 3V

INFO: Specifications are subject to change without notice.



## 11.2. Port Numbering

### Audio/Video Ports

	Port name	Video port nr. (LW3)	Audio port nr. (LW3)
Inputs	HDMI in 1	I1	I1
	HDMI in 2	I2	I2
	HDMI in 3	I3	I3
	HDMI in 4	I4	I4
Outputs	HDMI out 1	O1	O1
	HDMI out 2	O2	O2
	HDMI out 3	O3	O3
	Analog audio out	-	O4

### Ethernet Ports

Port name	Port nr. (LW3)
Secure Eth 1	P1
Utility Eth 2	P2
Utility Eth 3	P3

### GPIO

Port name	Port nr. (LW3)
GPIO1	P1
GPIO2	P2
GPIO3	P3
GPIO4	P4
GPIO5	P5
GPIO6	P6

### OCS

Port name	Port nr. (LW3)
OCS1	P1

### RS-232 Ports

Port name	Port nr. (LW3)	Serial over IP port nr.
RS-232 1	P1	8001
RS-232 2	P2	8002

## 11.3. Applied Ports (Network Settings)

The following ports are necessary to pass via a network switch/ firewall for a proper working between the device and the softwares:

Purpose/function	Protocol	Port nr.
Firmware update TFTP	UDP	69
	UDP	49990
	UDP	49995
Device Discovery	UDP	224.0.0.251:5353
Remote IP	UDP	230.76.87.82:37421
HTTP - file transfer and update API	TCP	80
HTTPS - file transfer and update API	TCP	443
LW3 control API	TCP	6107

## 11.4. Factory EDID List

Mem	Resolution				Type	EDID features
F1	640 x	480p	@ 60.00	Hz	D	DVI
F2	848 x	480p	@ 60.00	Hz	D	DVI
F3	800 x	600p	@ 60.32	Hz	D	DVI
F4	1024 x	768p	@ 60.00	Hz	D	DVI
F5	1280 x	768p	@ 50.00	Hz	D	DVI
F6	1280 x	768p	@ 59.94	Hz	D	DVI
F7	1280 x	768p	@ 75.00	Hz	D	DVI
F8	1360 x	768p	@ 60.02	Hz	D	DVI
F9	1280 x	1024p	@ 50.00	Hz	D	DVI
F10	1280 x	1024p	@ 60.02	Hz	D	DVI
F11	1280 x	1024p	@ 75.02	Hz	D	DVI
F12	1400 x	1050p	@ 50.00	Hz	D	DVI
F13	1400 x	1050p	@ 60.00	Hz	D	DVI
F14	1400 x	1050p	@ 75.00	Hz	D	DVI
F15	1680 x	1050p	@ 60.00	Hz	D	DVI
F16	1920 x	1080p	@ 50.00	Hz	D	DVI
F17	1920 x	1080p	@ 60.00	Hz	D	DVI
F18	2048 x	1080p	@ 50.00	Hz	D	DVI
F19	2048 x	1080p	@ 60.00	Hz	D	DVI
F20	1600 x	1200p	@ 50.00	Hz	D	DVI
F21	1600 x	1200p	@ 60.00	Hz	D	DVI
F22	1920 x	1200p	@ 50.00	Hz	D	DVI
F23	1920 x	1200p	@ 59.56	Hz	D	DVI
F24	2048 x	1200p	@ 59.96	Hz	D	DVI
F29	1920 x	1080p	@ 60.00	Hz	U	DVI
F30	1440 x	480i	@ 60.05	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F31	1440 x	576i	@ 50.08	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F32	640 x	480p	@ 59.95	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F33	720 x	480p	@ 59.94	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F34	720 x	576p	@ 50.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD

Mem	Resolution				Type	EDID features
F35	1280 x	720p	@ 50.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F36	1280 x	720p	@ 60.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F37	1920 x	1080i	@ 50.04	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F38	1920 x	1080i	@ 50.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F39	1920 x	1080i	@ 60.05	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F40	1920 x	1080i	@ 60.05	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F41	1920 x	1080p	@ 24.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F42	1920 x	1080p	@ 25.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F43	1920 x	1080p	@ 30.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F44	1920 x	1080p	@ 50.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F45	1920 x	1080p	@ 59.94	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F46	1920 x	1080p	@ 60.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F47	1920 x	1080p	@ 60.00	Hz	U	HDMI; YUV444; YUV422; 2CH_AUD
F48	1920 x	1080p	@ 60.00	Hz	U	HDMI; YUV444; YUV422; 8CH_AUD
F49	1920 x	1080p	@ 60.00	Hz	U	HDMI; YUV444; YUV422; DC30; DC36; YUVDC; 8CH_AUD
F98	1280 x	720p	@ 60.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD; 3D
F99	1920 x	1080p	@ 60.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD; 3D
F100	1024 x	768p	@ 60.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F101	1280 x	1024p	@ 50.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F102	1280 x	1024p	@ 60.02	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F103	1280 x	1024p	@ 75.02	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F104	1600 x	1200p	@ 50.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F105	1600 x	1200p	@ 60.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F106	1920 x	1200p	@ 59.56	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F107	2560 x	1440p	@ 59.95	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F108	2560 x	1600p	@ 59.86	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F109	3840 x	2400p	@ 24.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F110	3840 x	2160p	@ 24.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F111	3840 x	2160p	@ 25.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F112	3840 x	2160p	@ 30.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD

Mem	Resolution			Type	EDID features	
F118	3840 x	2160p	@ 30.00	Hz	U	HDMI; YUV444; YUV422; 2CH_AUD
F119	3840 x	2160p	@ 30.00	Hz	U	HDMI; YUV444; YUV422; 8CH_AUD
F120	3840 x	2160p	@ 60.00	Hz	H	HDMI; YUV444; YUV422; YUV420; 2CH_AUD
F121	1440 x	1080p	@ 59.91	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F122	2560 x	2048p	@ 59.98	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F123	1280 x	800p	@ 59.91	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F124	1440 x	900p	@ 59.90	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F125	1366 x	768p	@ 60.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F126	1600 x	900p	@ 59.98	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F127	2048 x	1080p	@ 60.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F128	2560 x	1080p	@ 60.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F129	3440 x	1440p	@ 24.99	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F130	3440 x	1440p	@ 29.99	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F131	4096 x	2160p	@ 25.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F132	4096 x	2160p	@ 30.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F133	4096 x	2160p	@ 60.00	Hz	4	HDMI; YUV444; YUV422; YUV420; 2CH_AUD
F134	3440 x	1440p	@ 23.99	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F135	4096 x	2160p	@ 24.00	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F136	3840 x	2400p	@ 29.99	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F137	3840 x	2160p	@ 60.00	Hz	H	HDMI; HDMI2; YUV444; YUV422; 2CH_AUD
F138	3840 x	2160p	@ 50.00	Hz	H	HDMI; HDMI2; YUV444; YUV422; 2CH_AUD
F139	3840 x	2160p	@ 60.00	Hz	H	HDMI; HDMI2; YUV444; YUV422; YUV420; 2CH_AUD
F140	3840 x	2160p	@ 60.00	Hz	H	HDMI; HDMI2; YUV444; YUV422; YUV420; 8CH_AUD
F141	4096 x	2160p	@ 60.00	Hz	H	HDMI; HDMI2; YUV444; YUV422; 2CH_AUD
F142	4096 x	2160p	@ 50.00	Hz	H	HDMI; HDMI2; YUV444; YUV422; 2CH_AUD
F143	4096 x	2160p	@ 60.00	Hz	H	HDMI; HDMI2; YUV444; YUV422; YUV420; 2CH_AUD
F144	4096 x	2160p	@ 60.00	Hz	H	HDMI; HDMI2; YUV444; YUV422; YUV420; 8CH_AUD
F145	2560 x	2048p	@ 49.97	Hz	H	HDMI; YUV444; YUV422; 2CH_AUD
F146	3840 x	2160p	@ 60.00	Hz	H	HDMI; HDMI2; YUV420; DC30; DC36; YUVDC; YUV420_DC30; YUV420_DC36; 2CH_AUD; HDR
F147	3840 x	2160p	@ 60.00	Hz	H	HDMI; HDMI2; YUV444; YUV422; 2CH_AUD

Mem	Resolution			Type	EDID features	
F148	3840 x	2160p	@ 60.00	Hz	H	HDMI; HDMI2; YUV444; YUV422; 8CH_AUD
F154	3840 x	2160p	@ 60.00	Hz	H	HDMI; HDMI2; YUV444; YUV422; YUV420; DC30; DC36; YUVDC; YUV420_DC30; YUV420_DC36; 2CH_AUD; HDR
F155	3840 x	2160p	@ 60.00	Hz	H	HDMI; HDMI2; YUV444; YUV422; YUV420; DC30; DC36; YUVDC; YUV420_DC30; YUV420_DC36; 8CH_AUD; HDR

#### Legend

**D:** DVI EDID

**H:** HDMI EDID

**U:** Universal EDID, supporting many standard resolutions:

- **F29:** Universal EDID for DVI signals (no audio support).
- **F47:** HDMI EDID supporting PCM audio.
- **F48:** HDMI EDID supporting all type of audio.
- **F49:** HDMI EDID supporting all type of audio and deep color.
- **F89:** Universal EDID for analog signals (no audio support).
- **F118:** HDMI EDID supporting PCM audio and 4K@30 Hz signals.
- **F119:** HDMI EDID supporting all type of audio and 4K@30 Hz signals.


**DiD** (in column EDID features): with Display ID support

Please note that minor changes in the factory EDID list may be applied in further firmware versions.

## 11.5. Cable Wiring Guide

### 11.5.1. Serial Ports

The device is built with a 3-pole Phoenix connector. See the examples below of connecting to a DCE (Data Circuit-terminating Equipment) or a DTE (Data Terminal Equipment) type device:

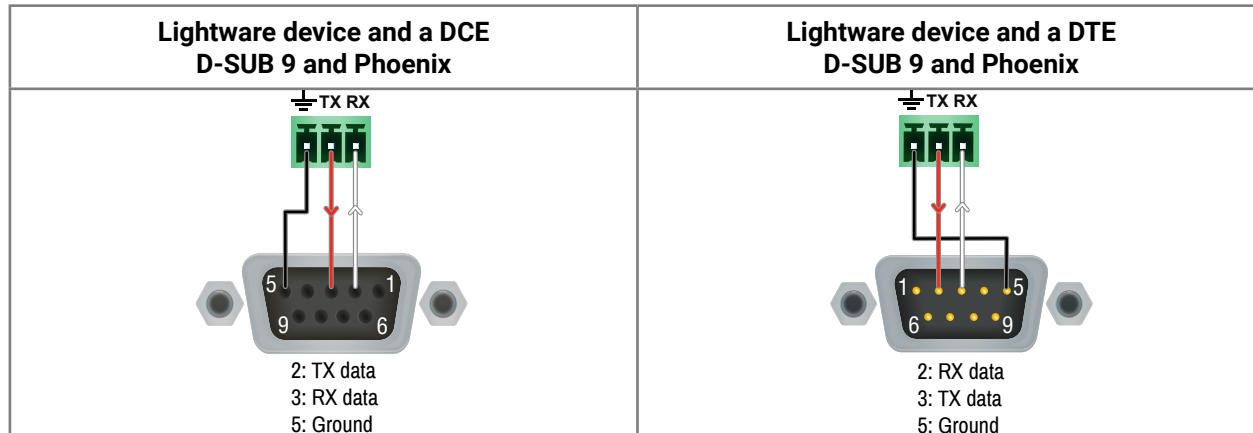

### 11.5.2. Audio Ports

Inputs and outputs of audio devices are symmetric or asymmetric. The main advantage of the symmetric lines is the better protection against the noise, therefore they are widely used in the professional audio industry. Symmetric audio is most often referred to as balanced audio, as opposed to asymmetric, which is referred to as unbalanced audio. Lightware products are usually built with 5-pole Phoenix connectors, so we would like to help users assemble their own audio cables. See the most common cases below.

**ATTENTION!** Symmetric and asymmetric lines can be linked with passive accessories (e.g. special cables), but in this case half of the line level is lost.

**ATTENTION!** There are numerous types of regularly used connector and cable types to connect audio devices. Please always make sure that a connector or cable fits your system before use.


**ATTENTION!** Never join the phase-inverted (negative, cold or -) poles (either right or left) to the ground or to each other on the output side, as this can damage the unit.

**INFO:** Use a galvanic isolation in case of a ground loop.

#### The Pinout of the 5-pole Phoenix Connector




Pin nr.	Signal
1	Left+
2	Left-
3	Ground
4	Right-
5	Right+

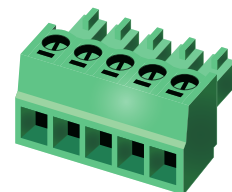


Compatible Plug Type: Phoenix® Combicon series (3.5mm pitch, 5-pole), type: MC 1.5/5-ST-3.5.

### From Balanced Output to Unbalanced Input

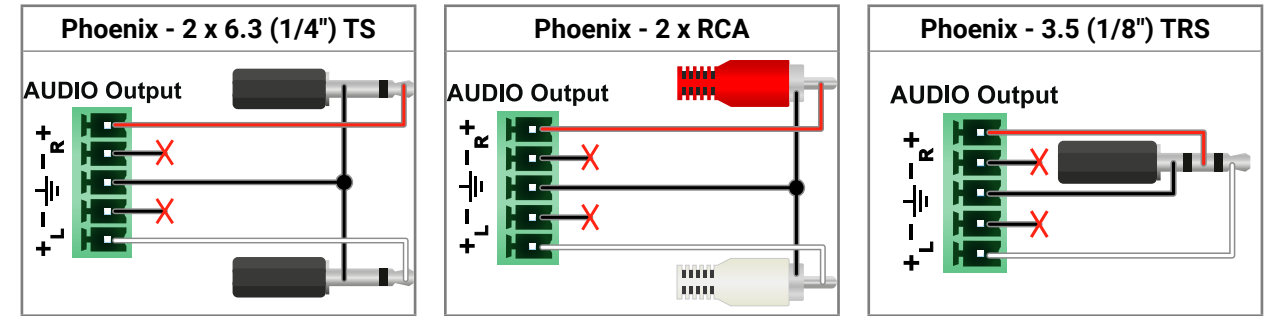


### From Balanced Output to Balanced Input

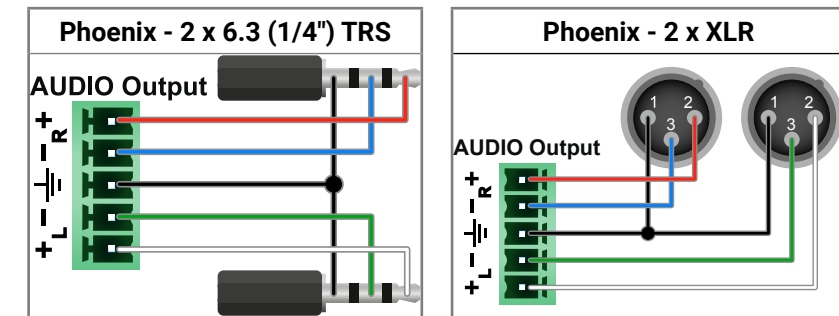

### 11.5.3. OCS Sensor







The switcher is supplied with a 3.81mm 3-pole 90° Reversed Gender Plug Phoenix® connector, which is used for connecting an occupancy sensor. The figure below is an example about how to connect a Leviton OCS10-M0W device. This sensor is a so-called 'active-high' type, thus the setup requires an external 1kR pull-down resistor between the input and the ground pins. If your sensor is 'open drain' type, the grey-colored wire and the resistor is not recommended to install.

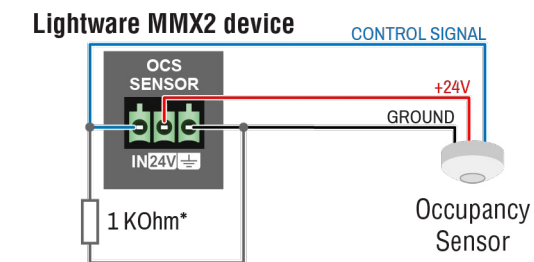

\* The extra wire and the resistor are recommended only for 'active high' type sensors.

### 11.6. Mechanical Drawings

INFO: The MMX2-4x3-H20 model can be seen in the pictures, but the dimensions are the same for both models. Dimensions are in mm.

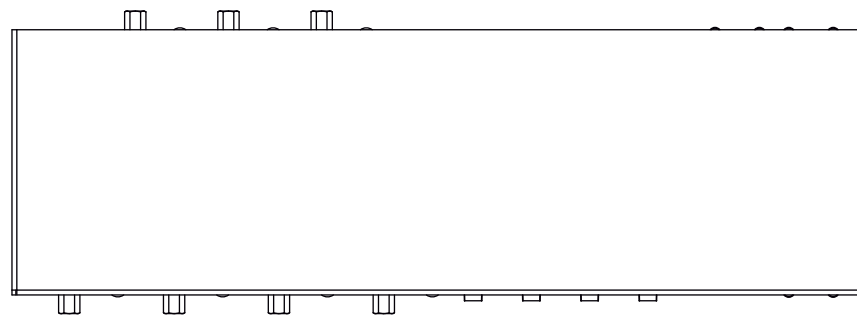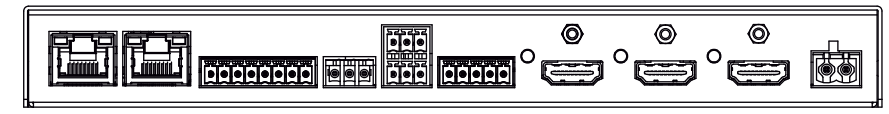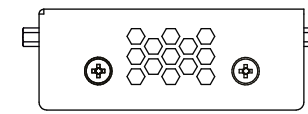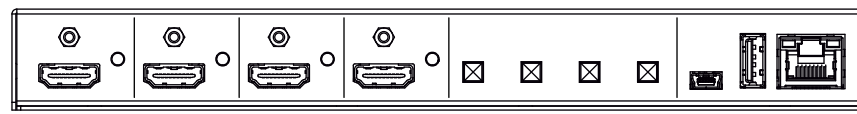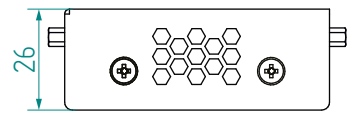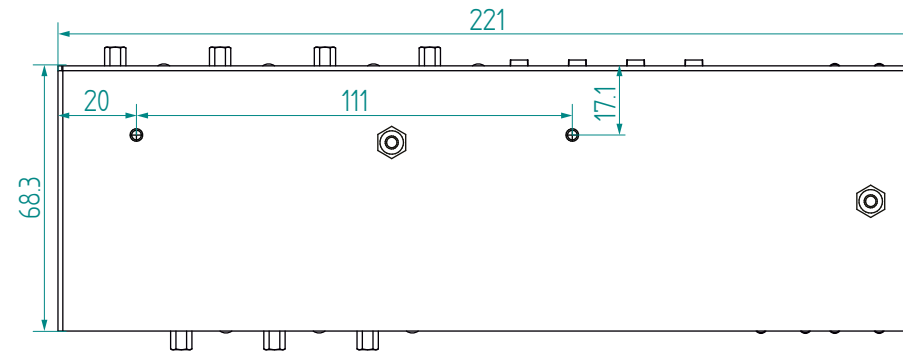

## 11.7. Content of the Backup File

The backup file contains numerous settings and parameters saved from the device. When the file is uploaded to a device, the following will be overwritten:

Audio / Video crosspoint settings
Mute state, Lock state, Crosspoint state
Autoselection (mode, port priority)
HDMI input ports
Video port name, Audio port name, HDCP setting
HDMI output ports
Port name, HDCP mode, HDMI mode, Power +5V mode
Analog audio port
Port name, Volume, Balance
Local serial port
Port name, RS-232 mode, Control protocol, Baud rate, Data bits, Stop bits, Parity
GPIO port
Port name, Direction, Level
OCS port
Sensor type, Port name
Network settings
Port name, Port status. PHY (speed and duplexity) mode
HTTP/HTTPS port status, HTTP/HTTPS Authentication status
LW3 port status, Serial port status
Authentication (password)
Further settings
Control lock status, Device label, Dark mode state, Dark mode delay
User EDID data (U1-U100), Emulated EDIDs by ports
Welcome screen status, Welcome screen parameters
Power supply output power limit

## 11.8. Factory Default Settings

Parameter	MMX2-4x3-H20	MMX2-4x1-H20
Video port settings		
Connected source (O1/O2/O3)	11/12/13	11/-/-
Allowed HDCP Version (11/12/13/14)	2.2/2.2/1.4/1.4	
Hotplug detect mode (HPD) at input ports	auto	auto
Output 5V mode / signal type	on / auto	on / auto
Output HDCP mode	auto	auto
Video autoselect	disabled	
Emulated EDID	Factory #47: Universal HDMI PCM	
Analog audio output port settings		
Volume	0 dB, 100%	
Balance	0 (center)	
Network settings		
Factory default IP address mode	DHCP	
Static IP address	192.168.0.100	
Static network mask	255.255.255.0	
Static gateway address	192.168.0.1	
Hostname	lightware-<serialno>	
LW3 protocol	enabled	
HTTP, HTTPS	enabled	
HTTP, HTTPS authentication	disabled	
Authentication setting (user/password)	admin/<not set>	
RS-232 port settings		
RS-232 port	9600 BAUD, 8, N, 1	
RS-232 serial over IP	enabled	
GPIO port settings		
Output level /direction	low / input	
Occupancy sensor		
Sensor type	active high	
Miscellaneous		
Control lock	disabled	
Dark mode	disabled	
Automatic fan control	enabled	
User EDID memory	empty	

## 11.9. Firmware Release Notes

The list below shows the released firmware packages with important notes.

### v2.11.0b3

Release date: 2024-06-03

#### New feature:

- Two lane DisplayPort alternate mode is now available as well in case the four lane alternate mode setting is not supported.
- New experimental LW3 node is available for testing now: EXPERIMENTAL/MEDIA/USB/Service.Enabled.
- Password history is now maintained on web authentication. The past ten passwords are no longer available to used.
- Critical issues have been fixed at the launch of the LARA configurations.
- LARA 1.2.0b40 integration.
- USB access is available via service port for demonstrating and piloting the StreamDeck device support in LARA.
- FlowControl handling on serial port is now supported.

### v2.9.0b6

Release date: 2024-01-16

#### New feature:

- Complete redesign of the WebLDC's session management. A new logout button has been introduced for logging out from the session. After 120 minutes the session will be closed and the user is going to be logged out automatically. After 15 minutes of inactivity the session will be closed also. 2 minutes prior to the inactivity logout the user has to option to confirm the willingness to keep using the system.
- LARA 1.2 integration.
- Time zones are available option now for timed events. A new optional NTP service has been introduced. A new LW API has been introduced for date/time settings. The device does observe now both the UTC and both the local times.

### v2.7.1b1

Release date: 2023-11-22

#### New feature:

- LARA 1.1.11 version update. For details please check the LARA release notes.

### v2.6.0b1

Release date: 2023-09-21

#### New feature:

- LARA 1.1.10 version upgrade

### v2.5.0b4

Release date: 2023-08-15

#### New feature:

- LARA v1.1.9 has been integrated. For more information please read the LARA release notes.

### v2.4.0b1

Release date: 2023-07-03

#### Bugfix:

- Fixed device freeze during boot time caused by less than ~2sec power outages.

### v2.2.3b4

Release date: 2023-05-09

#### Bugfix:

- Fixed unintended loss of configuration settings caused by non-standard (non-RFC) hostname.
- Fixed uncertainties in Welcome Screen provisioning.

### v2.2.0b4

Release date: 2023-03-30

#### New feature:

- Unique SSL certificate management has been added to Network/Services page.
- Service settings have been separated from network setup.
- The admin password with the allowance of special characters must be at least 10 characters long.
- Stability improvements.
- LARA v1.1.6 has been integrated into Taurus v2.2.0. For more information please read LARA release notes. <https://go.lightware.com/lara-release-note-v2.2>

### v2.1.1b2

Release date: 2023-03-09

#### Bugfix:

- Improved reliability of WelcomeScreen in case of running for more than 24 hours.
- Not allowing to restore from different hardware variant backups.
- Fixed LIVE LED functionality in DARK\_MODE on HC40 hardware variants.
- Stability improvements.

**v2.1.0b2**

Release date: 2023-02-20

**New feature:**

- 802.1X authentication protocol gives the MMX2 access to the protected network after authentication using EAP-MD5 or EAP-TLS.
- MMX2 can preserve device configuration after the firmware upgrade from v2.1.0 and above. Downgrading to Firmware version <v2.1.0 is not supported.
- Sensitive data (eg. passwords, certificates, etc.) are not included in the MMX2 configuration backup. New file format for backup/restore/bulk configuration functionalities.
- Hardening the password change functionality by enforcing to enter the old password.
- LARA v1.1.5 has been integrated into Firmware v2.1.0. Cisco RS232 communication is available and Room Kit Mini is supported. For more information please visit: <https://go.lightware.com/lara-release-note-v2.1>

**v1.6.2b2**

Release date: 2022-12-08

**Bugfix:**

- Client OS no longer detects the disabled ethernet connection on USB-C port as an active network.
- Port Power Role settings are preserved in case of overcurrent or when disconnecting the USB-C cable.

**Known issue:**

- Soft reboot of the Taurus / MMX2 takes longer by 2 minutes than usual. Hard reboot (e.g. a power cycle) is faster than the soft one

**v1.6.1b2**

Release date: 2022-11-10

**New feature:**

- Advanced Ethernet configuration supports separate User/Control LANs and dedicated ports for BYOD devices.
- Basic authentication flow improvement
- Optimized log message flow

**Bugfix:**

- In overcurrent condition notebook charging is disabled only, all other functions are maintained.

**Known issue:**

- Soft reboot of the Taurus / MMX2 takes longer by 2 minutes than usual. Hard reboot (e.g. a power cycle) is faster than the soft one

**v1.6.0b3**

Release date: 2022-10-27

**New feature:**

- Advanced Ethernet configuration supports separate User/Control LANs and dedicated ports for BYOD devices.
- Optimized log message flow

**Bugfix:**

- In overcurrent condition notebook charging is disabled only, all other functions are maintained.

**Known issue:**

- Soft reboot of the Taurus / MMX2 takes longer by 2 minutes than usual. Hard reboot (e.g. a power cycle) is faster than the soft one

**v1.5.1b2**

Release date: 2022-09-15

**Bugfix:**

- LARA v1.1.1. has been integrated into Taurus v1.5.1. For more information please visit: <https://go.lightware.com/lara-release-note-v1.1.1>

**Known issue:**

- Soft reboot of the Taurus / MMX2 takes longer by 2 minutes than usual. Hard reboot (e.g. a power cycle) is faster than the soft one

**v1.5.0b7**

Release date: 2022-08-31

**New feature:**

- UserScripts can not be used from Firmware version 1.5.0, use LARA (Lightware Advanced Room Automation) configurations instead LARA v1.1.0. has been integrated into Taurus v1.5.0 For more information please visit: <https://go.lightware.com/lara-release-note-v1.1.0b28>
- Packages for Taurus UCX and Taurus MMX2 are separated from Firmware version 1.5.0. Please download the specific firmware package for your product.
- Device label will not be overwritten when cloning configuration. Please ignore the warning in LDC / Bulk Management
- Stability improvements have been added

**Known issue:**

- Soft reboot of the Taurus / MMX2 takes longer by 2 minutes than usual. Hard reboot (e.g. a power cycle) is faster than the soft one



cycle) is faster than the soft one.

#### v1.4.4b2

Release date: 2022-08-16

##### **Bugfix:**

- Risk of USB crosspoint disconnect when USB host wakes up from sleep or from power off - Firmware 1.4.4 fixes this issue.

#### v1.4.3b1

Release date: 2022-07-20

##### **Bugfix:**

- Risk of "bootloop" after initial flashing -> fixed

#### v1.4.2b2

Release date: 2022-07-07

##### **Bugfix:**

- UCX-2x1-HC30: The USB-C bridge MAC addresses of all produced units were identical and may caused MAC collisions. Firmware 1.4.2 fixes this issue.

#### v1.4.1b2

Release date: 2022-06-09

##### **Bugfix:**

- Fixed video sign loss in case of switching between Input5 and Input1.
- Improved overcurrent protection for certain non-standrad notebooks. (In previous releases it could cause video sign loss.)
- Improved compatibility between Taurus and VADDIO USB Bridge.

#### v1.4.0b4

Release date: 2022-04-27

##### **New feature:**

- Basic CEC added (at HDMI outputs)
- WebLDC added
- 2x60W charge on PCB >= 2.4

##### **Known issue:**

- "Loss of video after I5" bug (to be fixed in next hotfix release)

#### v1.3.3b3

Release date: 2021-12-08

##### **New feature:**

- Adding support for MMX2 - H20
- No need for factory reset after upgrading from 1.3.x

##### **Bugfix:**

- Video layer freeze issue fixed

## 11.10. Hashtag Keyword List

This user's manual contains keywords with hashtags (#) to help you find the relevant information as quick as possible.

The format of the keywords is the following:

#<keyword>

The usage of the keywords: use the **Search** function (Ctrl+F / Cmd+F) of your PDF reader application, type the # (hashtag) character and the wished keyword.

The *#new* special keyword indicates a new feature/function that has just appeared in the latest firmware or software version.

### Example

*#dhcp*

This keyword is placed at the DHCP (dynamic IP address) setting in the front panel operation, the Lightware Device Controller (LDC) and the LW3 programmer's reference section.

The following list contains all hashtag keywords placed in the document with a short description belonging to them. The list is in **alphabetical order** by the hashtag keywords.

Hashtag Keyword ↓↑	Description
<i>#advancedview</i>	Advanced view / Terminal window
<i>#analogaudio</i>	Analog audio related settings
<i>#authentication</i>	Authentication settings
<i>#autoselect</i>	Autoselect feature settings
<i>#balance</i>	Balance (for analog audio) setting
<i>#buttonlock</i>	Front panel button lock setting
<i>#cablediagnostics</i>	Cable diagnostics tool in LDC
<i>#cec</i>	Consumer Electronics Control related settings
<i>#crosspoint</i>	Crosspoint switch setting
<i>#devicelabel</i>	Device label
<i>#dhcp</i>	Dynamic IP address (DHCP) setting
<i>#diagnostic</i>	Failure diagnostic related tool/information
<i>#edid</i>	EDID related settings
<i>#factory</i>	Factory default settings
<i>#firmwareversion</i>	Firmware version query
<i>#framedetector</i>	Frame detector in LDC
<i>#hdcp</i>	HDCP-encryption related setting
<i>#http</i>	Http-related settings
<i>#https</i>	Https-related settings

Hashtag Keyword ↓↑	Description
<i>#ipaddress</i>	IP address related settings
<i>#label</i>	Device label
<i>#lock</i>	Port lock setting
<i>#lockbutton</i>	Front panel button lock setting
<i>#log</i>	System log
<i>#mute</i>	Port mute setting
<i>#network</i>	Network (IP address) related settings
<i>#password</i>	Password setting
<i>#portstatus</i>	Source/destination port status query
<i>#power</i>	Power sending settings
<i>#producttype</i>	Product type query
<i>#reboot</i>	Restarting the device
<i>#restart</i>	Restarting the device
<i>#rs232</i>	RS-232 related settings
<i>#rs-232</i>	RS-232 related settings
<i>#security</i>	Network security settings
<i>#serial</i>	RS-232 related settings
<i>#serialnumber</i>	Serial number query
<i>#signaltype</i>	HDMI/DVI signal type setting
<i>#status</i>	Status query
<i>#switch</i>	Crosspoint switch setting
<i>#systemlog</i>	System log
<i>#terminal</i>	Advanced view / Terminal window
<i>#testpattern</i>	Test pattern (no sync screen) settings
<i>#unlock</i>	Port unlock setting
<i>#unmute</i>	Port unmute setting
<i>#volume</i>	Volume (for analog audio) setting

## 11.11. Further Information

### Limited Warranty Statement

1. Lightware Visual Engineering PLC (Lightware) warrants to all trade and end user customers that any Lightware product purchased will be free from manufacturing defects in both material and workmanship for three (3) years from purchase unless stated otherwise below. The warranty period will begin on the latest possible date where proof of purchase/delivery can be provided by the customer. In the event that no proof can be provided (empty 'Date of purchase' field or a copy of invoice), the warranty period will begin from the point of delivery from Lightware.

1.1. 25G and MODEX product series will be subject to a seven (7) year warranty period under the same terms as outlined in this document.

1.2. If during the first three (3) months of purchase, the customer is unhappy with any aspect of a Lightware product, Lightware will accept a return for full credit.

1.3. Any product that fails in the first six (6) months of the warranty period will automatically be eligible for replacement and advanced replacement where available. Any replacements provided will be warranted for the remainder of the original unit's warranty period.

1.4. Product failures from six (6) months to the end of the warranty period will either be repaired or replaced at the discretion of Lightware. If Lightware chooses to replace the product, then the replacement will be warranted for the remainder of the original unit's warranty period.

2. The above-stated warranty and procedures will not apply to any product that has been:

2.1. Modified, repaired or altered by anyone other than a certified Lightware engineer unless expressly agreed beforehand.

2.2. Used in any application other than that for which it was intended.

2.3. Subjected to any mechanical or electrical abuse or accidental damage.

2.4. Any costs incurred for repair/replacement of goods that fall into the categories above (2.1., 2.2., 2.3.) will be borne by the customer at a pre-agreed figure.

3. All products to be returned to Lightware require a return material authorization number (RMA) prior to shipment, and this number must be clearly marked on the box. If an RMA number is not obtained or is not clearly marked on the box, Lightware will refuse the shipment.

3.1. The customer will be responsible for in-bound, and Lightware will be responsible for out-bound shipping costs.

3.2. Newly repaired or replaced products will be warranted to the end of the originally purchased product's warranty period.

### Document Revision History

Rev.	Release date	Changes	Editor
1.0	23-02-2022	Initial version	Laszlo Zsedenyi
:			
1.6	26-10-2022	Minor corrections for HTML export	Nikolett Keindl
1.7	09-12-2022	Release notes updated	Nikolett Keindl
1.8	23-02-2023	802.1x authentication sections added, basic authentication information updated, firmware update options added, specifications updated, REST API chapter updated, minor corrections	Nikolett Keindl
1.9	06-04-2023	LDC chapter updated, SSL certificate upload added, Update REST API section added	Nikolett Keindl
1.10	06-06-2023	Host name setting adjusted	Nikolett Keindl
1.11	25-01-2024	Specifications updated, Built-in Web chapter added, other minor changes	Nikolett Keindl
1.12	10-04-2024	Password authentication updated, minor corrections	Nikolett Keindl
1.13	24-07-2024	Minor corrections	Nikolett Keindl

### Contact Us

[sales@lightware.com](mailto:sales@lightware.com)

+36 1 255 3800

[support@lightware.com](mailto:support@lightware.com)

+36 1 255 3810

**Lightware Visual Engineering PLC.**

Peterdy 15, Budapest H-1071, Hungary

[www.lightware.com](http://www.lightware.com)

©2024 Lightware Visual Engineering. All rights reserved. All trademarks mentioned are the property of their respective owners. Specifications subject to change without notice.