 
FOCUS 100 | FOCUS 200 | FOCUS 210

## Setting up the Webcam


## FOR PLACEMENT ON A MONITOR

1. Place your webcam on a computer, laptop or monitor at a position or angle you desire.

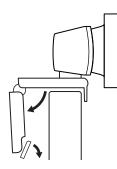

## FOR PLACEMENT ON A TRIPOD\*


1. Locate the M12 tripod thread on the bottom of the webcam.

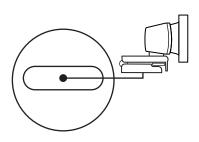


\*Tripod not included

#### CONNECTING THE WEBCAM

 
Plug the webcam into an available USB port on your computer

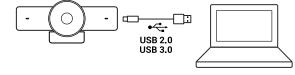


**2.** Adjust the webcam to make sure the foot on the universal mounting clip is flush with the back of your device.

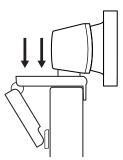


2. Secure the webcam on your tripod by twisting it into the M12 thread.

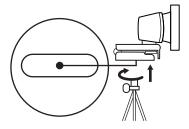

**3.** Manually adjust the webcam up/down to the best position to frame yourself.

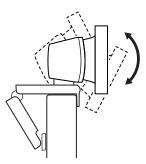


 Place your webcam with the tripod anywhere you desire to the best position to frame yourself.

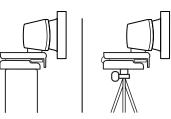

#### SUCCESSFUL CONNECTION

 The LED activity light will light when the webcam is in use by an application.

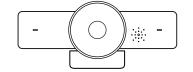

\*For the best video quality on FOCUS 200/210, it is recommended to use a USB 3.0 connection **Please Note:** The FOCUS Webcam must be installed at a height no greater than 2m/6.5ft

#### CAMERA SOFTWARE (ONLY APPLICABLE FOR FOCUS 200/210 MODELS)

The Focus 200/210 has its own control software that can be used to control ePTZ and other functions. To download the most up to date version of this software, visit wyrestorm.com

# Quickstart Guide


WyreSt**>**rm.

# **Software Device Setup**

## **Connecting To Zoom**

To connect the WyreStorm Focus Webcam to your Zoom software, first navigate to your settings pane which can be found by clicking the gear icon in the top right hand corner, then click on the Video tab. Here you can change the camera device by using the dropdown menus. Select WyreStorm Focus Webcam under the applicable options.

Θ	General	
	Video	
0	Audio	A Country by
•	Share Screen	
0	Chat	
	Background & Filters	
0	Recording	
8	Profile	Camera
0	Statistics	Focus Camera v
	Keyboard Shortcuts	🗌 Original ratio 🛛 V HD

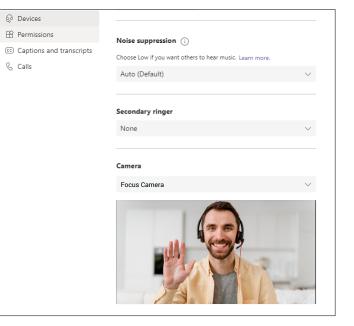

#### **Connecting To Microsoft Teams**

To connect the WyreStorm Focus Webcam to your Microsoft Teams software, first navigate to your settings pane which can be found by clicking on your display image in the top right hand corner, then click on the devices tab. Here you can change the camera device by using the dropdown menus. Select WyreStorm Focus Webcam under the applicable options.

## Specifications

	FOCUS 100	FOCUS 200	FOCUS 210		
Video					
Outputs	1x USB 2.0 Type A (Fixed Cable)	1x USB 3.0 Type C Female	1x USB 3.0 Type C Female		
Video Resolutions (Max)	1920x1080p @30Hz	1280x720p @90Hz 1920x1080p @60Hz 3840x2160p @30Hz	1280x720p @90Hz 1920x1080p @60Hz 3840x2160p @30Hz		
Output Video Encoding	MJPEG/YUV2/H.264   UVC 1.0	MJPEG/YUV2/H.265   UVC 1.3	MJPEG/YUV2/H.265   UVC 1.3		
Camera and Sensor					
Lens	F2.4 ~ F2.8	F2.8	F2.8		
Sensor	1/3.08°, CMOS, Effective Pixel: 2.0M	1/2.7°, CMOS, Effective Pixel: 8.0M	1/2.7°, CMOS, Effective Pixel: 8.0M		
Shutter	1/30s ~ 1/10000s	1/30s ~ 1/10000s	1/30s ~ 1/10000s		
White Balance	Auto	Auto	Auto		
Backlight Compensation	Supported	Supported	Supported		
DNR (Digital Noise Reduction)	Supported	Supported	Supported		
Auto-Framing	NA	NA	Supported*		
Viewing Angle	Diagonal: 100°	Diagonal: 106°	Diagonal: 120°		
Power					
Power Supply	USB 5V	USB 5V	USB 5V		
Power Consumption	1.2w	2w	2w		
Environmental					
Operating Temperature	32°F ~ 104°F (0°C ~ 40°C), 10% ~ 90%, non-condensing				
Storage Temperature	-4°F ~ 140°F (-20°C ~ +60°C), 10% ~ 90%, non-condensing				
Dimensions and Weight					
Length x Width x Height	140mm/5.51in x 33mm/1.29in x 45mm/1.77in				
Weight	0.03kg/0.06lbs				
Regulatory					
Safety and Emission	CE   FCC   RoHS   EAC   RCM				

\*Presenter Tracking feature will also be supported with future firmware update (Focus 210 model only)

Note: WyreStorm reserves the right to change product specification, appearance or dimensions of this product at any time without prior notice.

## Troubleshooting

#### No or Poor Quality Picture (snow or noisy image)

- Verify the WyreStorm Focus webcam has been selected in your meeting software's device settings
- Verify that all connections are not loose and are functioning properly
- Try using a different USB port on your computer (Focus 200 requires a USB 3.0 port to capture at 4K)
- Remove any intermediate devices such as USB hubs, extension cables or switchers

# In the Box

1x WyreStorm Focus Webcam 1x Privacy Cover 1x Quickstart Guide

1x USB-C to USB-A 3.0 Cable (Focus 200/210 only)



WyreStorm Technologies LLC warrants that its products to be free from defects in material and workmanship under normal use for a period of five (2) years from the date of purchase. Refer to the Product Warranty page on wyrestorm.com for more details on our limited product warranty.

