



KRAMER ELECTRONICS LTD.

# USER GUIDE

## **K-LAN Configurator**

---

P/N: 2900-300374 Rev 4

# Contents

<b>1</b>	<b>Configuring your Local Ethernet Port</b>	<b>1</b>
<b>2</b>	<b>Installing and Using Ethernet Configuration</b>	<b>5</b>
2.1	Downloading and Installing Ethernet Configuration	5
2.2	Using K-LAN Configurator to Modify the IP Parameters of a Device	6
2.3	Testing Communication with the Device	8

## Figures

Figure 1:	Local Area Connection Properties Window	1
Figure 2:	Internet Protocol Version 4 Properties Window	2
Figure 3:	Internet Protocol Version 6 Properties Window	3
Figure 4:	Internet Protocol Properties Window	4
Figure 5:	K-LAN Configurator Main Window	6
Figure 6:	Search Button	6
Figure 7:	Settings Popup	7
Figure 8:	Confirmation Message	8
Figure 9:	Successful Upload Message	8
Figure 10:	Successful Communication Message	9

# 1 Configuring your Local Ethernet Port

After connecting the device to the Ethernet port, configure your local Ethernet port as follows:

1. Click **Start > Control Panel > Network and Sharing Center**.
2. Click **Change Adapter Settings**.
3. Highlight the network adapter you want to use to connect to the device and click **Change settings of this connection**.

The Local Area Connection Properties window for the selected network adapter appears as shown in [Figure 1](#).

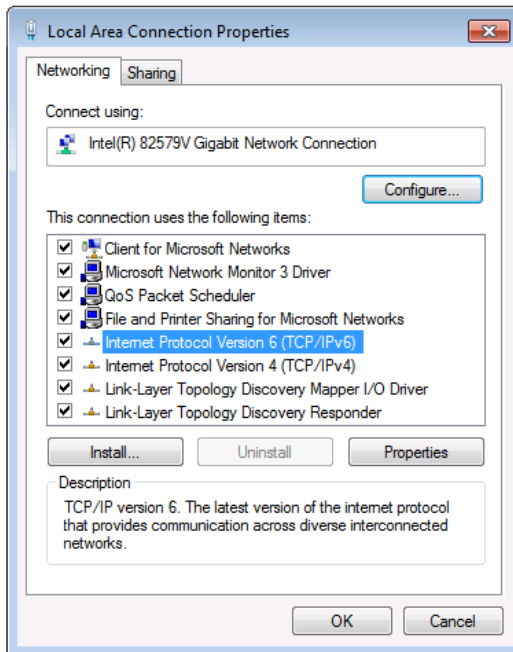


Figure 1: Local Area Connection Properties Window

4. Highlight either **Internet Protocol Version 6 (TCP/IPv6)** or **Internet Protocol Version 4 (TCP/IPv4)** depending on the requirements of your IT system.

5. Click **Properties**.

The Internet Protocol Properties window relevant to your IT system appears as shown in [Figure 2](#) or [Figure 3](#).

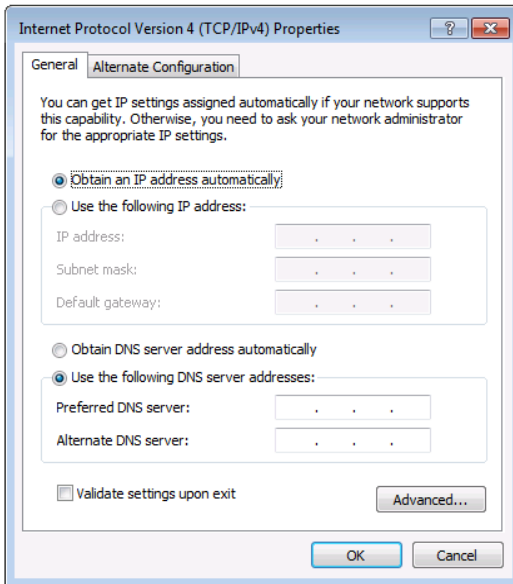


Figure 2: Internet Protocol Version 4 Properties Window

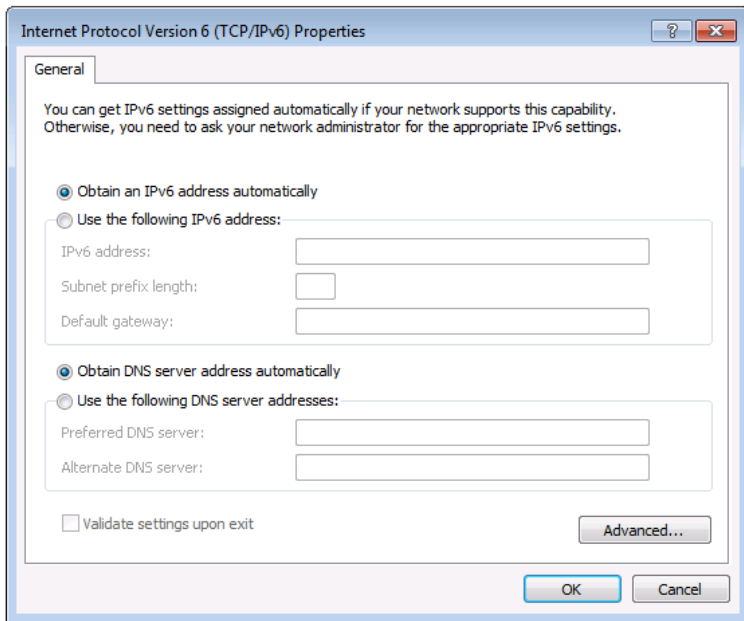


Figure 3: Internet Protocol Version 6 Properties Window

6. Select **Use the following IP Address** for static IP addressing and fill in the details as shown in [Figure 4](#).

For TCP/IPv4 you can use any IP address in the range 192.168.1.1 to 192.168.1.255 (excluding 192.168.1.39) that is provided by your IT department.

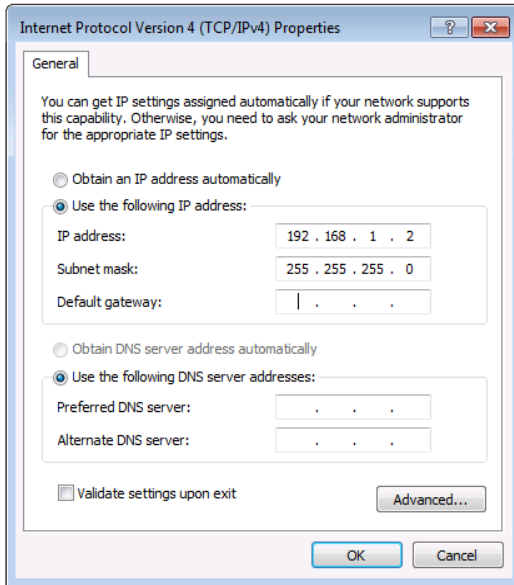


Figure 4: Internet Protocol Properties Window

7. Click **OK**.
8. Click **Close**.

---

## 2 Installing and Using K-LAN Configurator


To operate or configure your Kramer device via Ethernet, you need to do an initial configuration of the Ethernet port in the device. To do so, you need to download and install the **K-LAN Configurator** software and use it to configure the Ethernet port.

A device can be controlled by up to three Ethernet devices, (such as, PCs or remote controllers).

**Note:** The reply from the controlled device is sent only to the last connected Ethernet device, (PC or remote controller).

### 2.1 Downloading and Installing K-LAN Configurator

**To download and install K-LAN Configurator:**

1. Using your Web browser, go to <http://www.kramerelectronics.com> and download the installation software for **K-LAN Configurator** to your PC.
2. Using Windows Explorer, browse to the location to which you downloaded the software.
3. Run **Setup.exe** to begin installation of the software.
4. When the installation process asks whether you want to install the software, click **Install**.
5. When the installation is complete the main window is displayed as shown in [Figure 5](#).  
The program automatically searches the LAN to discover Kramer devices and displays their names and IP addresses. Press the Search icon  to search the LAN again.

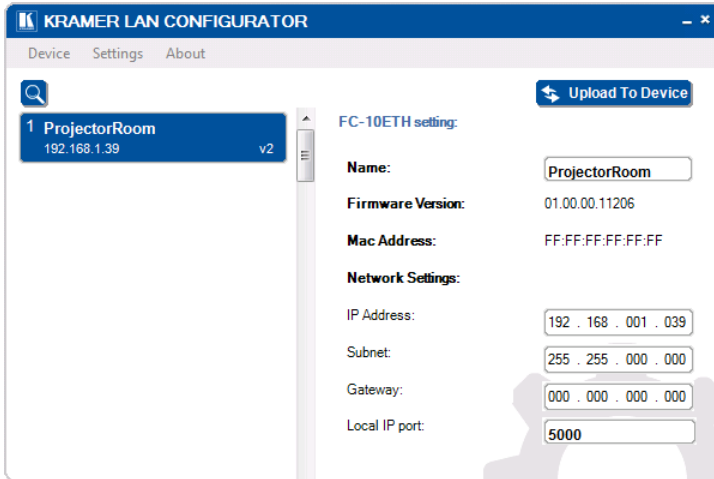


Figure 5: K-LAN Configurator Main Window

## 2.2 Using K-LAN Configurator to Modify the IP Parameters of a Device

To use K-LAN Configurator to modify the IP parameters of a device:

1. Click **Start > K-LAN Configurator**

The Search Button is displayed as shown in [Figure 6](#).

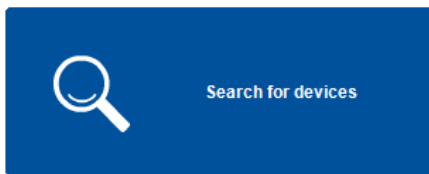


Figure 6: Search Button

2. Click the Search button for the software to search the network for Kramer devices.

The main window is displayed as shown in [Figure 5](#). If any devices that are connected to your PC have been automatically identified, they are displayed on the left hand side of the window.



**Note:** If you have more than one network interface in your PC, **K-LAN Configurator** may not always identify devices connected to the additional network interfaces.

3. If you have more than one network interface in your PC, click **Settings** on the menu bar.

The **Settings** popup is displayed as shown in [Figure 7](#).

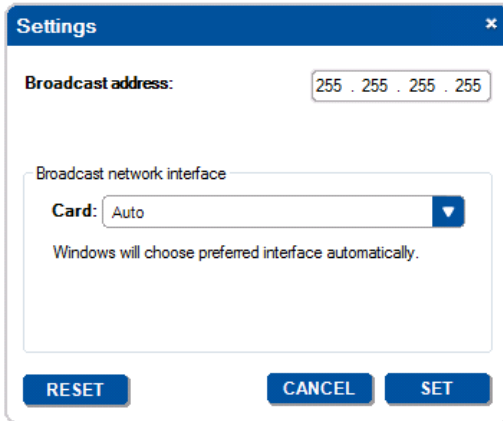



Figure 7: Settings Popup

4. Select the required network interface from the **Card:** drop-down list.
5. Click **Set**.
6. If your device is not recognized automatically, click the search icon .
7. Modify the fields as required: Name, IP address, Subnet, Gateway and Local IP port.

**Note:** The name is limited to 13 alpha-numeric characters.

8. Click **Upload to Device** .

The confirmation message is displayed as shown in [Figure 8](#) and the settings are uploaded to the device.

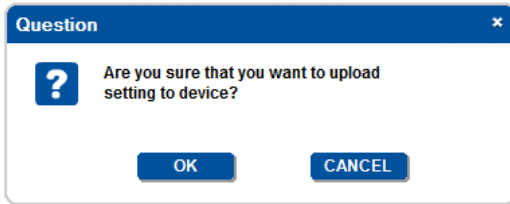


Figure 8: Confirmation Message

9. Click **OK**.

The Upload message is displayed as shown in [Figure 9](#).

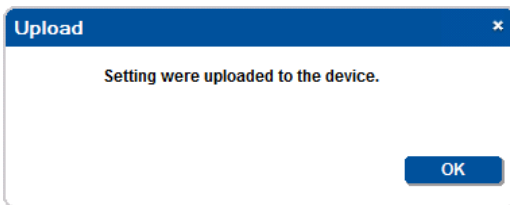


Figure 9: Successful Upload Message


10. Click **OK**.
11. Click the search icon to refresh the display.

You can now connect the device to your LAN and communicate with it via the Ethernet port.

## 2.3 Testing Communication with the Device

**To test the communication with the device:**

1. Click **Start > All Programs > Accessories > Command Prompt**
2. In the command prompt window, type **ping xxx.xxx.xxx.xxx** and Return, where xxx.xxx.xxx.xxx is the IP address you uploaded in [Section 2.2](#).  
If communication is successful, a reply similar to that shown in [Figure 10](#) is displayed.

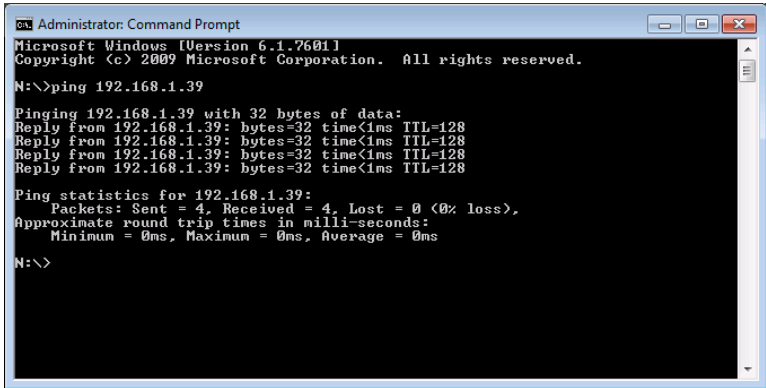

```
Administrator: Command Prompt
Microsoft Windows [Version 6.1.7601]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

N:\>ping 192.168.1.39

Pinging 192.168.1.39 with 32 bytes of data:
Reply from 192.168.1.39: bytes=32 time<1ms TTL=128
Reply from 192.168.1.39: bytes=32 time<1ms TTL=128
Reply from 192.168.1.39: bytes=32 time<1ms TTL=128
Reply from 192.168.1.39: bytes=32 time<1ms TTL=128

Ping statistics for 192.168.1.39:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms

N:\>
```

Figure 10: Successful Communication Message